



## Novant ASC Leland

9151 Ocean Highway E Leland, NC

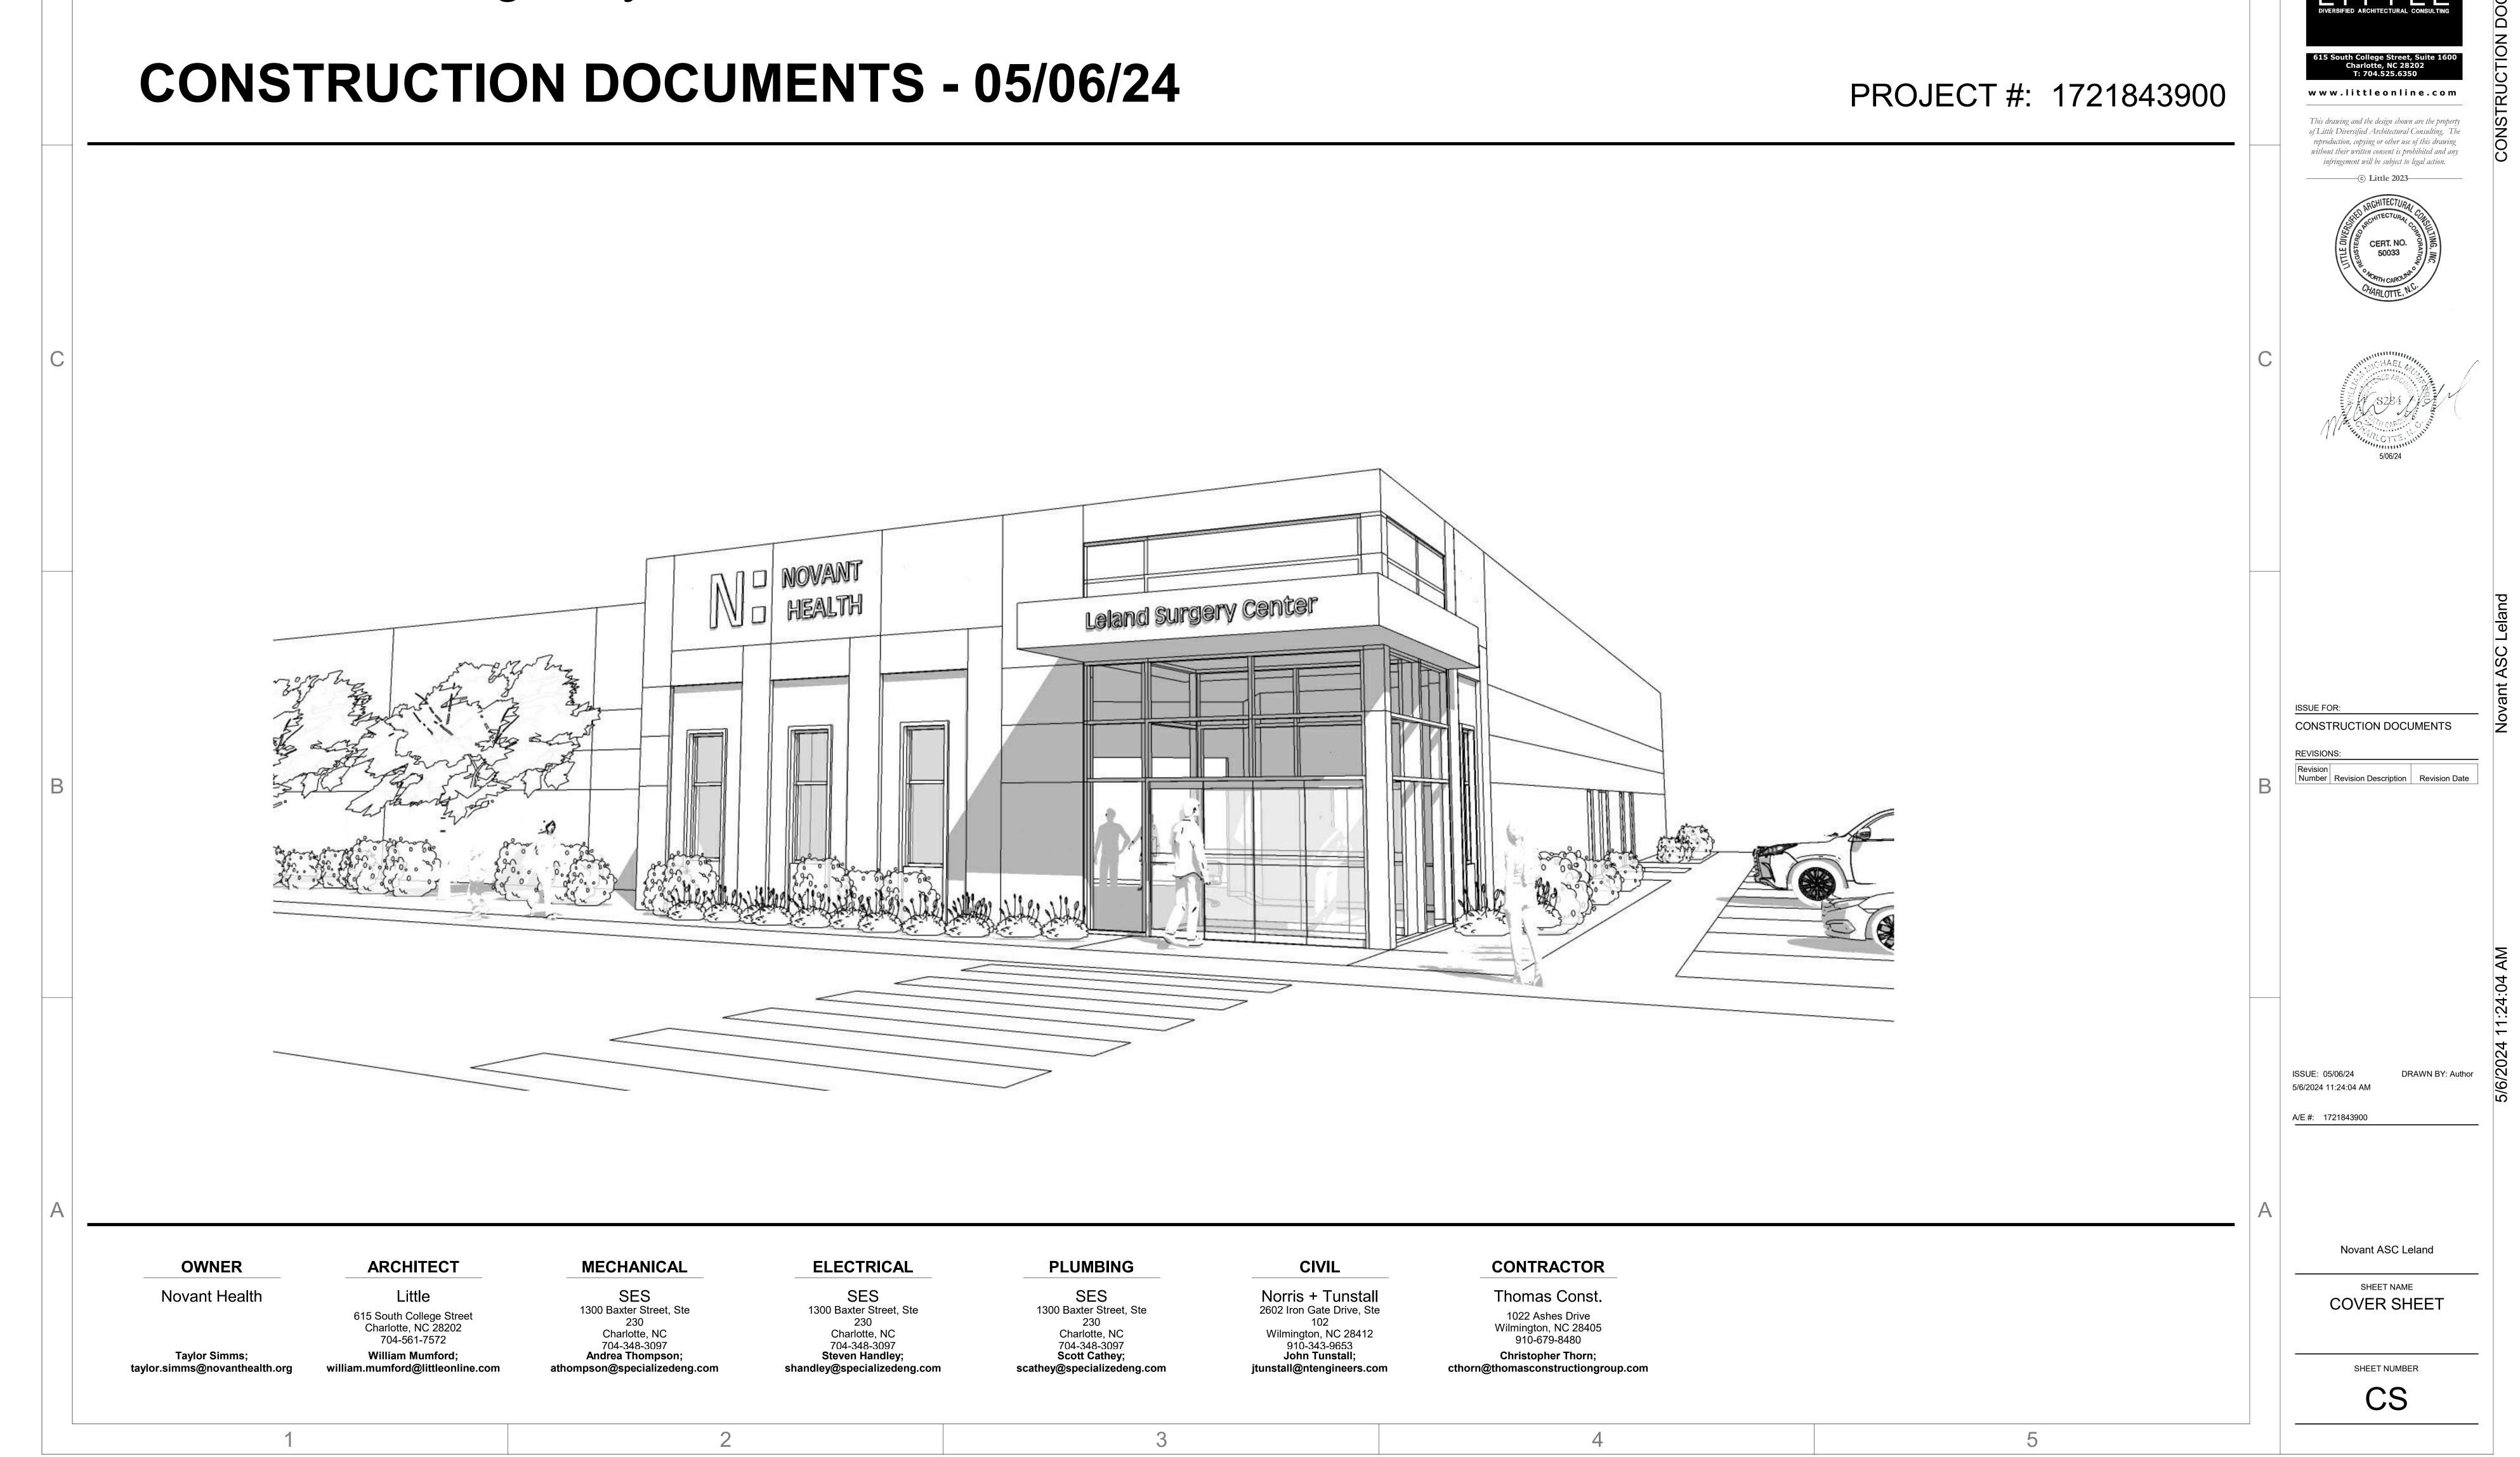

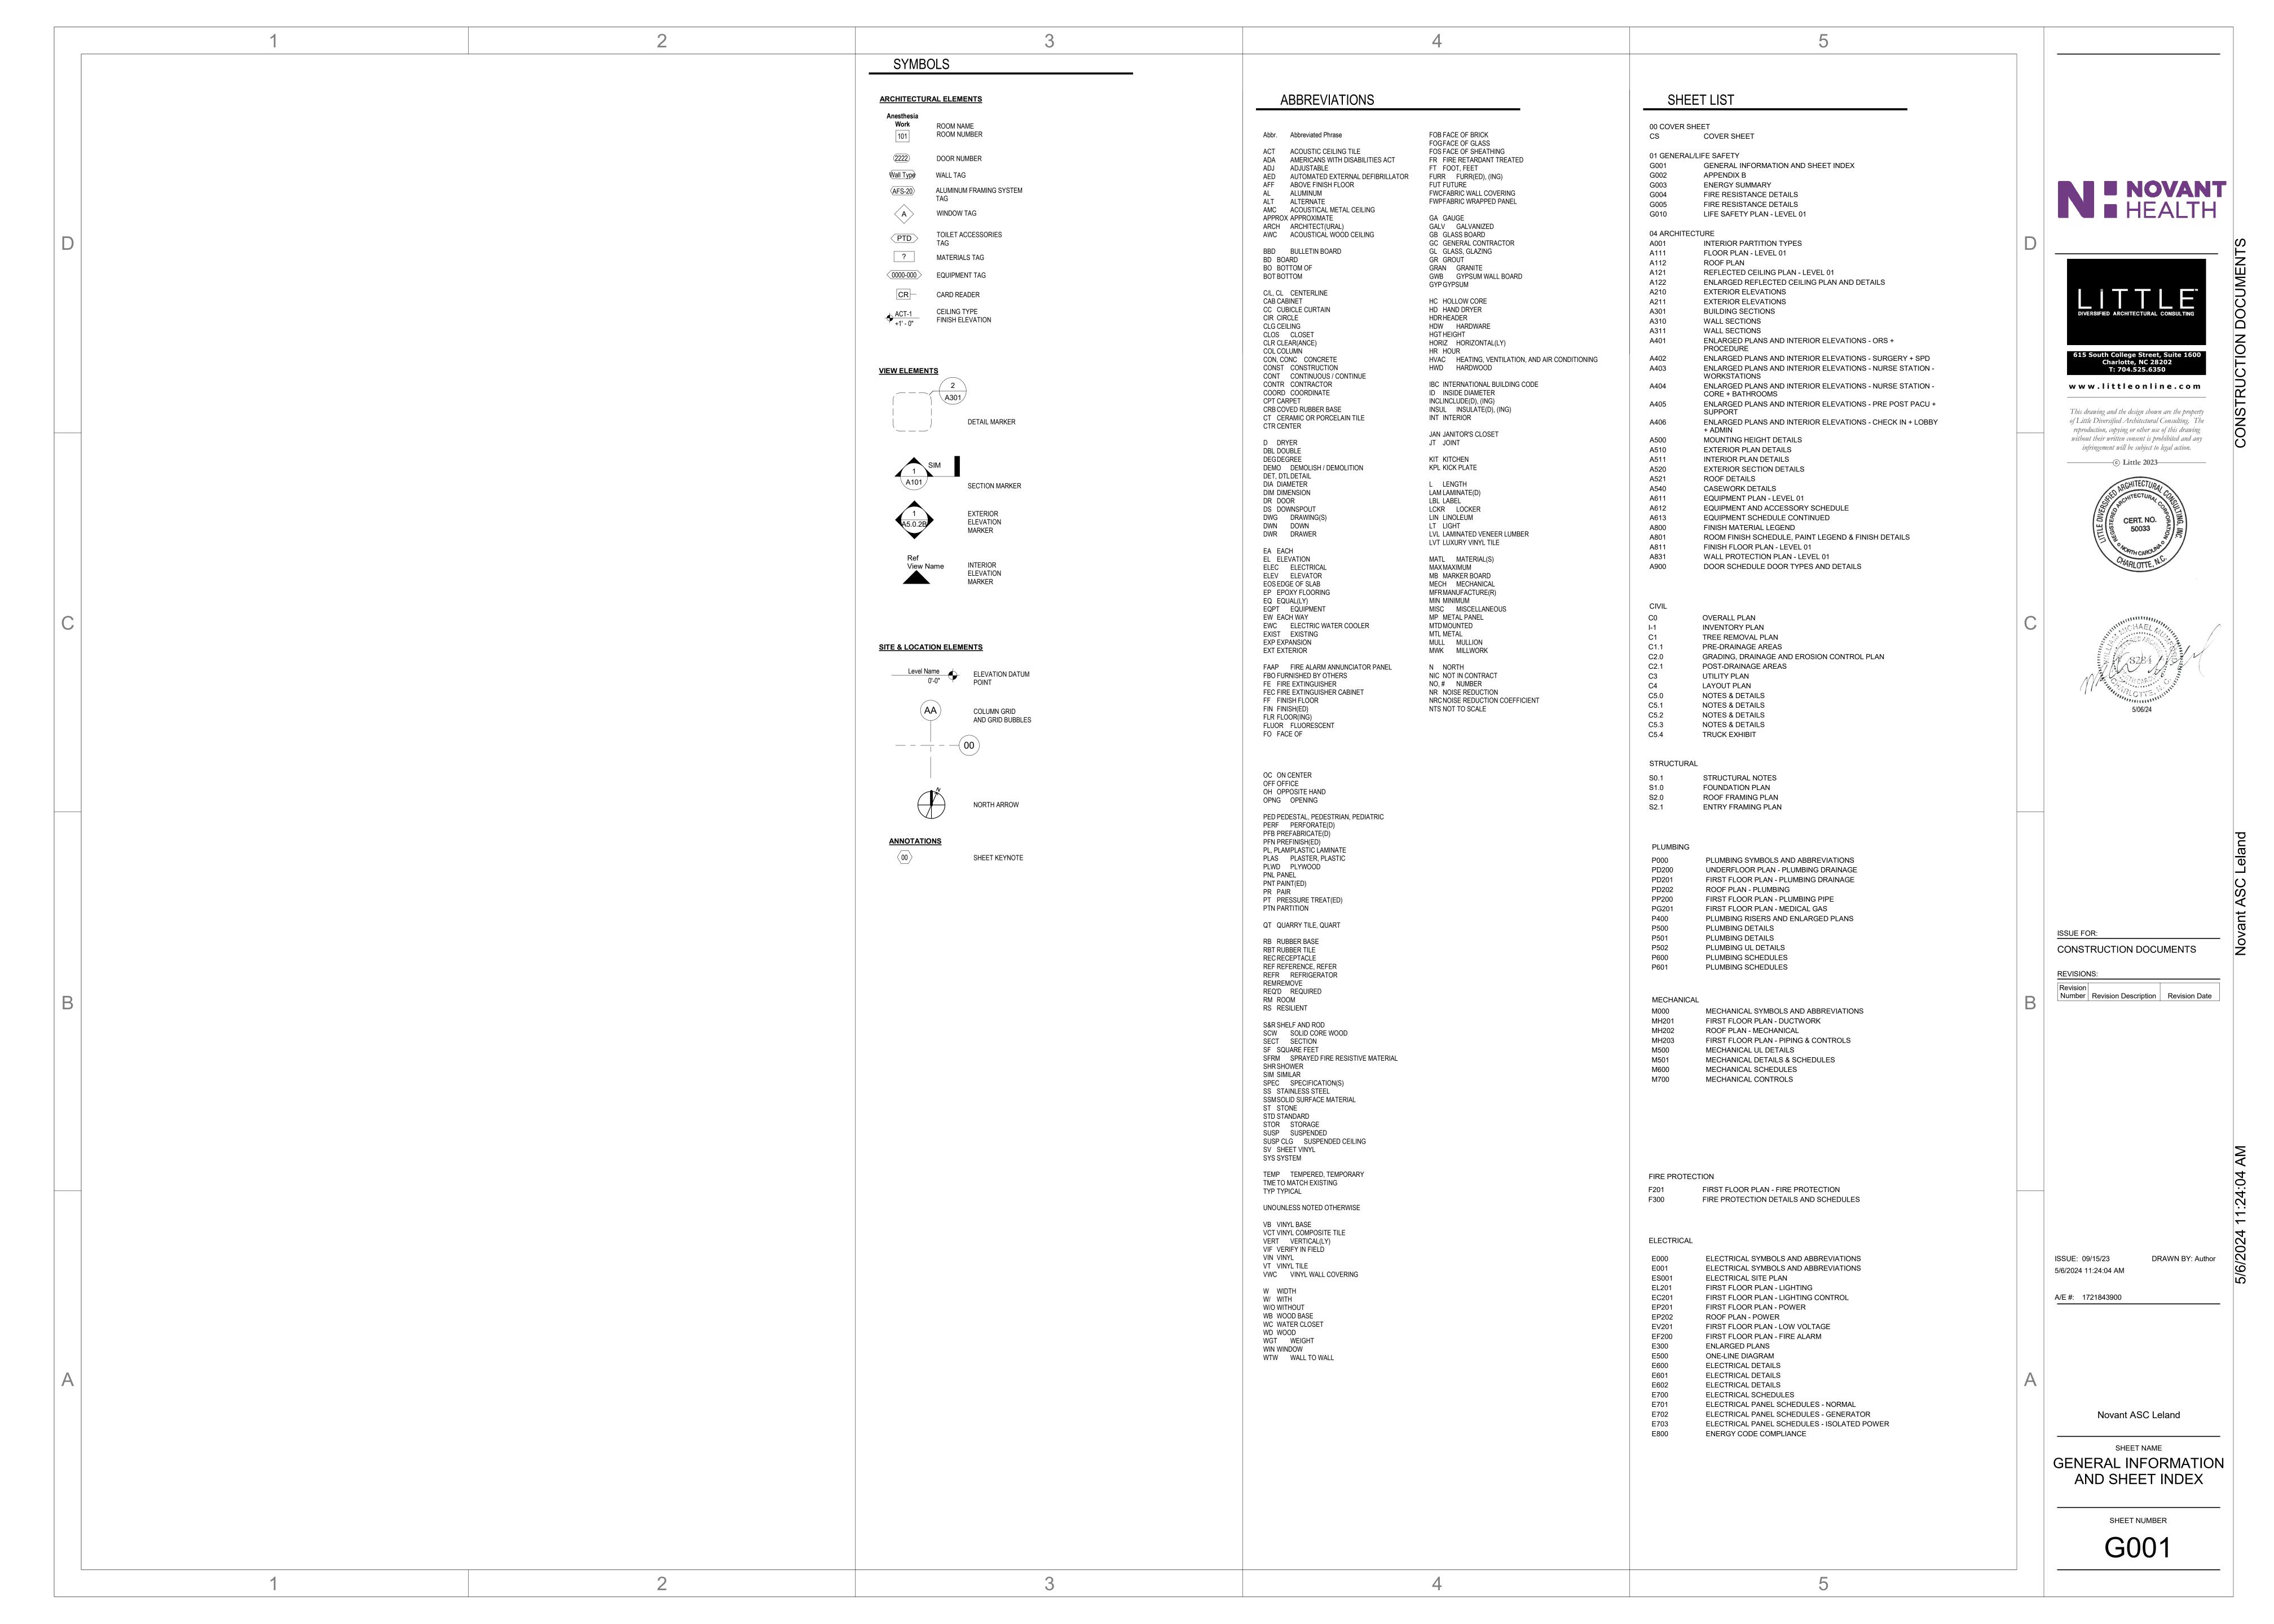

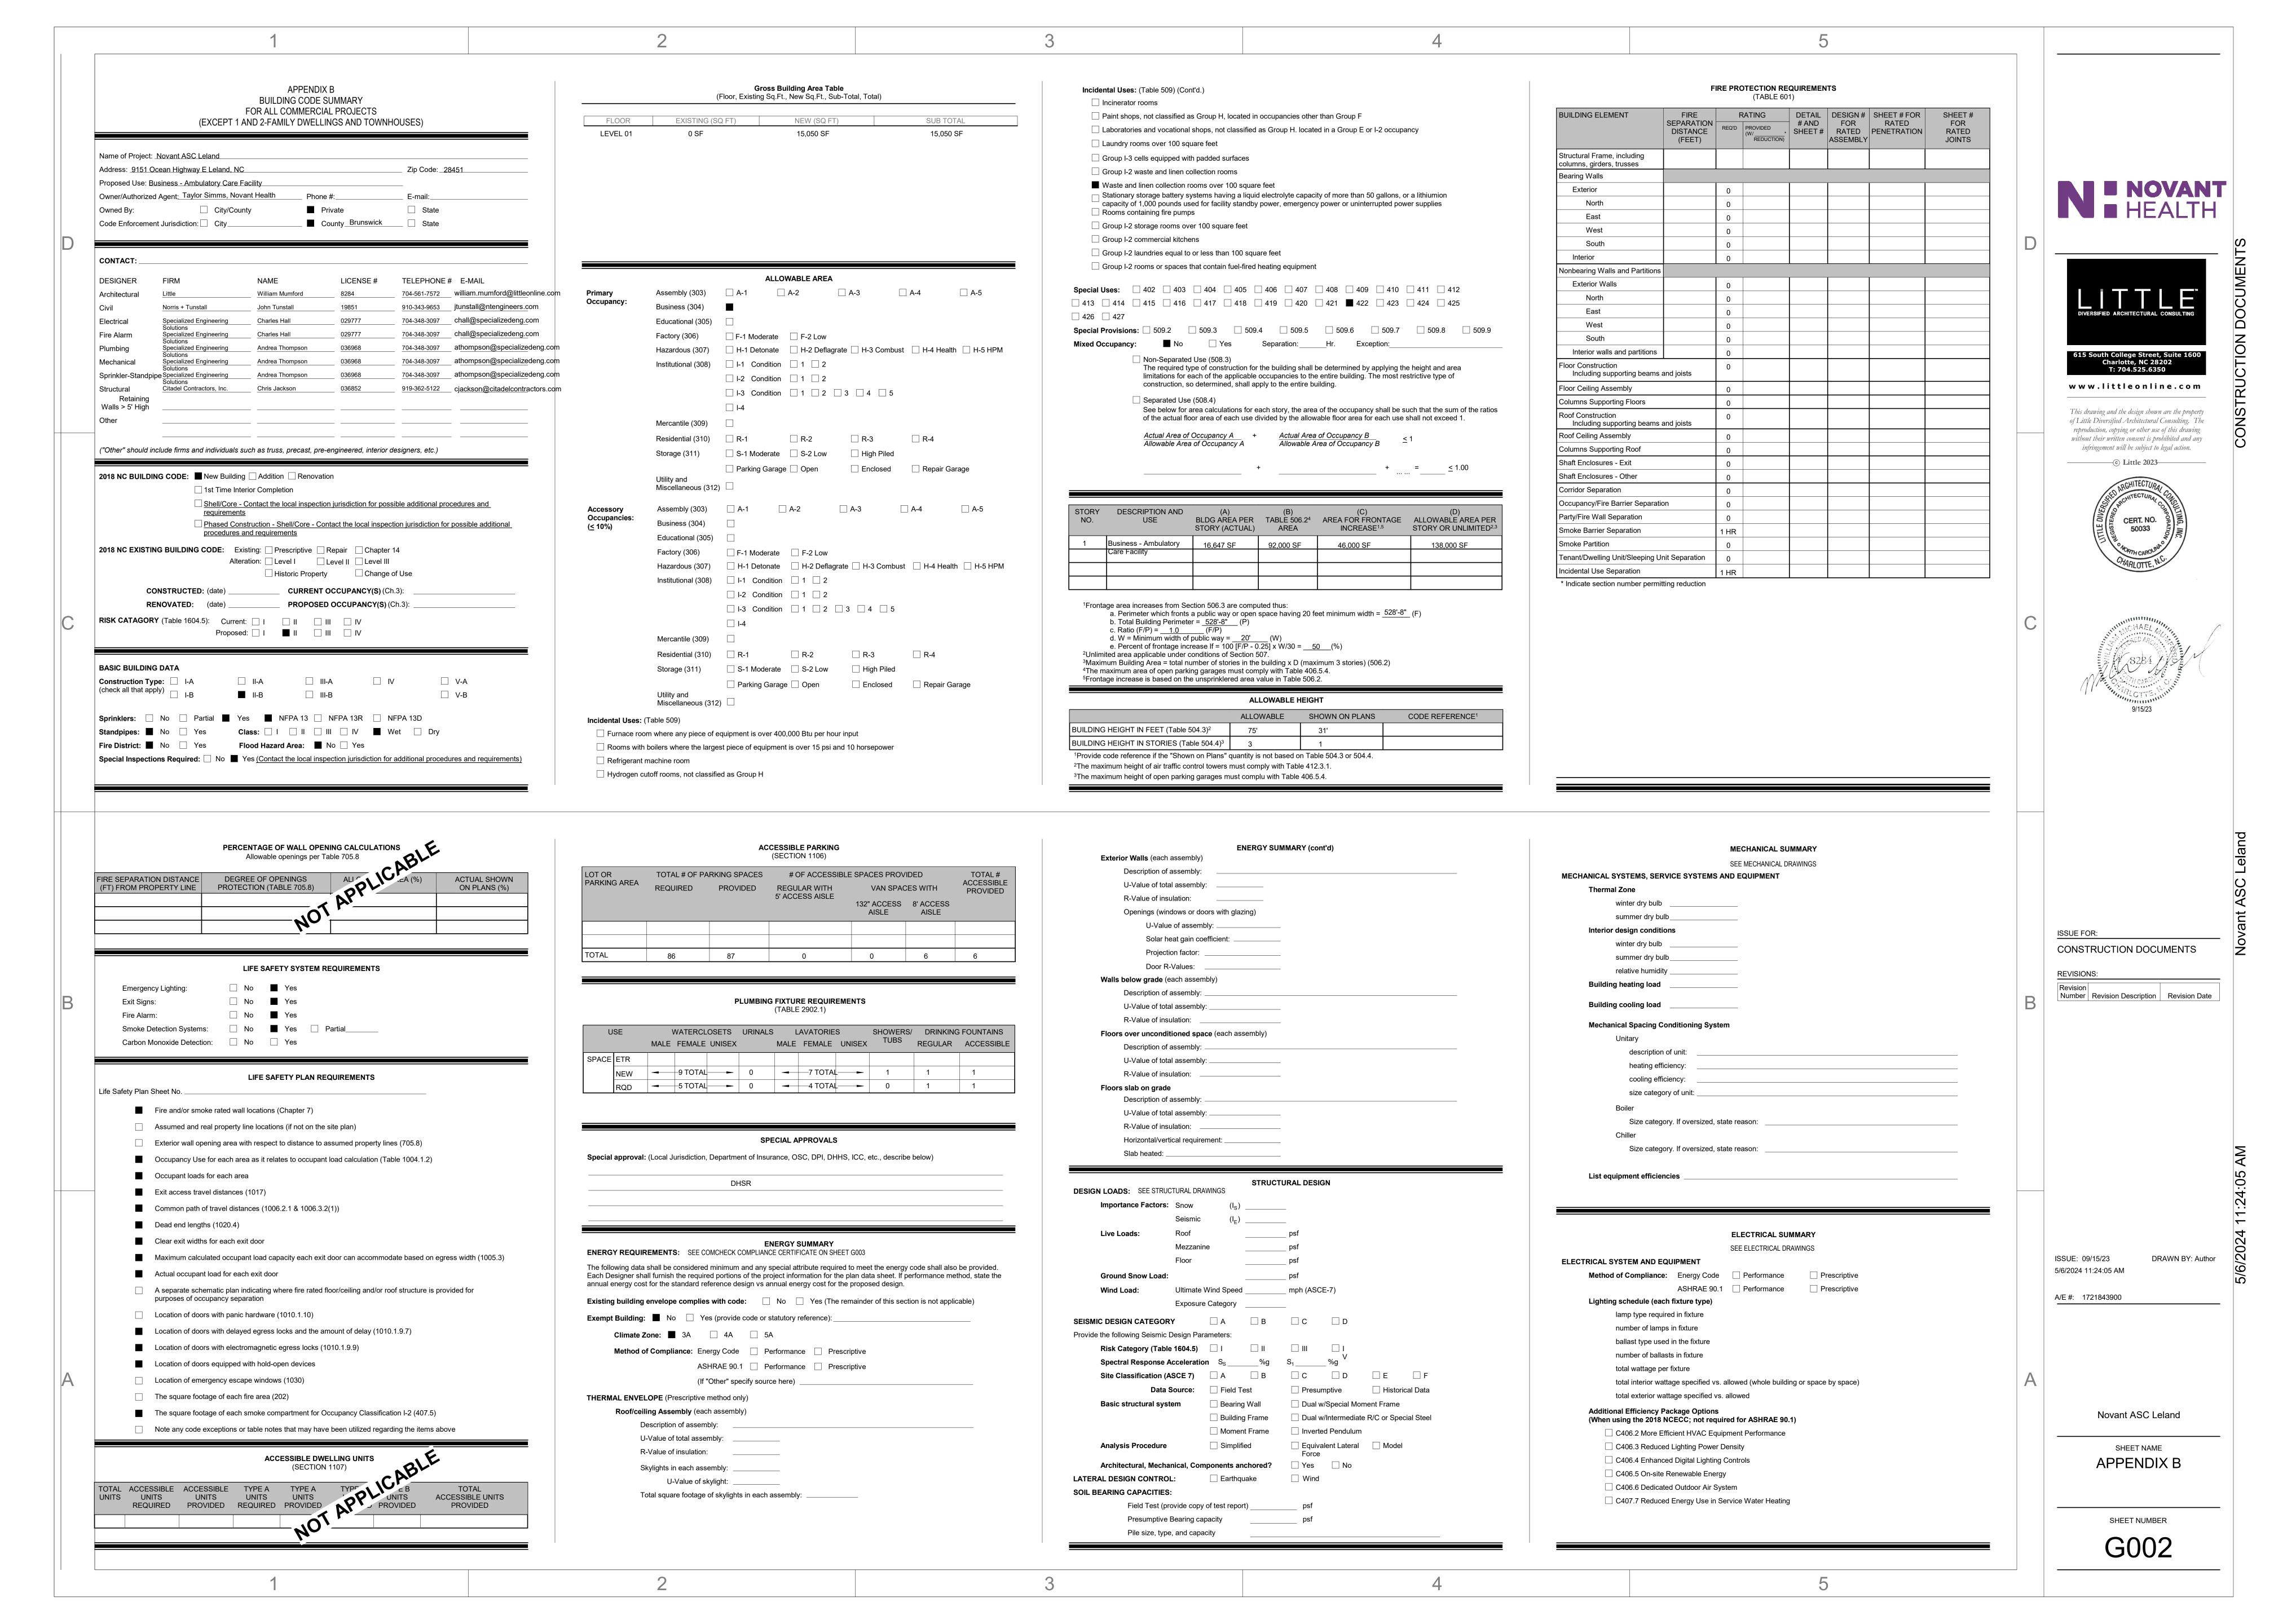

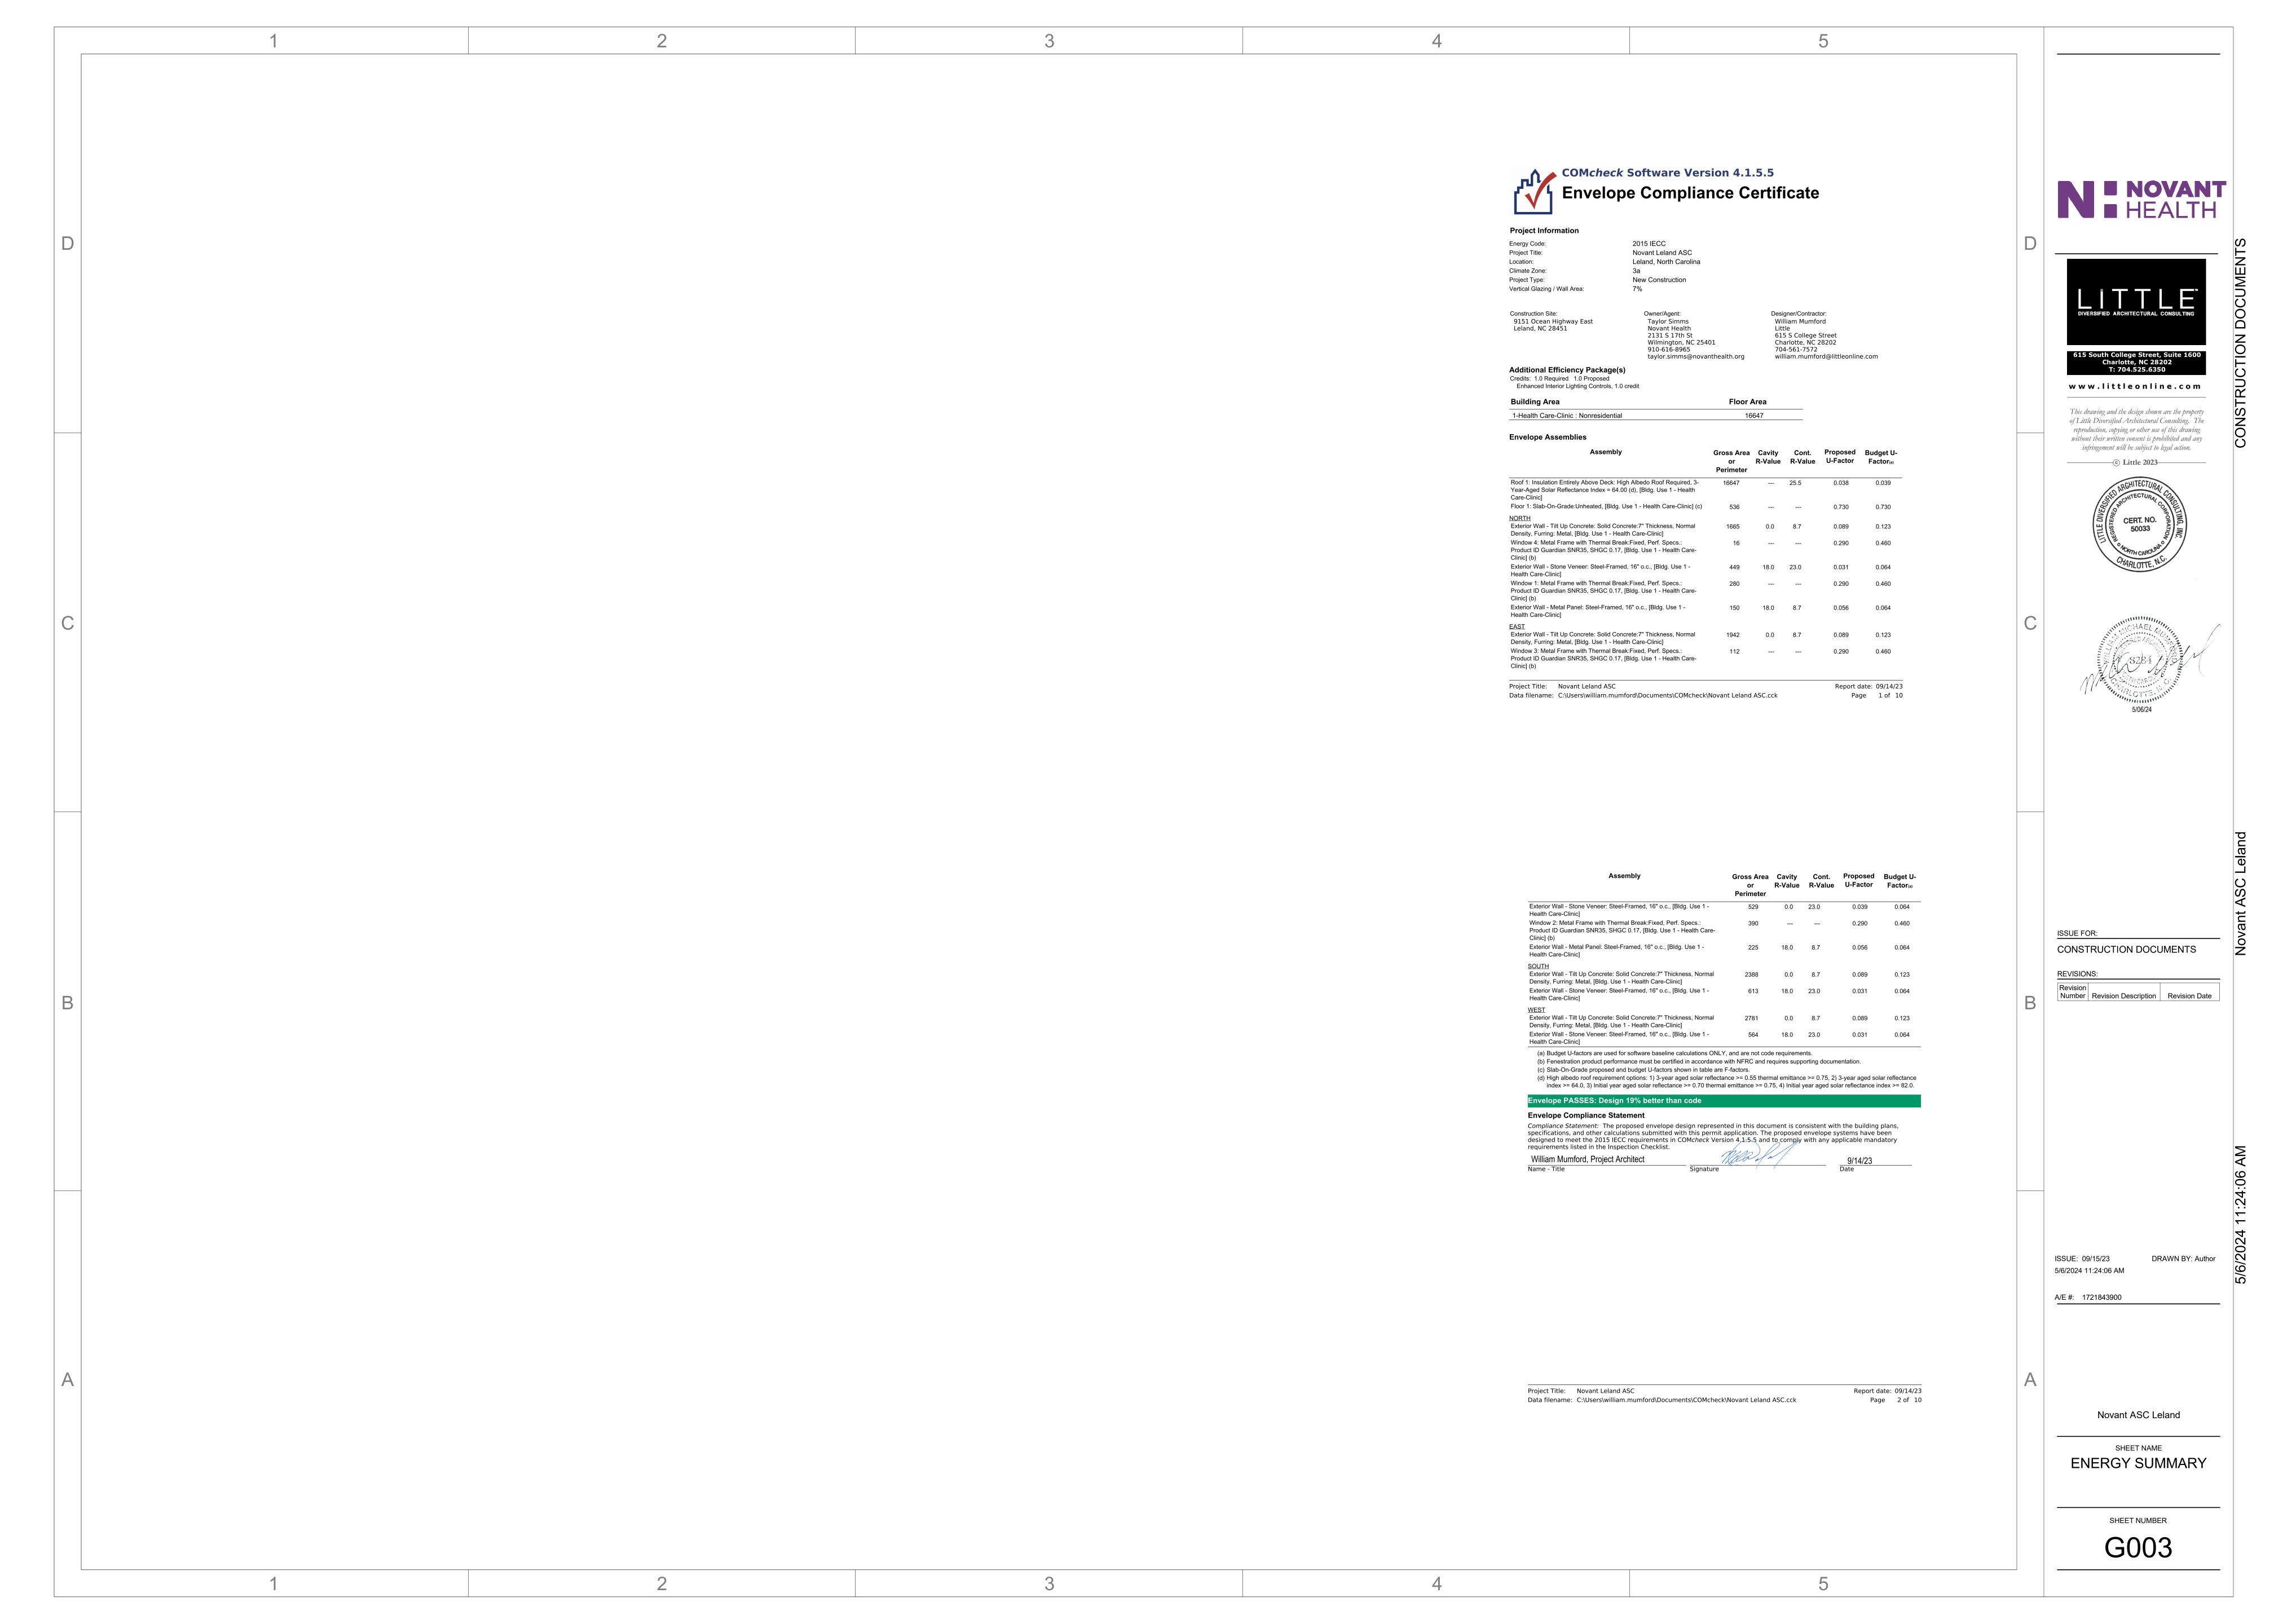

UL Product **iQ**®

BXUV.U465 - Fire-resistance Ratings - ANSI/UL 263

Design/System/Construction/Assembly Usage Disclaimer

- Authorities Having Jurisdiction should be consulted in all cases as to the particular requirements covering the installation and
- use of UL Certified products, equipment, system, devices, and materials. • Authorities Having Jurisdiction should be consulted before construction.
- Fire resistance assemblies and products are developed by the design submitter and have been investigated by UL for compliance with applicable requirements. The published information cannot always address every construction nuance
- encountered in the field.
- When field issues arise, it is recommended the first contact for assistance be the technical service staff provided by the product manufacturer noted for the design. Users of fire resistance assemblies are advised to consult the general Guide Information for each product category and each group of assemblies. The Guide Information includes specifics concerning alternate materials
- and alternate methods of construction. Only products which bear UL's Mark are considered Certified.

Fire-resistance Ratings - ANSI/UL 263

BXUV - Fire Resistance Ratings - ANSI/UL 263 Certified for United States BXUV7 - Fire Resistance Ratings - CAN/ULC-S101 Certified for Canada

See General Information for Fire-resistance Ratings - ANSI/UL 263 Certified for United States Design Criteria and Allowable Variances

See General Information for Fire Resistance Ratings - CAN/ULC-S101 Certified for Canada Design Criteria and Allowable Variances

Design No. **U465** 

May 25, 2022

Nonbearing Wall Rating — 1 HR. \* Indicates such products shall bear the UL or cUL Certification Mark for jurisdictions employing the UL or cUL Certification 

1. Floor and Ceiling Runners — (Not Shown) — Channel shaped runners, 3-5/8 in. deep (min), 1-1/4 in. legs, formed from min No. 25 MSG galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max.

1A. Framing Members\* — Floor and Ceiling Runners — (Not Shown) — As an alternate to Item 1 — Channel shaped, min 3-5/8 in. deep, attached to floor and ceiling with fasteners 24 in. OC. max. **ALLSTEEL & GYPSUM PRODUCTS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

CONSOLIDATED FABRICATORS CORP, BUILDING PRODUCTS DIV — Type SUPREME D24/30EQD and Type SUPREME D20

**QUAIL RUN BUILDING MATERIALS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

SCAFCO STEEL STUD MANUFACTURING CO — Type SUPREME D24/30EQD and Type SUPREME D20

**STEEL CONSTRUCTION SYSTEMS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

**TELLING INDUSTRIES L L C** — Type SUPREME D24/30EQD and Type SUPREME D20 **UNITED METAL PRODUCTS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

1B. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Item 1 — For use with Item 2B, proprietary channel shaped runners, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max. CALIFORNIA EXPANDED METAL PRODUCTS CO — Viper20™ Track

MARINO/WARE, DIV OF WARE INDUSTRIES INC — Viper20™ Track

IMPERIAL MANUFACTURING GROUP INC — Viper20™ Track

1C. Floor and Ceiling Runners — (Not Shown) — For use with Item 2C — Channel shaped, fabricated from min 20 MSG corrosionprotected or galv steel, min depth to accommodate stud size, with min 1 in. long legs, attached to floor and ceiling with fasteners

1D. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Items 1 through 1C — For use with Item 2D and 4G only, proprietary channel shaped runners, 1-1/4 in. deep by min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max. **CLARKDIETRICH BUILDING SYSTEMS** — CD ProTRAK

**DMFCWBS L L C** — ProTRAK

MBA METAL FRAMING — Protrak

RAM SALES L L C — Ram ProTRAK

TELLING INDUSTRIES L L C — TRUE-TRACK™

STEEL STRUCTURAL PRODUCTS L L C — Tri-S ProTRAK

1E. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Items 1 through 1D — For use with Item 2E and 4I only, proprietary channel shaped runners, 1-1/4 in. deep by min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max.

1F. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Items 1 through 1E — For use with Item 2, channel shaped runners, 1-1/4 in. deep by min 3-5/8 in. wide fabricated from min 25 MSG steel, attached to floor and ceiling with fasteners spaced 24 in. OC max. KIRII (HONG KONG) LTD — Type KIRII

1G. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Items 1 through 1F — For use with Item 2, channel shaped runners, 1-1/4 in. deep by min 3-5/8 in. wide, attached to floor and ceiling with fasteners spaced 24 in. OC max. STUDCO BUILDING SYSTEMS — CROCSTUD Track

1H. **Floor and Ceiling Runners** — (Not Shown) — Channel shaped, fabricated from min 0.02 in. galv steel, min width to accommodate stud size, with min 1 in. long legs, for use with studs specified below and fabricated from min 0.02 in. galv steel or thicker, attached to floor and ceiling with fasteners spaced max 24 in. OC. MARINO/WARE, DIV OF WARE INDUSTRIES INC — Viper20™ Track VT100

IMPERIAL MANUFACTURING GROUP INC — Viper20™ Track VT100

11. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Item 1 — For use with Item 2H, proprietary channel shaped runners, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel, attached to floor and ceiling with MARINO/WARE, DIV OF WARE INDUSTRIES INC — Viper20™ Track

1J. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Items 1 — For use with Item 2 L, proprietary channel shaped runners, 1-1/4 in. deep by min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max. **RESCUE METAL FRAMING, L L C** — AlphaTRAK

1K. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Item 1 — For use with Item 2M, proprietary channel shaped runners, 1-1/4 in. wide by min 3-5/8 in. deep, fabricated from min 25 MSG (0.018 in. min. bare metal thickness), attached to floor and ceiling with fasteners spaced 24 in. OC max. CALIFORNIA EXPANDED METAL PRODUCTS CO — Viper X Track

1L. Framing Members\* — Floor and Ceiling Runners — Not Shown — In lieu of Item 1 — For use with Item 2N, proprietary channel shaped runners, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel, attached to floor and ceiling with fasteners spaced 24 in. OC max. CRACO MFG INC — SmartTrack20™

2. Steel Studs — Channel shaped, 3-5/8 in. deep (min), formed from min No. 25 MSG galv steel spaced 24 in. OC max. Studs to be cut 3/4 in. less than assembly height.

2A. Framing Members\* — Steel Studs — As an alternate to Item 2 — Channel shaped studs, min 3-5/8 in. deep, spaced a max of 24 in. OC. Studs to be cut 3/4 in. less than assembly height.

ALLSTEEL & GYPSUM PRODUCTS INC — Type SUPREME D24/30EQD and Type SUPREME D20 CONSOLIDATED FABRICATORS CORP, BUILDING PRODUCTS DIV — Type SUPREME D24/30EQD and Type SUPREME D20

**QUAIL RUN BUILDING MATERIALS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

SCAFCO STEEL STUD MANUFACTURING CO — Type SUPREME D24/30EQD and Type SUPREME D20 **STEEL CONSTRUCTION SYSTEMS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

**TELLING INDUSTRIES L L C** — Type SUPREME D24/30EQD and Type SUPREME D20

**UNITED METAL PRODUCTS INC** — Type SUPREME D24/30EQD and Type SUPREME D20

2B. Framing Members\* — Steel Studs — Not Shown — In lieu of Item 2 — For use with Item 1B, proprietary channel shaped steel studs, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel. Studs cut 3/4 in. less in length than assembly

**CRACO MFG INC** — SmartStud20™

MARINO/WARE, DIV OF WARE INDUSTRIES INC — Viper20™

IMPERIAL MANUFACTURING GROUP INC — Viper20™

CALIFORNIA EXPANDED METAL PRODUCTS CO — Viper20™

2C. Steel Studs — (As an alternate to Item 2, For use with Item 1C) — Channel shaped, fabricated from min 20 MSG corrosionprotected or galv steel, 3-1/2 in. min depth, spaced a max of 16 in. OC. Studs friction-fit into floor and ceiling runners. Studs to be cut

5/8 to 3/4 in. less than assembly height. See materials in Item(s) 4 that require Item 2C studs.

2D. **Framing Members\*** — **Steel Studs** — As an alternate to Items 2 through 2C — For use with Item 1D and 4G only, channel shaped studs, min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, spaced a max of 24 in. OC. Studs to be cut 1/2 in. less than assembly height.

**CLARKDIETRICH BUILDING SYSTEMS** — CD ProSTUD

**DMFCWBS L L C** — ProSTUD MBA METAL FRAMING — ProSTUD

**RAM SALES L L C** — Ram ProSTUD

STEEL STRUCTURAL PRODUCTS L L C — Tri-S ProSTUD

2E. **Framing Members\*** — **Steel Studs** — As an alternate to Items 2 through 2D — For use with Item 1E and 4I only, channel shaped studs, min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, spaced a max of 24 in. OC. Studs to be cut 1/2 in. less than assembly height. TELLING INDUSTRIES L L C — TRUE-STUD™

2F. Framing Members\* — Steel Studs — As an alternate to Items 2 through 2E — For use with Item 1F, channel shaped studs, min 3-5/8 in. wide fabricated from min 25 MSG steel, spaced a max of 24 in. OC. Studs to be cut 1/2 in. less than assembly height. KIRII (HONG KONG) LTD — Type KIRII

2G. Framing Members\* — Steel Studs — Not Shown — In lieu of Item 2 through 2F — For use with Item 1G. Proprietary channel shaped studs, minimum 3-5/8 in. wide, Studs to be cut 1/2 in. less than the assembly height. STUDCO BUILDING SYSTEMS — CROCSTUD

2H. Framing Members\* — Steel Studs — Not Shown — In lieu of Item 2 — For use with Item 1I, proprietary channel shaped steel studs, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel. Studs cut 3/4 in. less in length than assembly MARINO/WARE, DIV OF WARE INDUSTRIES INC — Viper20™

21. Framing Members\* — Steel Studs — In lieu of Item 2 — For use with Item 1, channel shaped studs, fabricated from min 25 MSG corrosion-protected steel, 3-5/8 in. deep (min), spaced 24 in. OC max. Studs to be cut 3/4 in. less than assembly height. EB METAL INC — NITROSTUD

2J. Framing Members\* — Steel Studs — In lieu of Item 2 — For use with Item 1, channel shaped studs, fabricated from min 25 MSG corrosion-protected steel, 3-5/8 in. deep (min), spaced 24 in. OC max. Studs to be cut 3/4 in. less than assembly height. **OLMAR SUPPLY INC** — PRIMESTUD

2K. Framing Members\* — Steel Studs — As an alternate to Item 2 — For use with Item 1B (3-5/8 in. wide track), channel shaped studs, fabricated from min 25 MSG corrosion-protected steel, 1-1/4 in. wide by 3-5/8 in. deep, spaced a max of 24 in. OC. Studs to be cut 3/8 to 3/4 in. less than assembly height. MARINO/WARE, DIV OF WARE INDUSTRIES INC — StudRite™

2L. Framing Members\* — Steel Studs — As an alternate to Items 2 — For use with Item 1J, channel shaped studs, min 3-5/8 in. wide fabricated from min 0.018 in. thick galv steel, spaced a max of 24 in. OC. Studs to be cut 3/4 in. less than assembly height. **RESCUE METAL FRAMING, L L C** — AlphaSTUD

2M. Framing Members\* — Steel Studs — Not Shown — In lieu of Item 2 — For use with Item 1K, proprietary channel shaped steel studs, min 1-1/4 in. wide by min 3-5/8 in. deep, fabricated from min 25 MSG (0.018 in. min. bare metal thickness). Studs cut 3/4 in. less in length than assembly height.

2N. Framing Members\* — Steel Studs — Not Shown — In lieu of Item 2 — For use with Item 1L, proprietary channel shaped steel studs, 1-1/4 in. wide by min 3-5/8 in. deep fabricated from min 0.020 in. thick galv steel. Studs cut 3/4 in. less in length than assembly **CRACO MFG INC** — SmartStud20™

3. Batts and Blankets\* — (Optional) — Mineral wool or glass fiber batts partially or completely filling stud cavity. See Batts and Blankets (BZJZ) category for names of Classified companies.

**ROCKWOOL** — Type AFB, min. density 1.69 pcf / 27.0 kg/m<sup>3</sup>

**ROCKWOOL MALAYSIA SDN BHD** — Type Acoustical Fire Batts

CALIFORNIA EXPANDED METAL PRODUCTS CO — Viper X

material. The fiber is applied with water to completely fill the enclosed cavity in accordance with the application instructions supplied with the product with a nominal dry density of 2.7 lb/ft<sup>3</sup>. Alternate Application Method: The fiber is applied without water or adhesive at a nominal dry density of 3.5 lb/ft<sup>3</sup>, in accordance with the application instructions supplied with the product. U S GREENFIBER L L C — INS735, INS745, INS750LD for use with wet or dry application. INS765LD and INS773LD are to be used for dry

3A. Fiber, Sprayed\* — As an alternate to Batts and Blankets (Item 3) — (100% Borate Formulation) — Spray applied cellulose

3B. **Fiber, Sprayed\*** — As an alternate to Batts and Blankets (Item 3) — Spray applied cellulose insulation material. The fiber is applied with water to interior surfaces in accordance with the application instructions supplied with the product. Applied to completely fill the enclosed cavity. Minimum dry density of 4.3 pounds per cubic ft. **NU-WOOL CO INC** — Cellulose Insulation

3C. **Fiber, Sprayed\*** — As an alternate to Batts and Blankets (Item 3) — Spray applied cellulose fiber. The fiber is applied with water to completely fill the enclosed cavity in accordance with the application instructions supplied with the product. The minimum dry density shall be 4.30 lbs/ft<sup>3</sup>.

INTERNATIONAL CELLULOSE CORP — Celbar-RL

3D. Batts and Blankets\* — For use with Item 8. Nom 3 in. thick, minimum 3.4 pcf mineral wool batts, friction fit between the studs and floor and ceiling runners. See Batts and Blankets (BZJZ) category for names of manufacturers.

3E. Batts and Blankets\* — For use with Item 4R and 4S. Placed in stud cavities, any min. 3-1/2 in. thick glass fiber insulation bearing the UL Classification Marking as to Surface Burning Characteristics and/or Fire Resistance. See **Batts and Blankets** (BKNV or BZJZ) Categories for names of Classified companies.

3F. **Fiber, Sprayed\*** — As an alternate to Batts and Blankets (Item 3) — Spray-applied cellulose material. The fiber is applied with water to completely fill the enclosed cavity in accordance with the application instructions supplied with the product. To facilitate the installation of the material, any thin, woven or non-woven netting may be attached by any means possible to the outer face the studs. The material shall reach equilibrium moisture content before the installation of materials on either face of the studs. The minimum dry density shall be 5.79 lbs/ft<sup>3</sup>. **APPLEGATE HOLDINGS L L C** — Applegate Advanced Stabilized Cellulose Insulation

3G. Foamed Plastic\* — As an alternate to Batts and Blankets (Item 3), for use with Item 4U — Spray applied, foamed plastic insulation, at any thickness from partial fill to completely filling stud cavity. When foamed plastic is used, minimum stud depth shall be 3-1/2 in. CARLISLE SPRAY FOAM INSULATION — Types SealTite Pro Closed Cell (CC), SealTite Pro Open Cell (OC), SealTite Pro OCX, SealTite Pro No Trim 21, SealTite Pro One Zero, Foamsulate Closed Cell, Foamsulate OCX, Foamsulate 70, and Foamsulate HFO.

4. **Gypsum Board\*** — 5/8 in. thick, 4 ft wide, attached to steel studs and floor and ceiling track with 1 in. long, Type S steel screws spaced 8 in. OC. along edges of board and 12 in. OC in the field of the board. Joints oriented vertically and staggered on opposite sides of the assembly. When Steel Framing Members\* (Item 6 or any alternate clips) are used, gypsum board is screw attached to furring channels with 1 in. long, Type S steel screws spaced 12 in. OC.

**AMERICAN GYPSUM CO** — Types AG-C, AGX-1, M-Glass, LightRoc

**BEIJING NEW BUILDING MATERIALS PUBLIC LTD CO** — Type DBX-1

**CABOT MANUFACTURING ULC** — Type X, 5/8 Type X, Type Blueglass Exterior Sheathing

CGC INC — Types AR, C, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, ULIX, USGX, WRC or WRX (Joint tape and compound, Item 5, optional for use with

**CERTAINTEED GYPSUM INC** — Types EGRG, GlasRoc, Type X-1, Type C, 5/8" Easi-Lite Type X, Easi-Lite Type X-2

**CERTAINTEED GYPSUM INC** — Types LGFC2A, LGFC6A, LGFC-C/A, LGFC-WD, LGLLX

GEORGIA-PACIFIC GYPSUM L L C — Types 5, 6, 9, C, DAP, DD, DA, DAPC, DGG, DS, GPFS6, LS, Type X, Veneer Plaster Base - Type X, Water Rated -Type X, Sheathing - Type X, Soffit - Type X, TG-C, GreenGlass Type X, Type X ComfortGuard Sound Deadening Gypsum Board, Type LWX, Veneer Plaster Base-Type LWX, Water Rated-Type LWX, Sheathing Type-LWX, Soffit-Type LWX, Type DGLW, Water Rated-Type DGLW, Sheathing Type-DGLW, Soffit-Type DGLW, Type LW2X, Veneer Plaster Base - Type LW2X, Water Rated - Type LW2X, Sheathing - Type LW2X, Soffit - Type LW2X, Type DGL2W, Water Rated - Type DGL2W, Sheathing - Type DGL2W

NATIONAL GYPSUM CO — Types eXP-C, FSK, FSK-C, FSK-G, FSMR-C, FSW-C, FSW-G, FSW, FSW-3, FSW-5, FSW-6, FSW-8, FSL, RSX. NATIONAL GYPSUM CO — Riyadh, Saudi Arabia — Type FR, or WR

PABCO BUILDING PRODUCTS L L C, DBA PABCO GYPSUM — Types PG-C, PG-9, PG-11, PGS-WRS, PGI

DuraLine ACTIV'Air, Gyproc DuraLine MR ACTIV'Air, Gyproc DuraLine M2TECH ACTIV'Air

PANEL REY S A — Types GREX, GRIX, PRC, PRC2, PRX, RHX, MDX, ETX, PRX2 SAINT-GOBAIN GYPROC MIDDLE EAST FZE — Type Gyproc FireStop, Gyproc FireStop MR, Gyproc FireStop M2TECH, Gyproc FireStop ACTIV'Air, Gyproc FireStop MR ACTIV'Air, Gyproc FireStop M2TECH ACTIV'Air, Gyproc DuraLine, Gyproc DuraLine MR, Gyproc DuraLine M2TECH, Gyproc

SIAM GYPSUM INDUSTRY (SARABURI) CO LTD — Type EX-1

THAI GYPSUM PRODUCTS PCL — Type X, Type C

UNITED STATES GYPSUM CO — Type AR, C, FRX-G, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, ULIX, USGX, WRC, WRX, (Joint tape and compound, Item 5, optional for use with Type USGX)

**USG BORAL DRYWALL SFZ LLC** — Types C, SCX, USGX (Joint tape and compound, Item 5, optional for use with Type USGX) USG MEXICO S A DE C V — Type AR, C, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, USGX, WRC or WRX (Joint tape and compound, Item 5, optional for

4A. **Gypsum Board\*** — (As alternate to Item 4) — Nom 5/8 in. thick gypsum panels with beveled, square or tapered edges, applied vertically or horizontally. Vertical joints centered over studs and staggered one stud cavity on opposite sides of studs. Horizontal edge joints and horizontal butt joints on opposite sides of studs need not be staggered or backed by steel framing. Panels attached to steel studs and floor runner with 1 in. long Type S steel screws spaced 8 in. OC when applied horizontally, or 8 in. OC along vertical and bottom edges and 12 in. OC in the field when panels are applied vertically. When used in widths other than 48 in., gypsum panels to be installed horizontally. When using ULIX, panels need not be staggered in horizontal applications and screw spacing can be increased to 12 in. OC in field and perimeter.

**CERTAINTEED GYPSUM INC** — Type X-1, Type C, Type EGRG/ GlasRoc, GlasRoc-2, Type SilentFX, Easi-Lite Type X-2

CGC INC — Types AR, C, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, ULIX, USGX, WRC or WRX (Joint tape and compound, Item 5, optional for use with

**CERTAINTEED GYPSUM INC** — Types LGFC2A, LGFC6A, LGFC-C/A, LGFC-WD

DuraLine ACTIV'Air, Gyproc DuraLine MR ACTIV'Air, Gyproc DuraLine M2TECH ACTIV'Air

**GEORGIA-PACIFIC GYPSUM L L C** — Types DAP, DAPC, DGG, DS SAINT-GOBAIN GYPROC MIDDLE EAST FZE — Type Gyproc FireStop, Gyproc FireStop MR, Gyproc FireStop M2TECH, Gyproc FireStop ACTIV'Air, Gyproc FireStop MR ACTIV'Air, Gyproc FireStop M2TECH ACTIV'Air, Gyproc DuraLine, Gyproc DuraLine MR, Gyproc DuraLine M2TECH, Gyproc

THAI GYPSUM PRODUCTS PCL — Type X, Type C

**GEORGIA-PACIFIC GYPSUM L L C** — Type DGG, GreenGlass Type X

UNITED STATES GYPSUM CO — Types AR, C, FRX-G, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, ULIX, USGX, WRC, WRX (Joint tape and compound, Item 5, optional for use with Type USGX)

**USG BORAL DRYWALL SFZ LLC** — Types C, SCX, USGX (Joint tape and compound, Item 5, optional for use with Type USGX) USG MEXICO S A DE C V — Type AR, C, IP-AR, IP-X1, IP-X2, IPC-AR, SCX, SHX, USGX, WRC or WRX (Joint tape and compound, Item 5, optional for use with Type USGX)

4B. Gypsum Board\* — (As an alternate to Items 4 or 4A) — Nom 3/4 in. thick, 4 ft wide, installed as described in Item 4A with screw length increased to 1-1/4 in. CGC INC — Types AR, IP-AR

**UNITED STATES GYPSUM CO** — Types AR, IP-AR

**USG MEXICO S A DE C V** — Types AR, IP-AR

4C. **Gypsum Board\*** — As an alternate to Items 4, 4A, and 4B — Nom. 5/8 in. thick gypsum panels, with square edges, applied horizontally. Gypsum panels fastened to framing with 1 in. long bugle head steel screws spaced a max 8 in. OC, with last 2 screws 3/4 in. and 4 in. from each edge of board. Horizontal joints need not be backed by steel framing. Horizontal edge joints and horizontal butt joints on opposite sides of studs on interior walls need not be staggered or backed by steel framing.

4D. **Gypsum Board\*** — As an alternate to Items 4, 4A, 4B, and 4C — Nom. 5/8 in. thick gypsum panels applied vertically or horizontally. Vertical joints centered over studs and staggered one stud cavity on opposite sides of studs. Horizontal edge joints and

horizontal butt joints on opposite sides of studs need not be staggered or backed by steel framing. Gypsum panels fastened to framing with 1 in. long Type S steel screws 12 in. OC along vertical edges and in the field. Screws spaced a max 12 in. along the top and bottom edges of the wall for both vertical and horizontal applications. When used in widths other than 48 in., gypsum panels to

be installed horizontally. NATIONAL GYPSUM CO — Types eXP-C, FSK, FSK-C, FSK-G, FSL, FSW-C, FSW-G, FSW, FSW-3, FSW-5, FSW-6, FSMR-C

4E. **Gypsum Board\*** — (As an alternate to Items 4 through 4D) — Installed as described in Item 4. 5/8 in. thick, 4 ft. wide, applied vertically only and fastened to the studs and plates with 1 in. long, Type S steel screws spaced, 12 in. OC. NATIONAL GYPSUM CO — Type SBWB

4F. **Gypsum Board\*** — (Not Shown) — (As an alternate to Item 4 when used as the base layer on one or both sides of wall. For direct attachment only to steel studs Item 2C) - Nom 5/8 in. thick lead backed gypsum panels with beveled, square or tapered edges, applied vertically. Vertical joints centered over studs and staggered min 1 stud cavity on opposite sides of studs. Gypsum board secured to studs with 1-1/4 in. long Type S-12 steel screws spaced 8 in. OC at perimeter and 12 in. OC in the field. **RAY-BAR ENGINEERING CORP** — Type RB-LBG

4G. **Gypsum Board\*** — (As an alternate to Items 4 through 4F) — For use with Items 1D and 2D only, 5/8 in. thick, 4 ft wide, attached to steel studs and floor and ceiling track with 1 in. long, Type S steel screws spaced 8 in. OC. along edges of board and 12 in. OC in the field of the board. Joints oriented vertically and staggered on opposite sides of the assembly. When using ULIX, panels need not be staggered in horizontal applications and screw spacing can be increased to 12 in. OC in field and perimeter. **CGC INC** — Type SCX, ULIX

**CERTAINTEED GYPSUM INC** — Type LGFC6A, LGFC-C/A

NATIONAL GYPSUM CO — Types FSW **UNITED STATES GYPSUM CO** — Type SCX, ULIX

**USG BORAL DRYWALL SFZ LLC** — Type SCX

4H. Gypsum Board\* — (As an alternate to Items 4 through 4G) — Nominal 5/8 in. thick, 4 ft wide panels, applied vertically and secured as described in Item 4.

PABCO BUILDING PRODUCTS L L C, DBA PABCO GYPSUM — Type QuietRock ES

4l. **Gypsum Board\*** — (As an alternate to Items 4 through 4F) — 5/8 in. thick, 4 ft wide, attached to steel studs and floor and ceiling track with 1 in. long, Type S steel screws spaced 8 in. OC. along edges of board and 12 in. OC in the field of the board. Joints oriented vertically and staggered on opposite sides of the assembly. When using ULIX, panels need not be staggered in horizontal applications and screw spacing can be increased to 12 in. OC in field and perimeter. When using ULIX, panels need not be staggered in horizontal applications and screw spacing can be increased to 12 in. OC in field and perimeter. **CGC INC** — Types SCX, ULIX

**UNITED STATES GYPSUM CO** — Types SCX, ULIX **USG BORAL DRYWALL SFZ LLC** — Type SCX

4J. **Gypsum Board\*** — (Not Shown) — (As an alternate to Item 4 when used as the base layer on one or both sides of wall. For direct attachment only to steel studs Item 2C) — Nom 5/8 in. thick lead backed gypsum panels with beveled, square or tapered edges, applied vertically. Vertical joints centered over studs and staggered min 1 stud cavity on opposite sides of studs. Gypsum board secured to studs with 1-1/4 in. long Type S-12 steel screws spaced 8 in. OC at perimeter and 12 in. OC in the field. To be used with Lead Batten Strips (see Item 9A) or Lead Discs (see Item 10A).

Charlotte, NC 28202 T: 704.525.6350 www.littleonline.com

615 South College Street, Suite 1600

This drawing and the design shown are the property of Little Diversified Architectural Consulting. The reproduction, copying or other use of this drawing without their written consent is prohibited and any infringement will be subject to legal action.



ISSUE FOR:

CONSTRUCTION DOCUMENTS

REVISIONS:

Number | Revision Description | Revision Date

ISSUE: 09/15/23 5/6/2024 11:24:08 AM

SHEET NAME


Novant ASC Leland


SHEET NUMBER


DRAWN BY: Author


A/E #: 1721843900


FIRE RESISTANCE **DETAILS** 

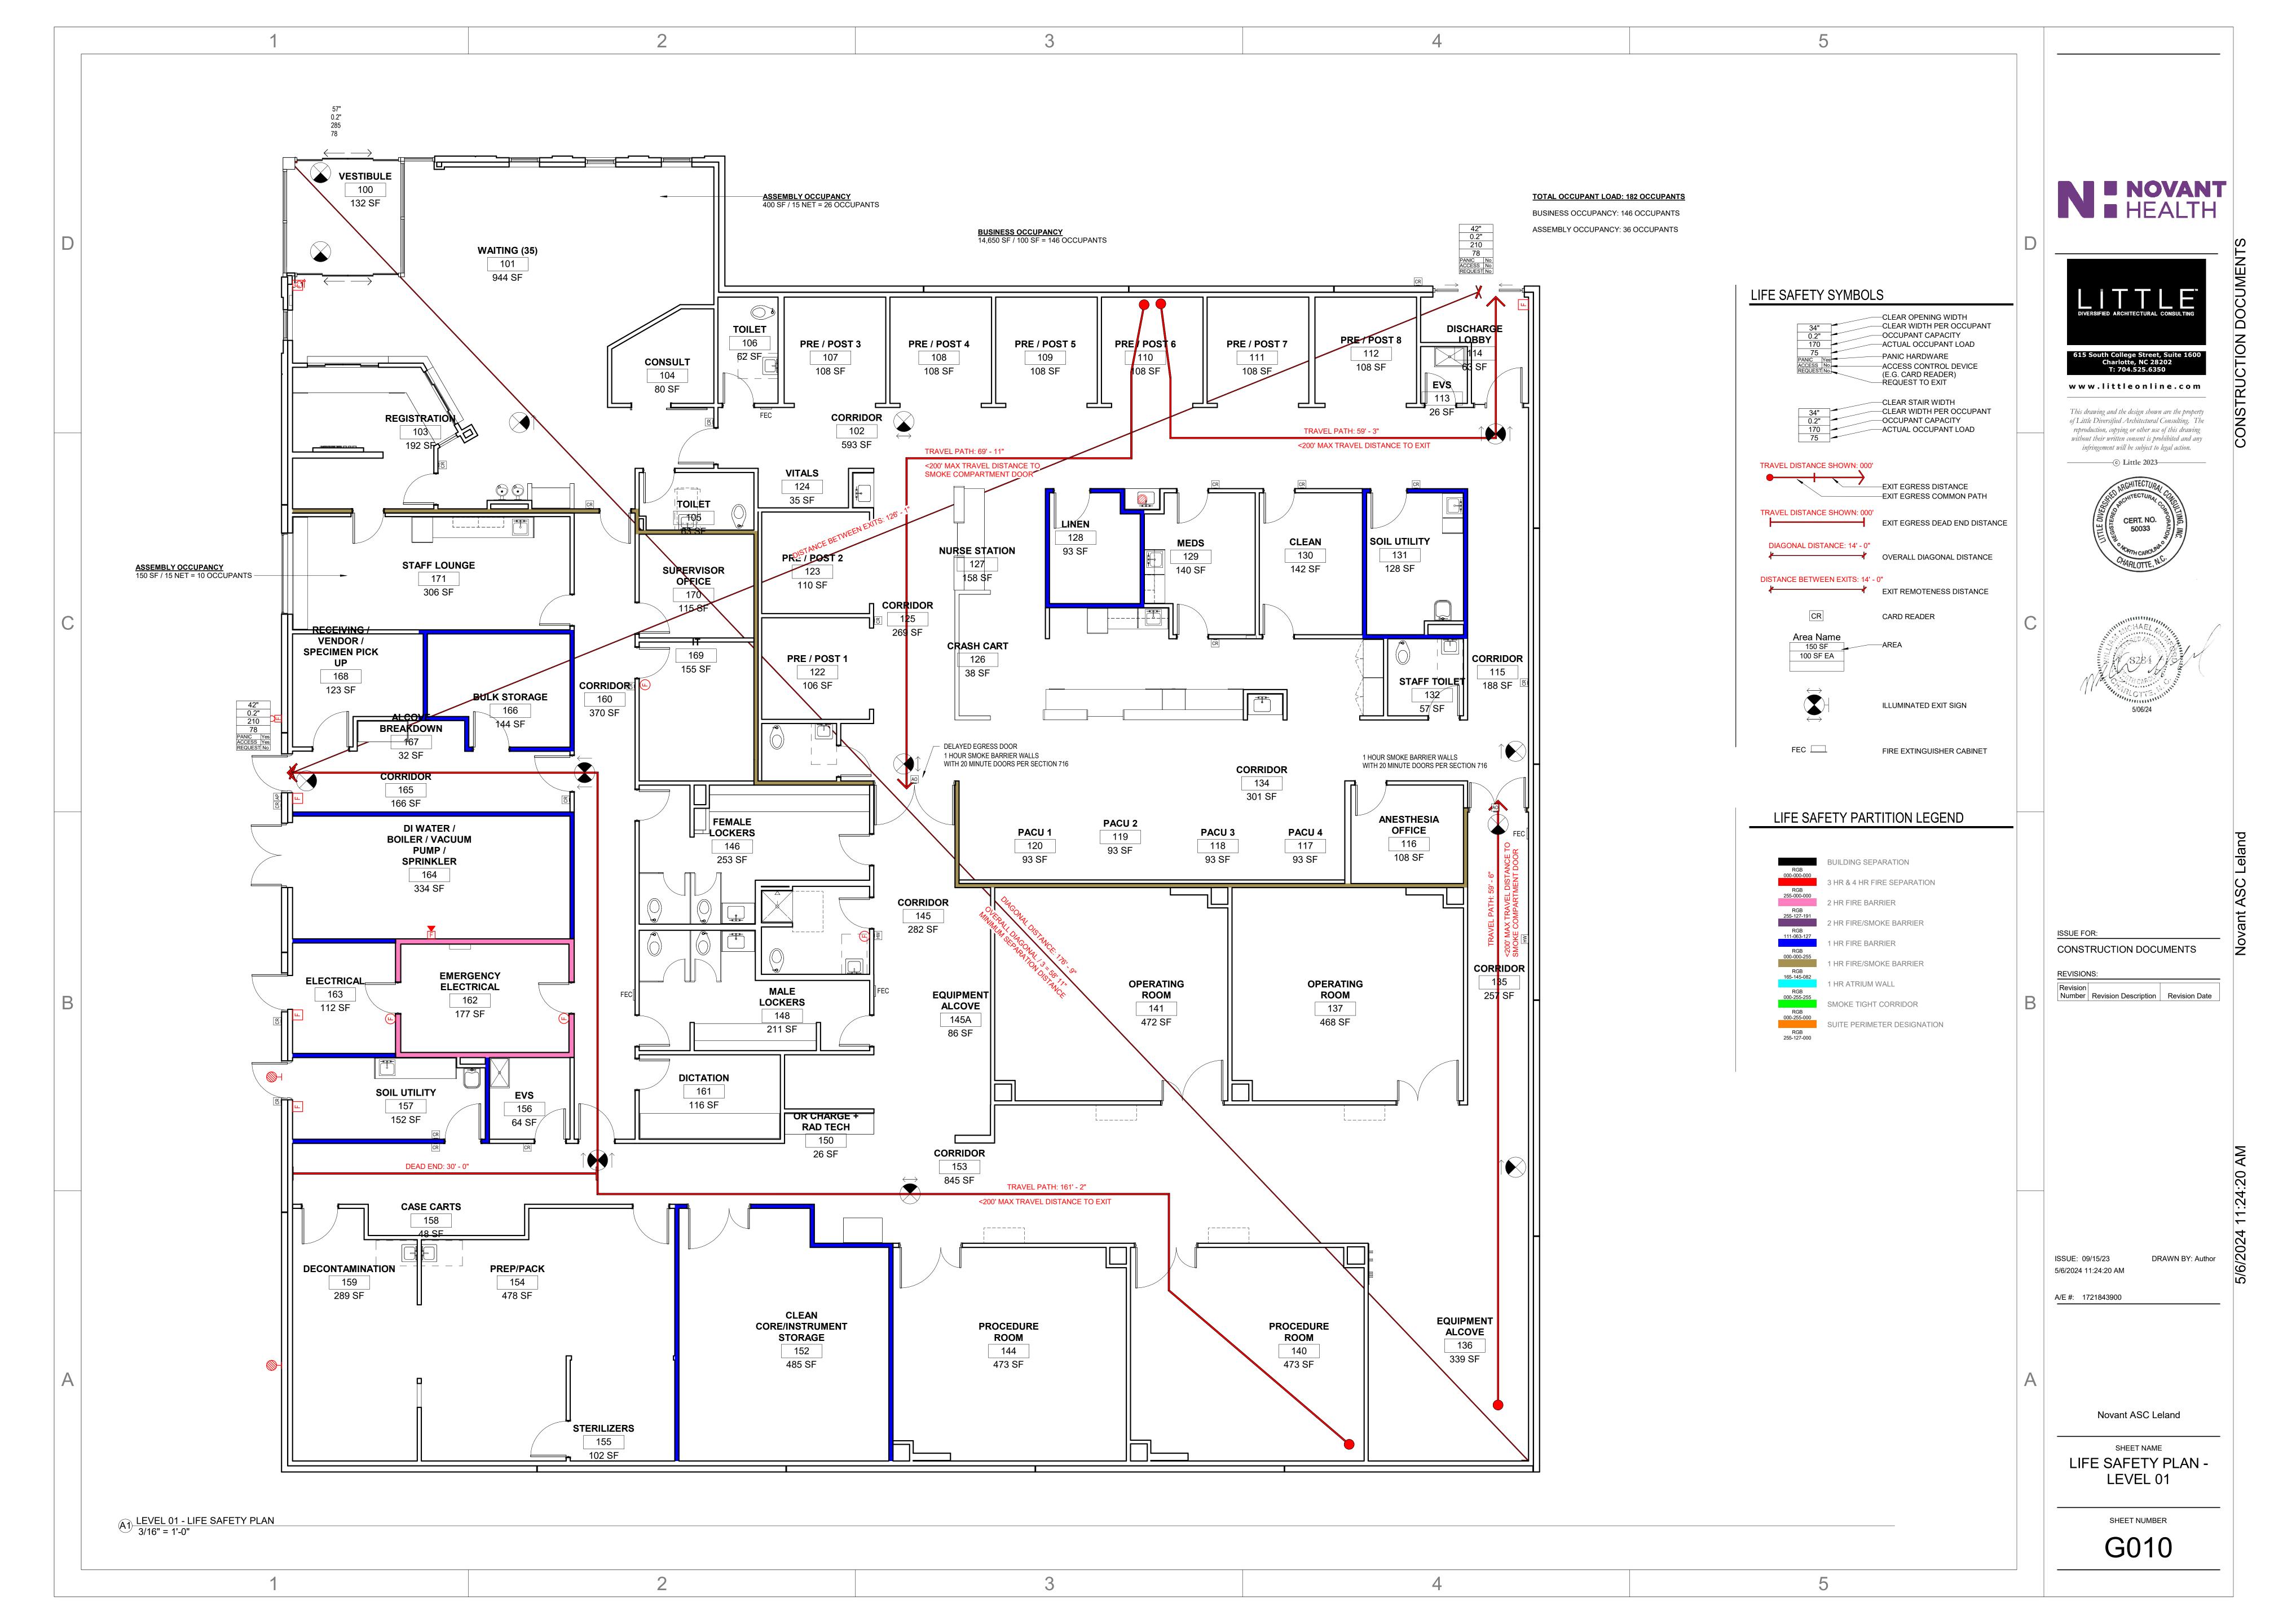


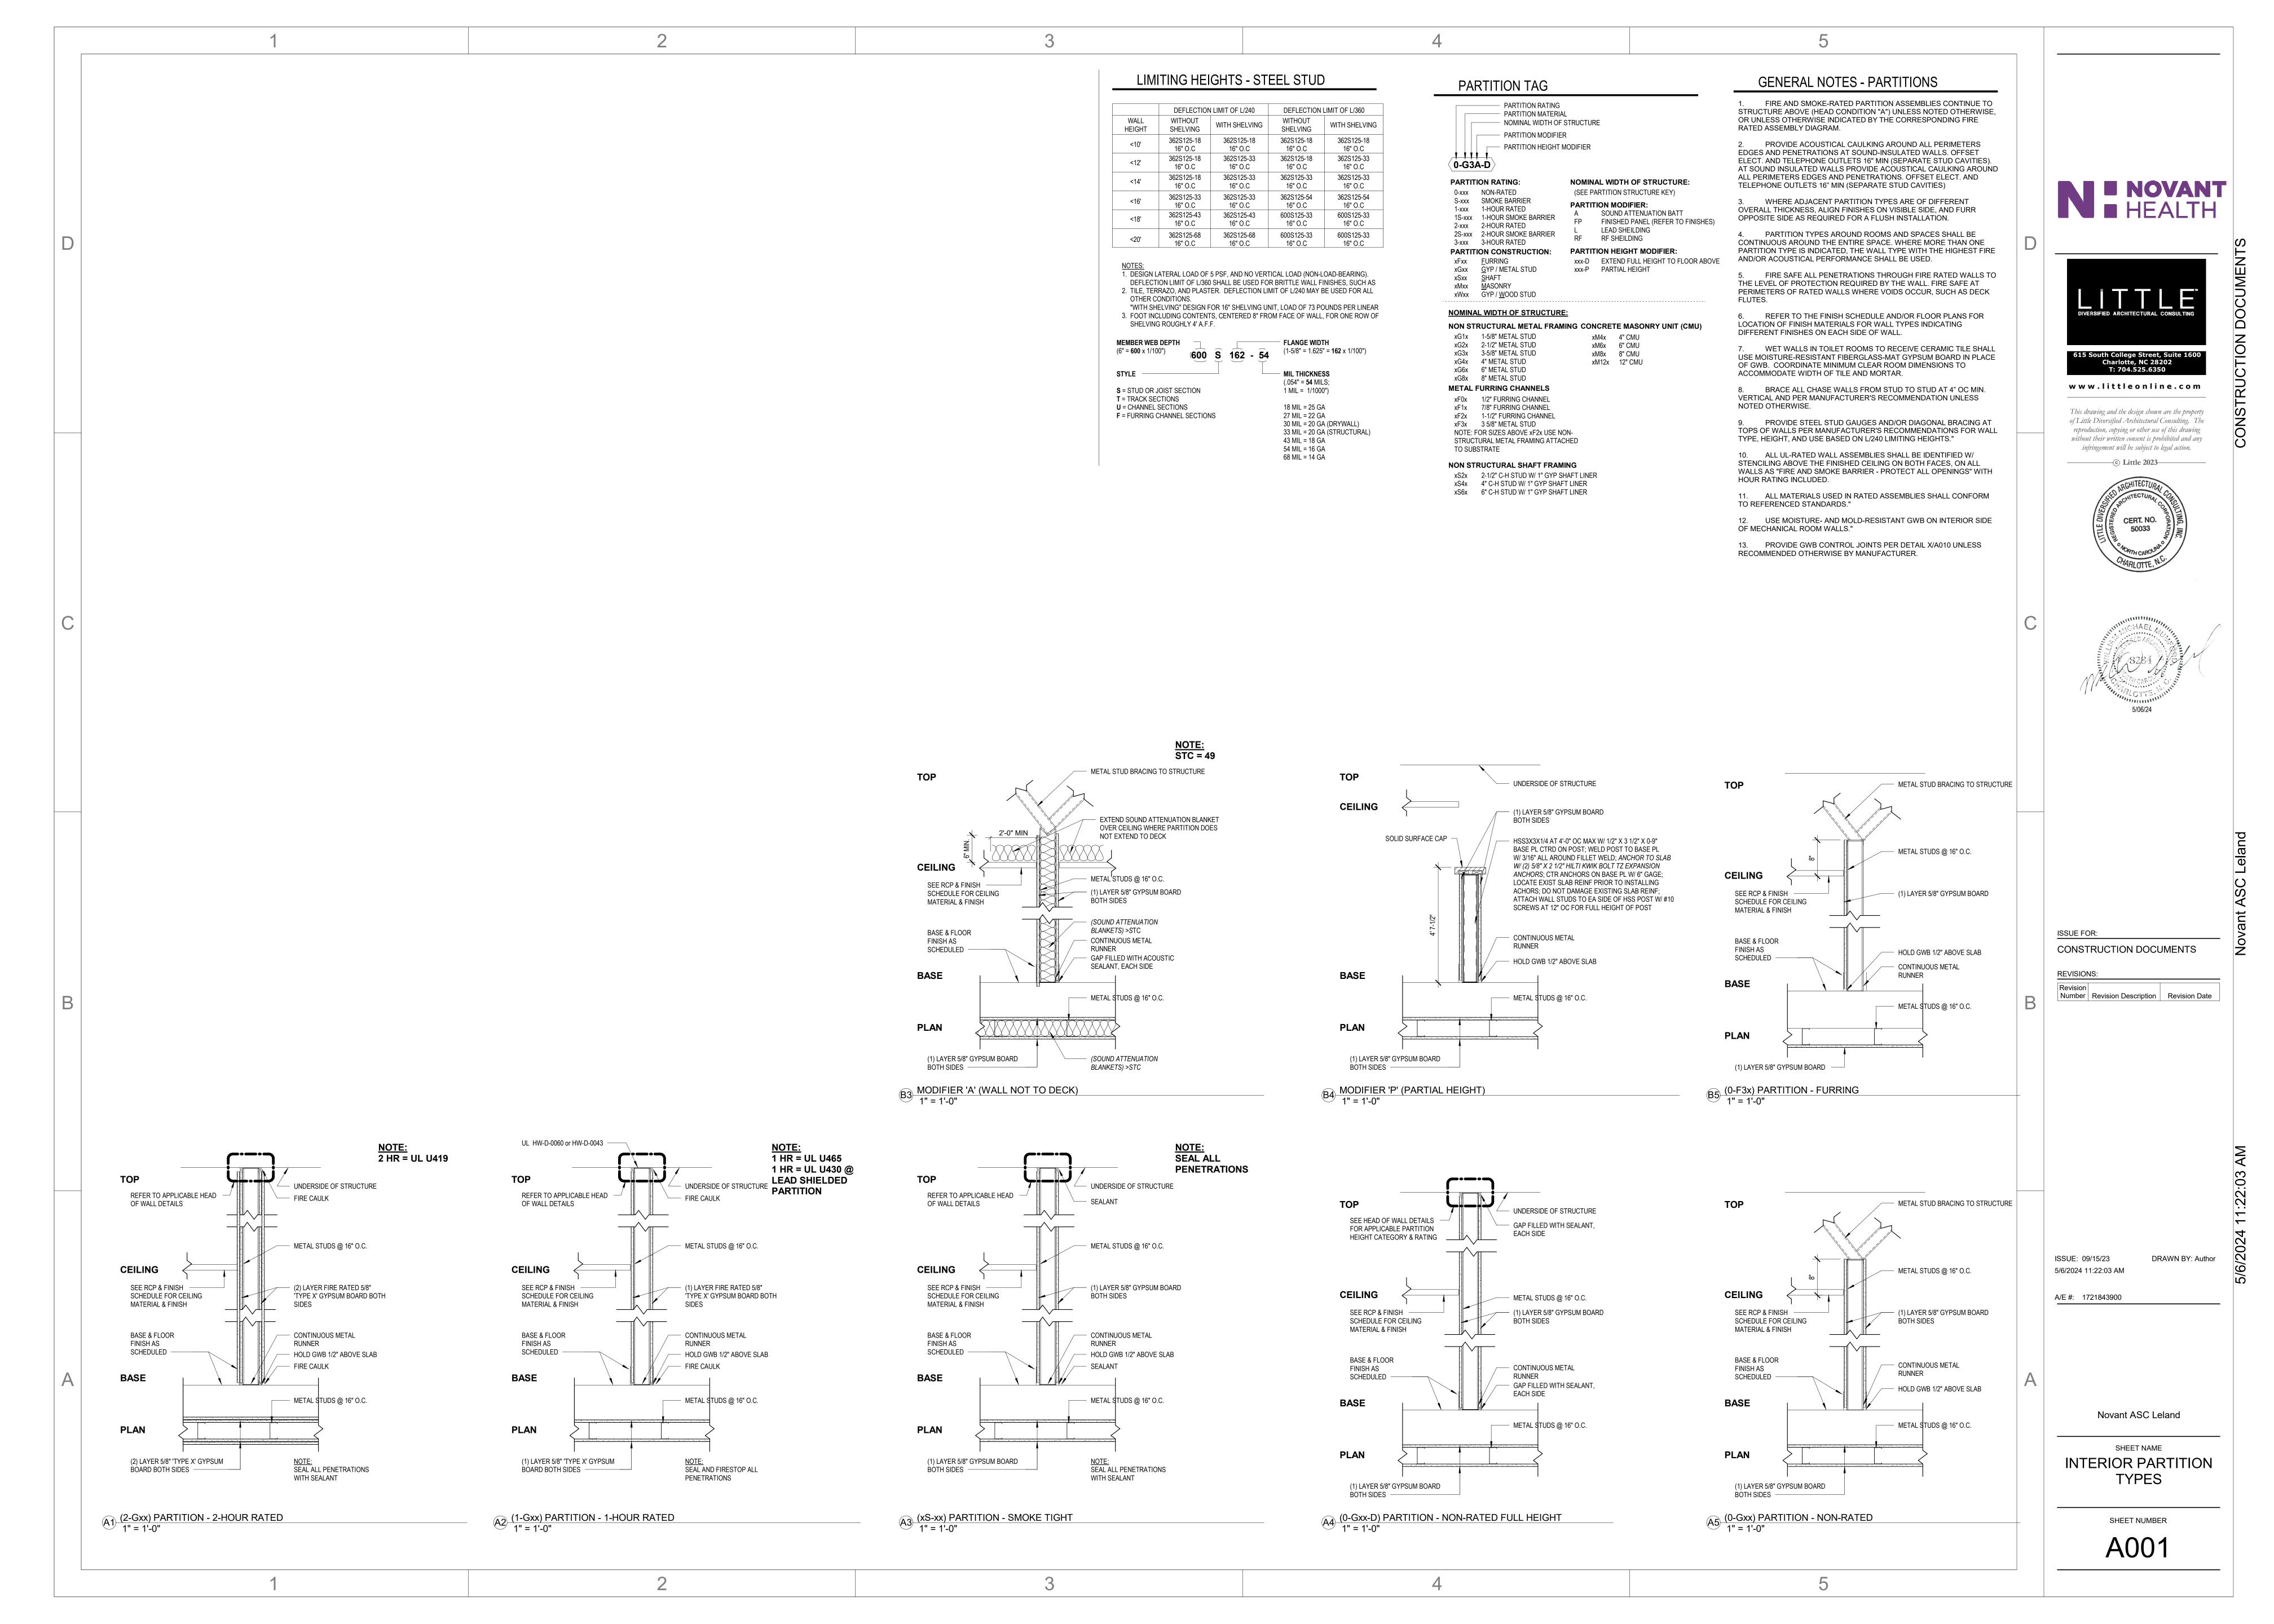


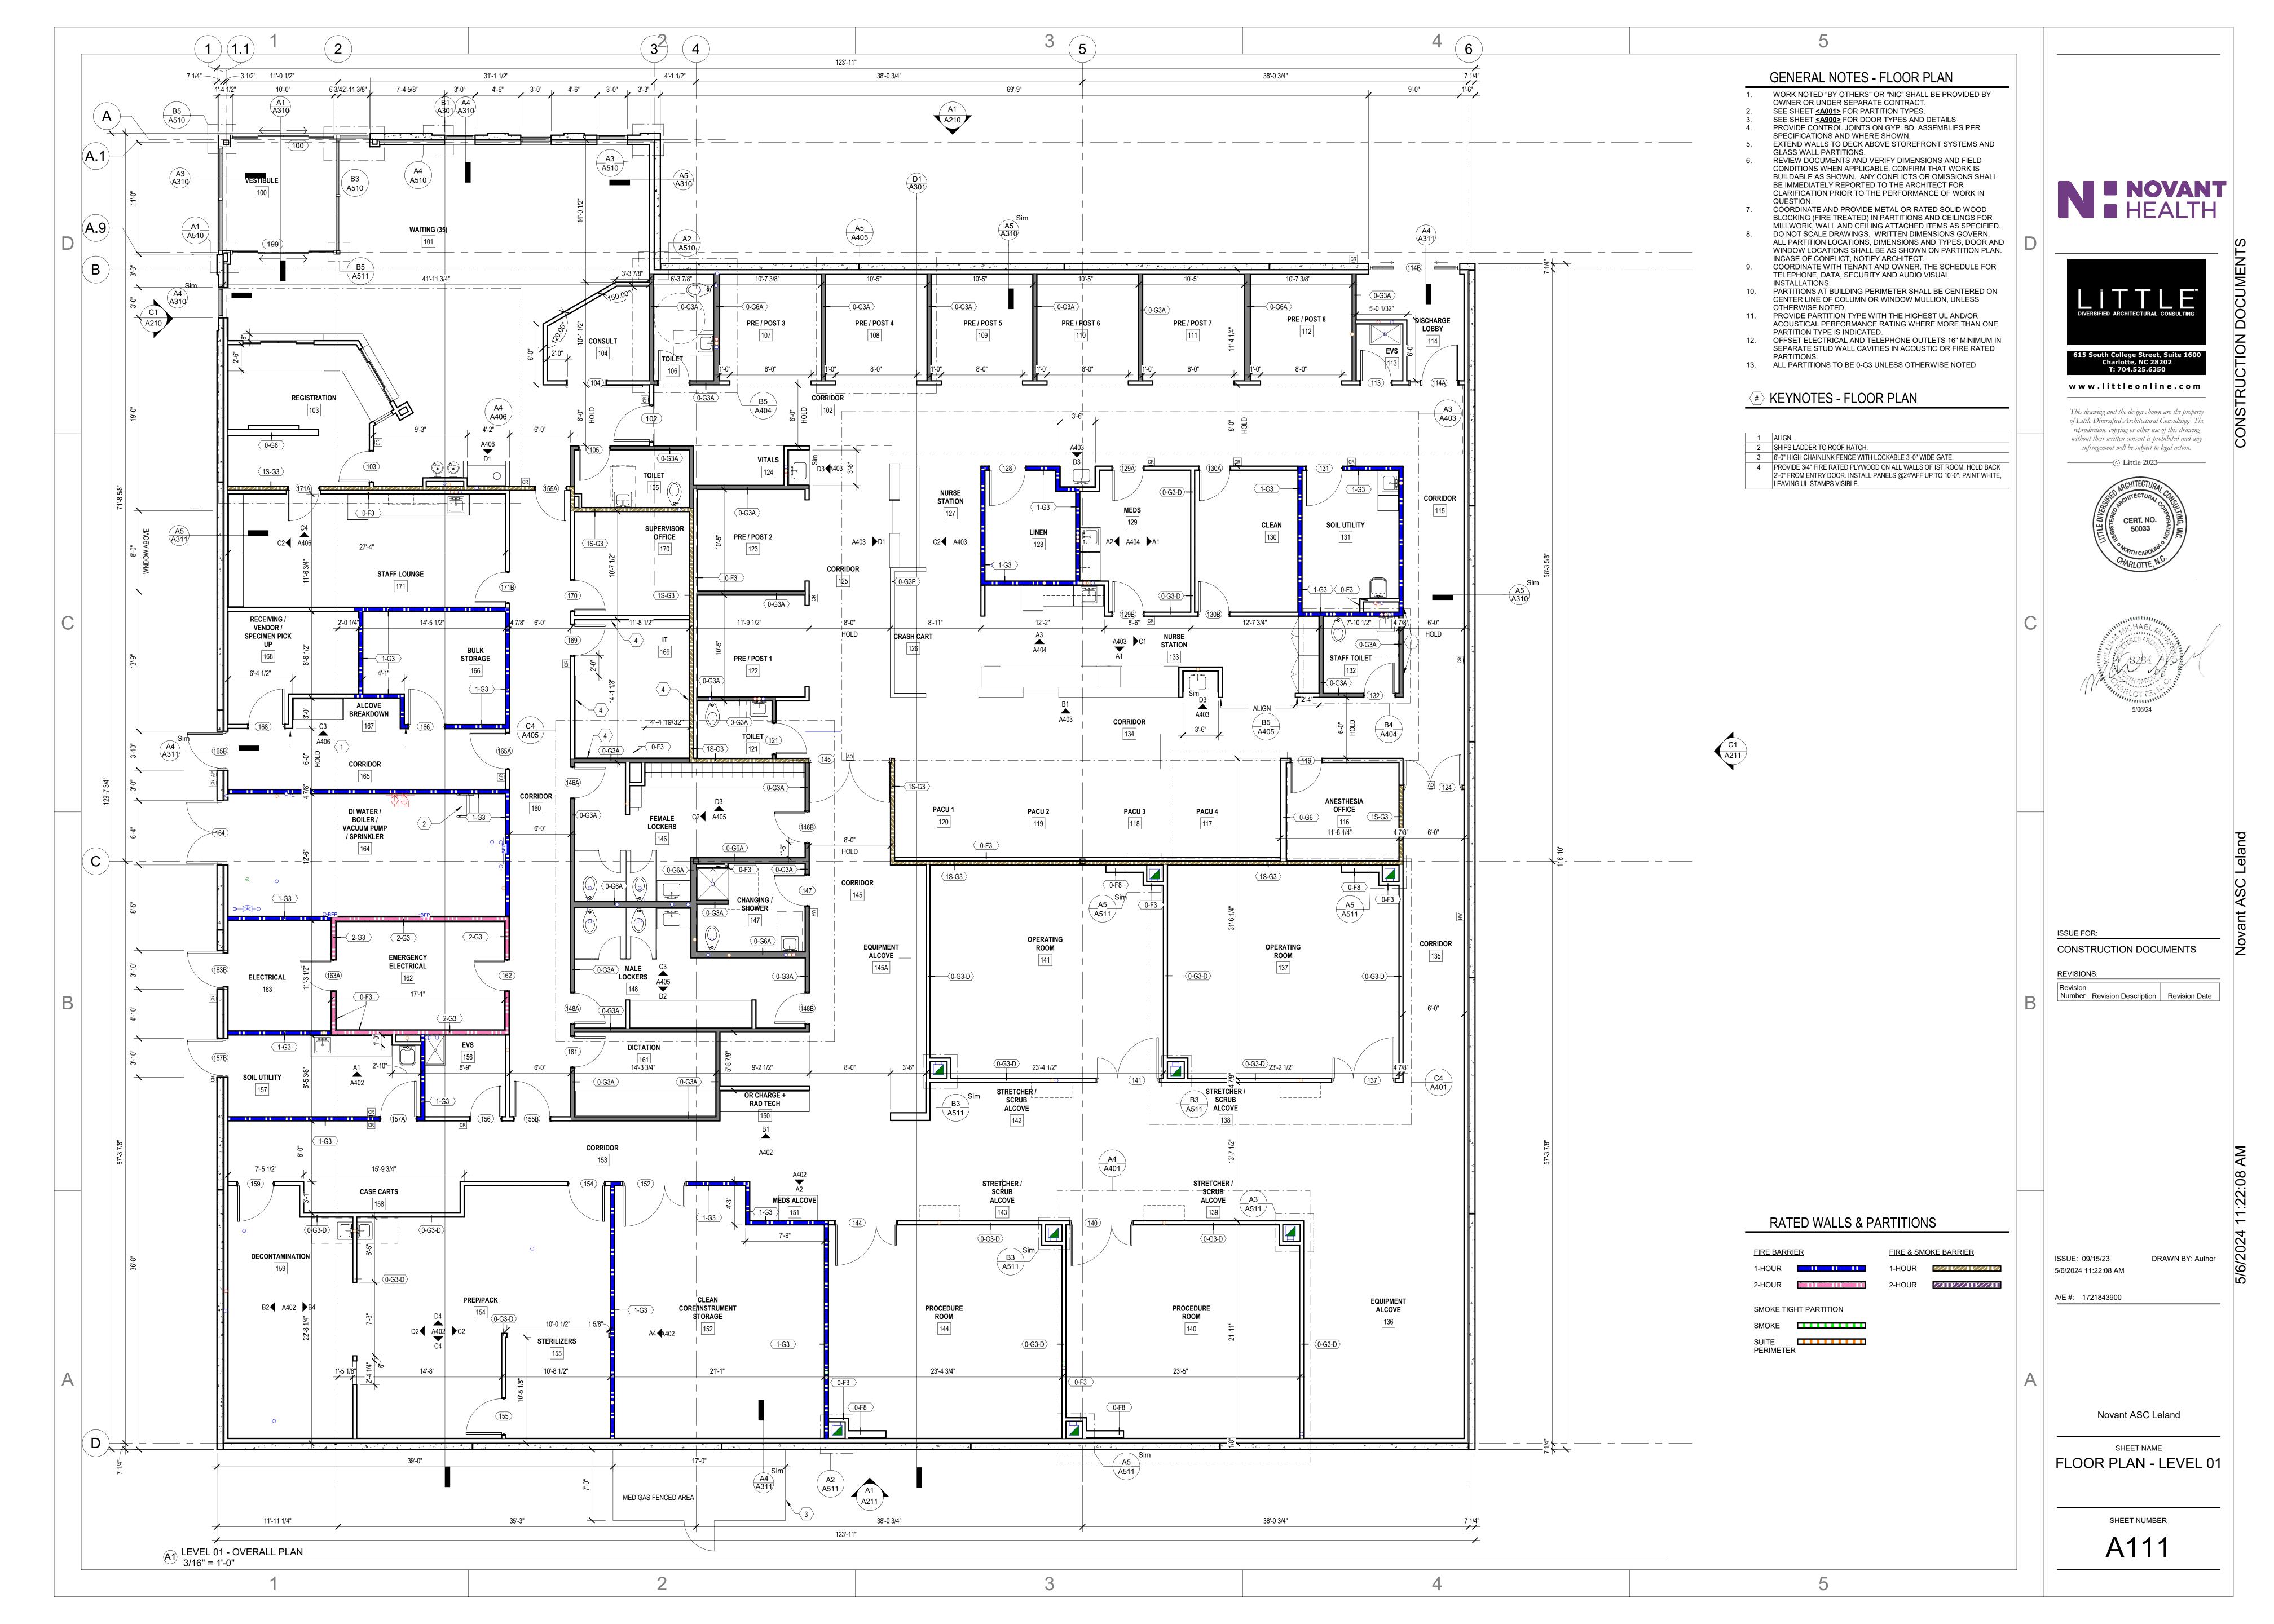


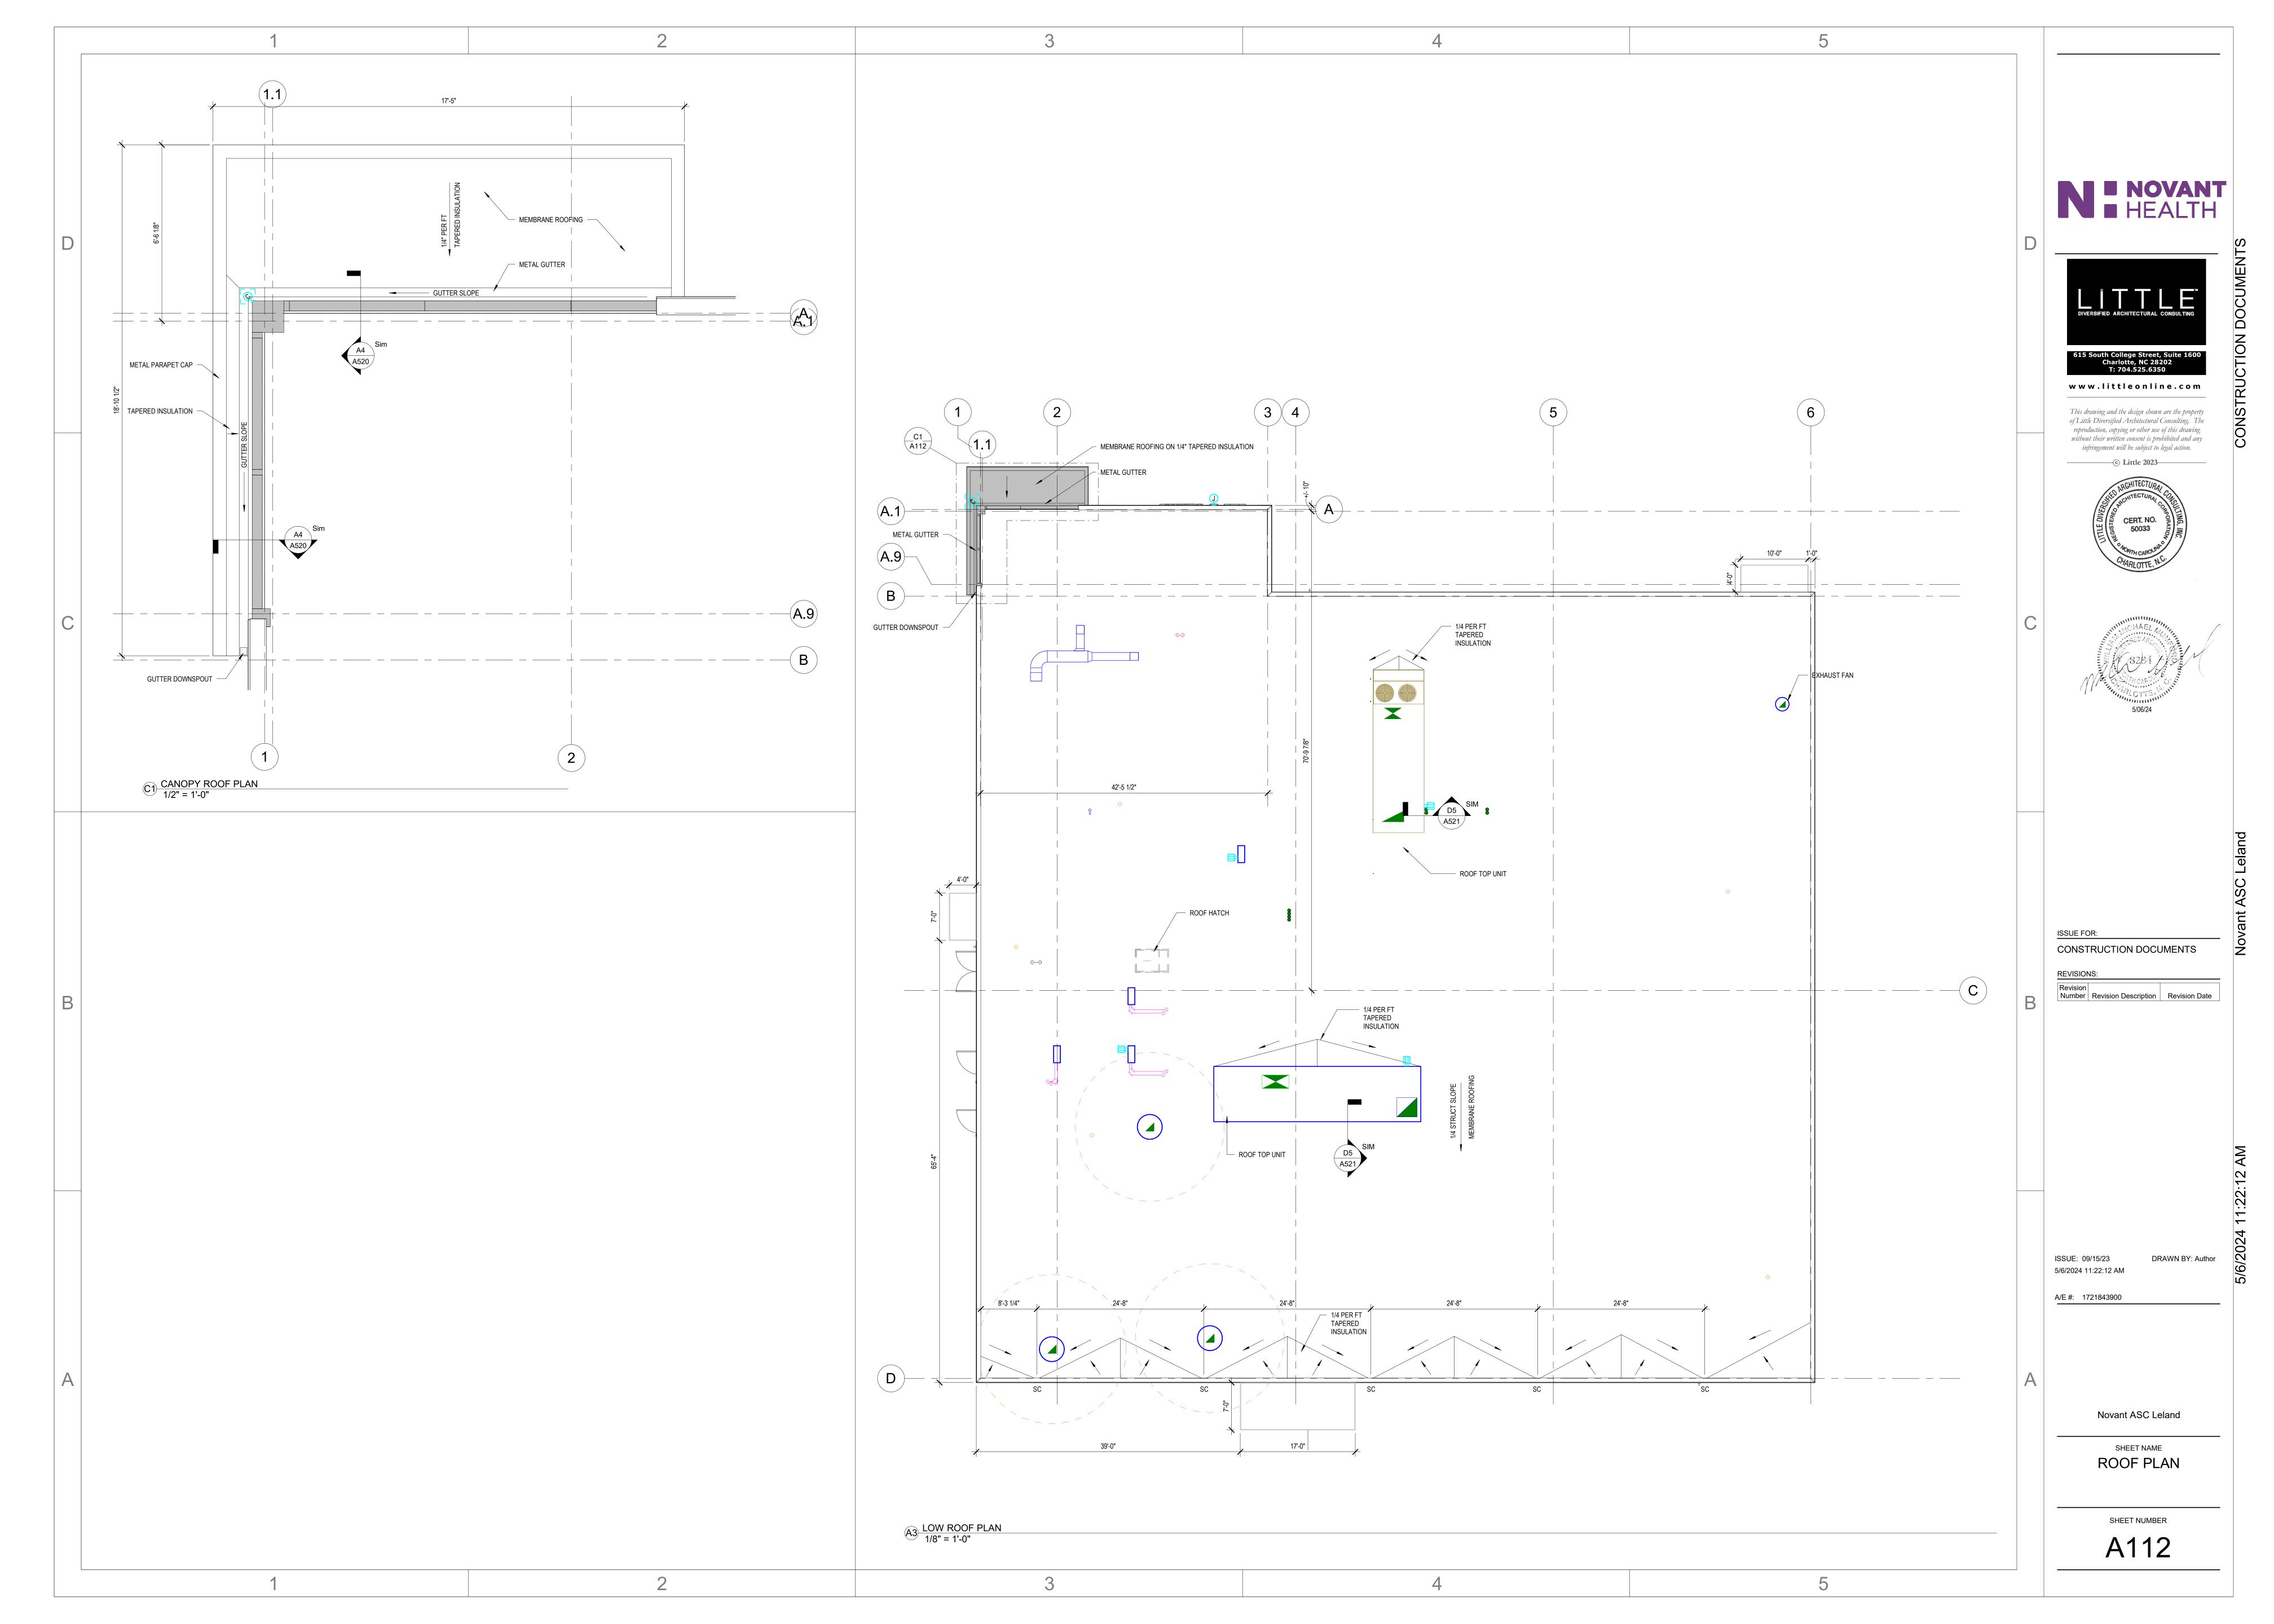

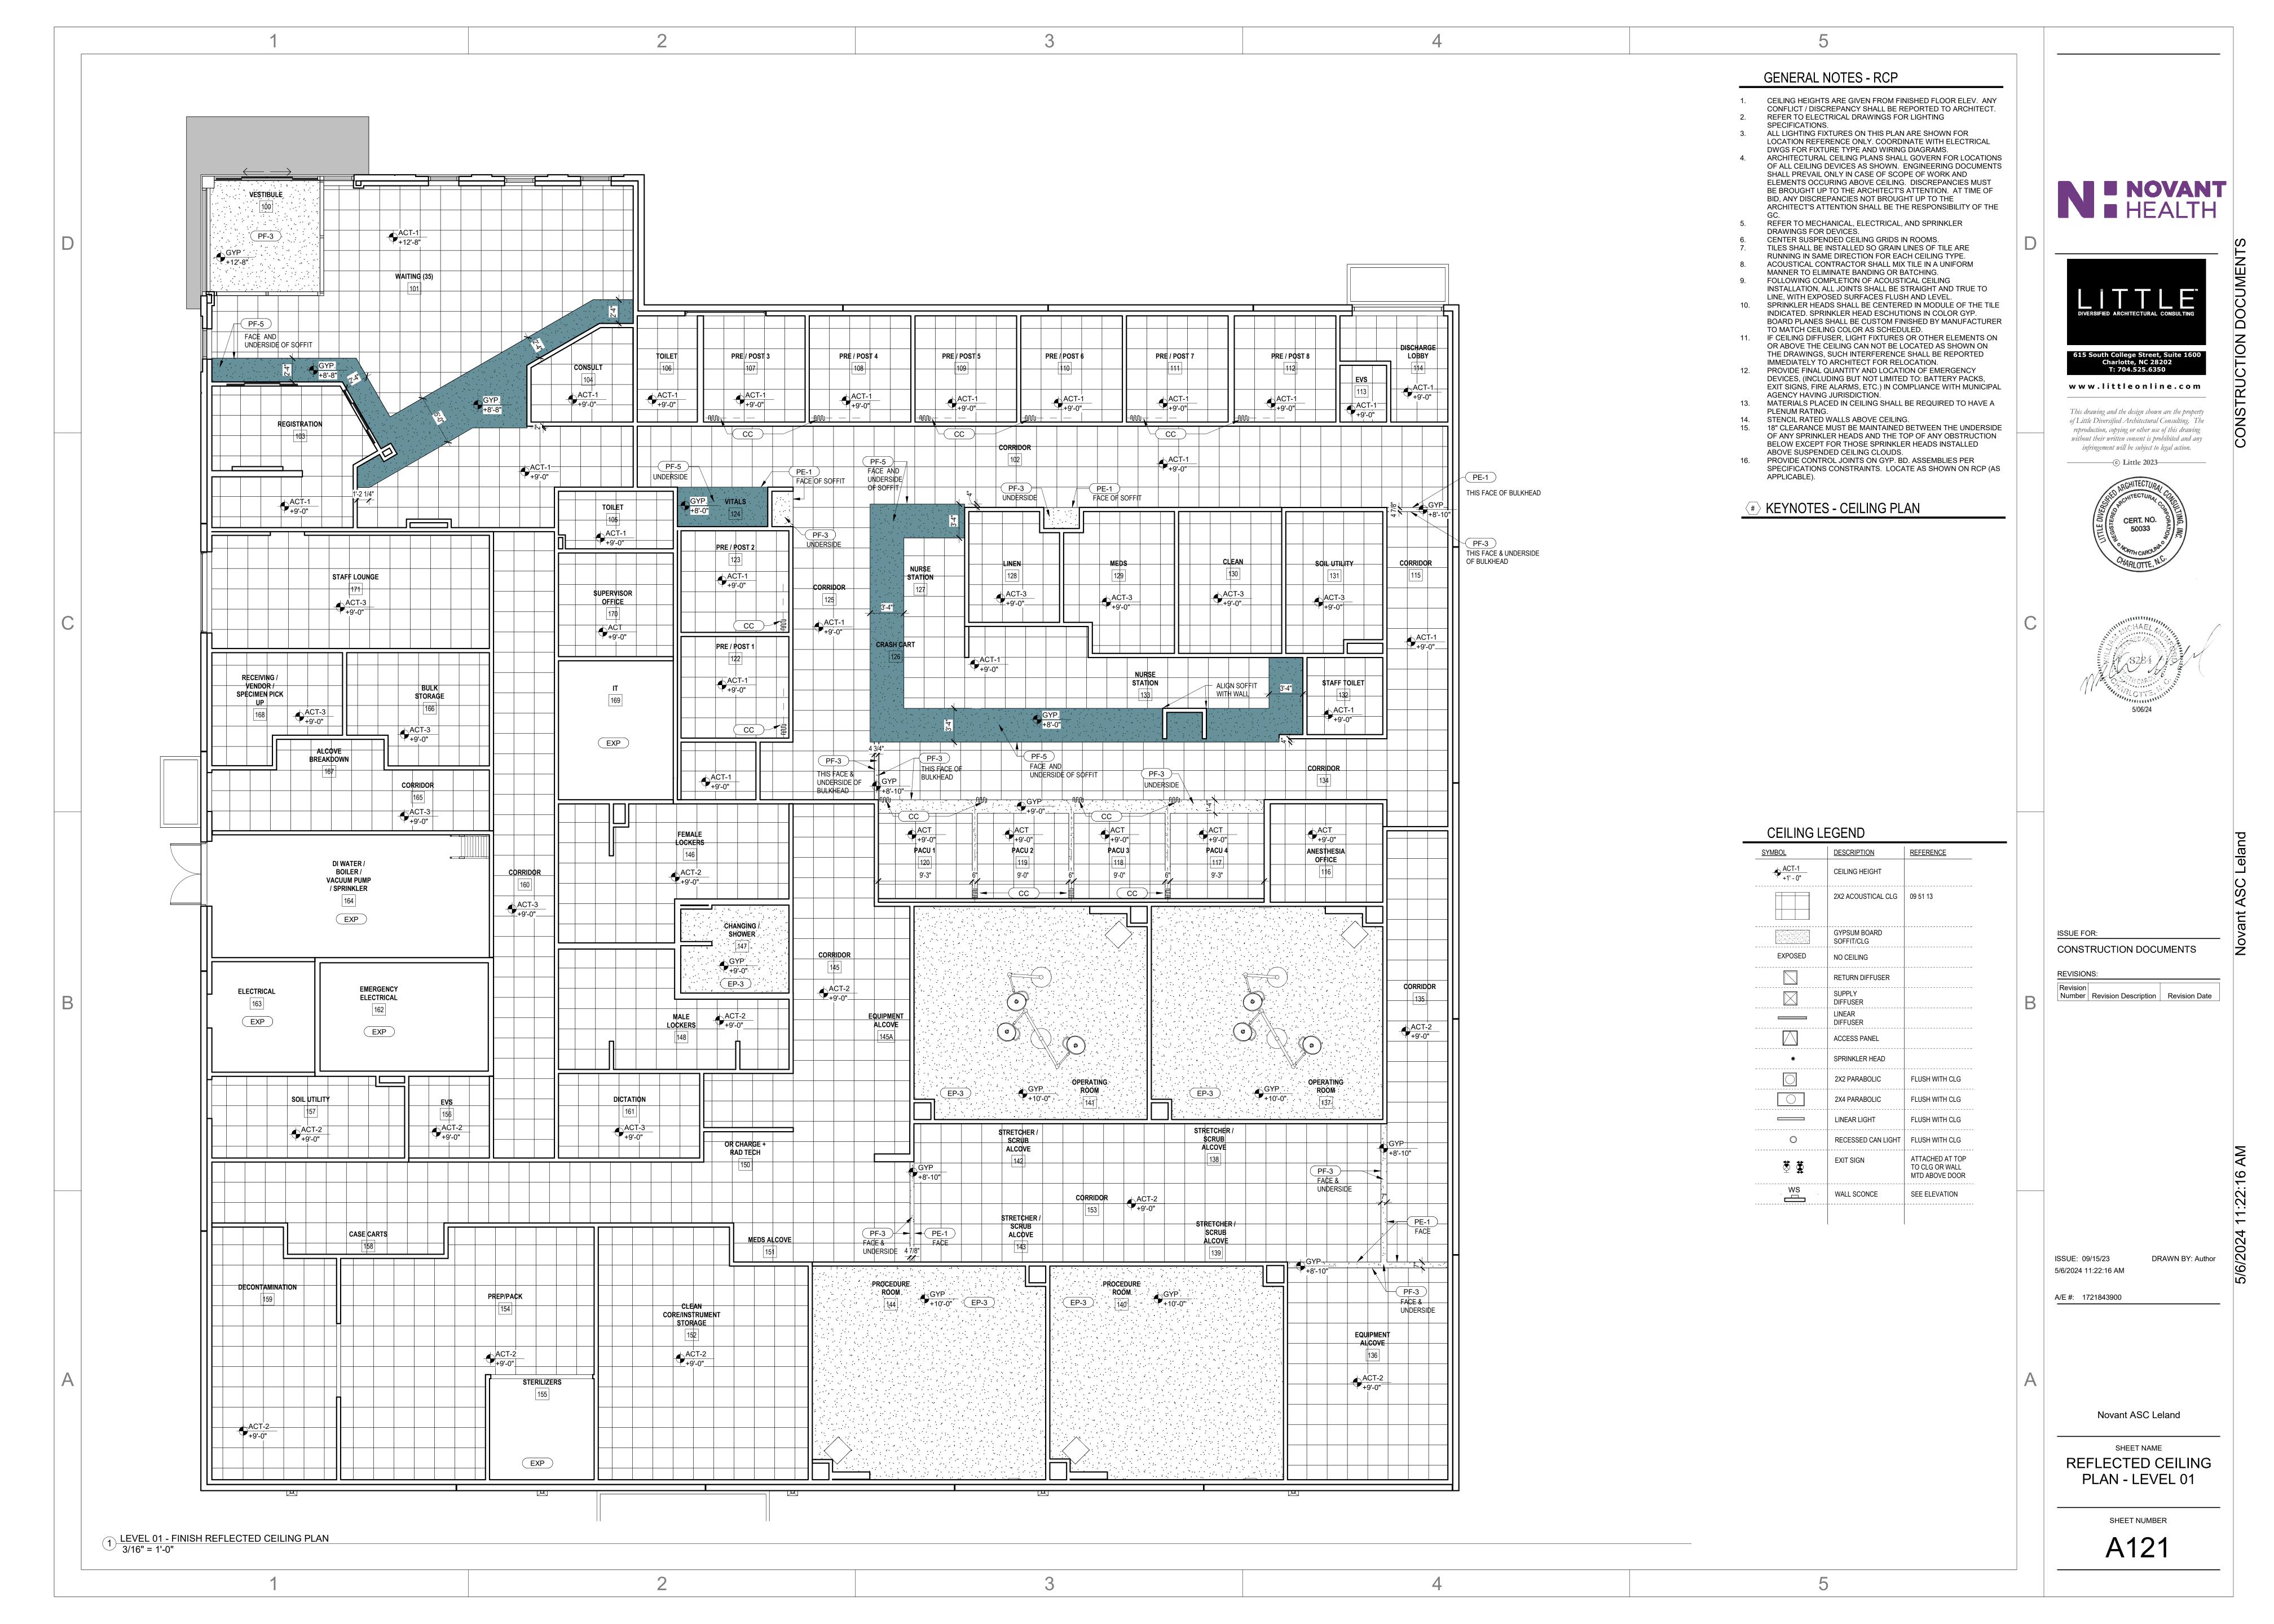


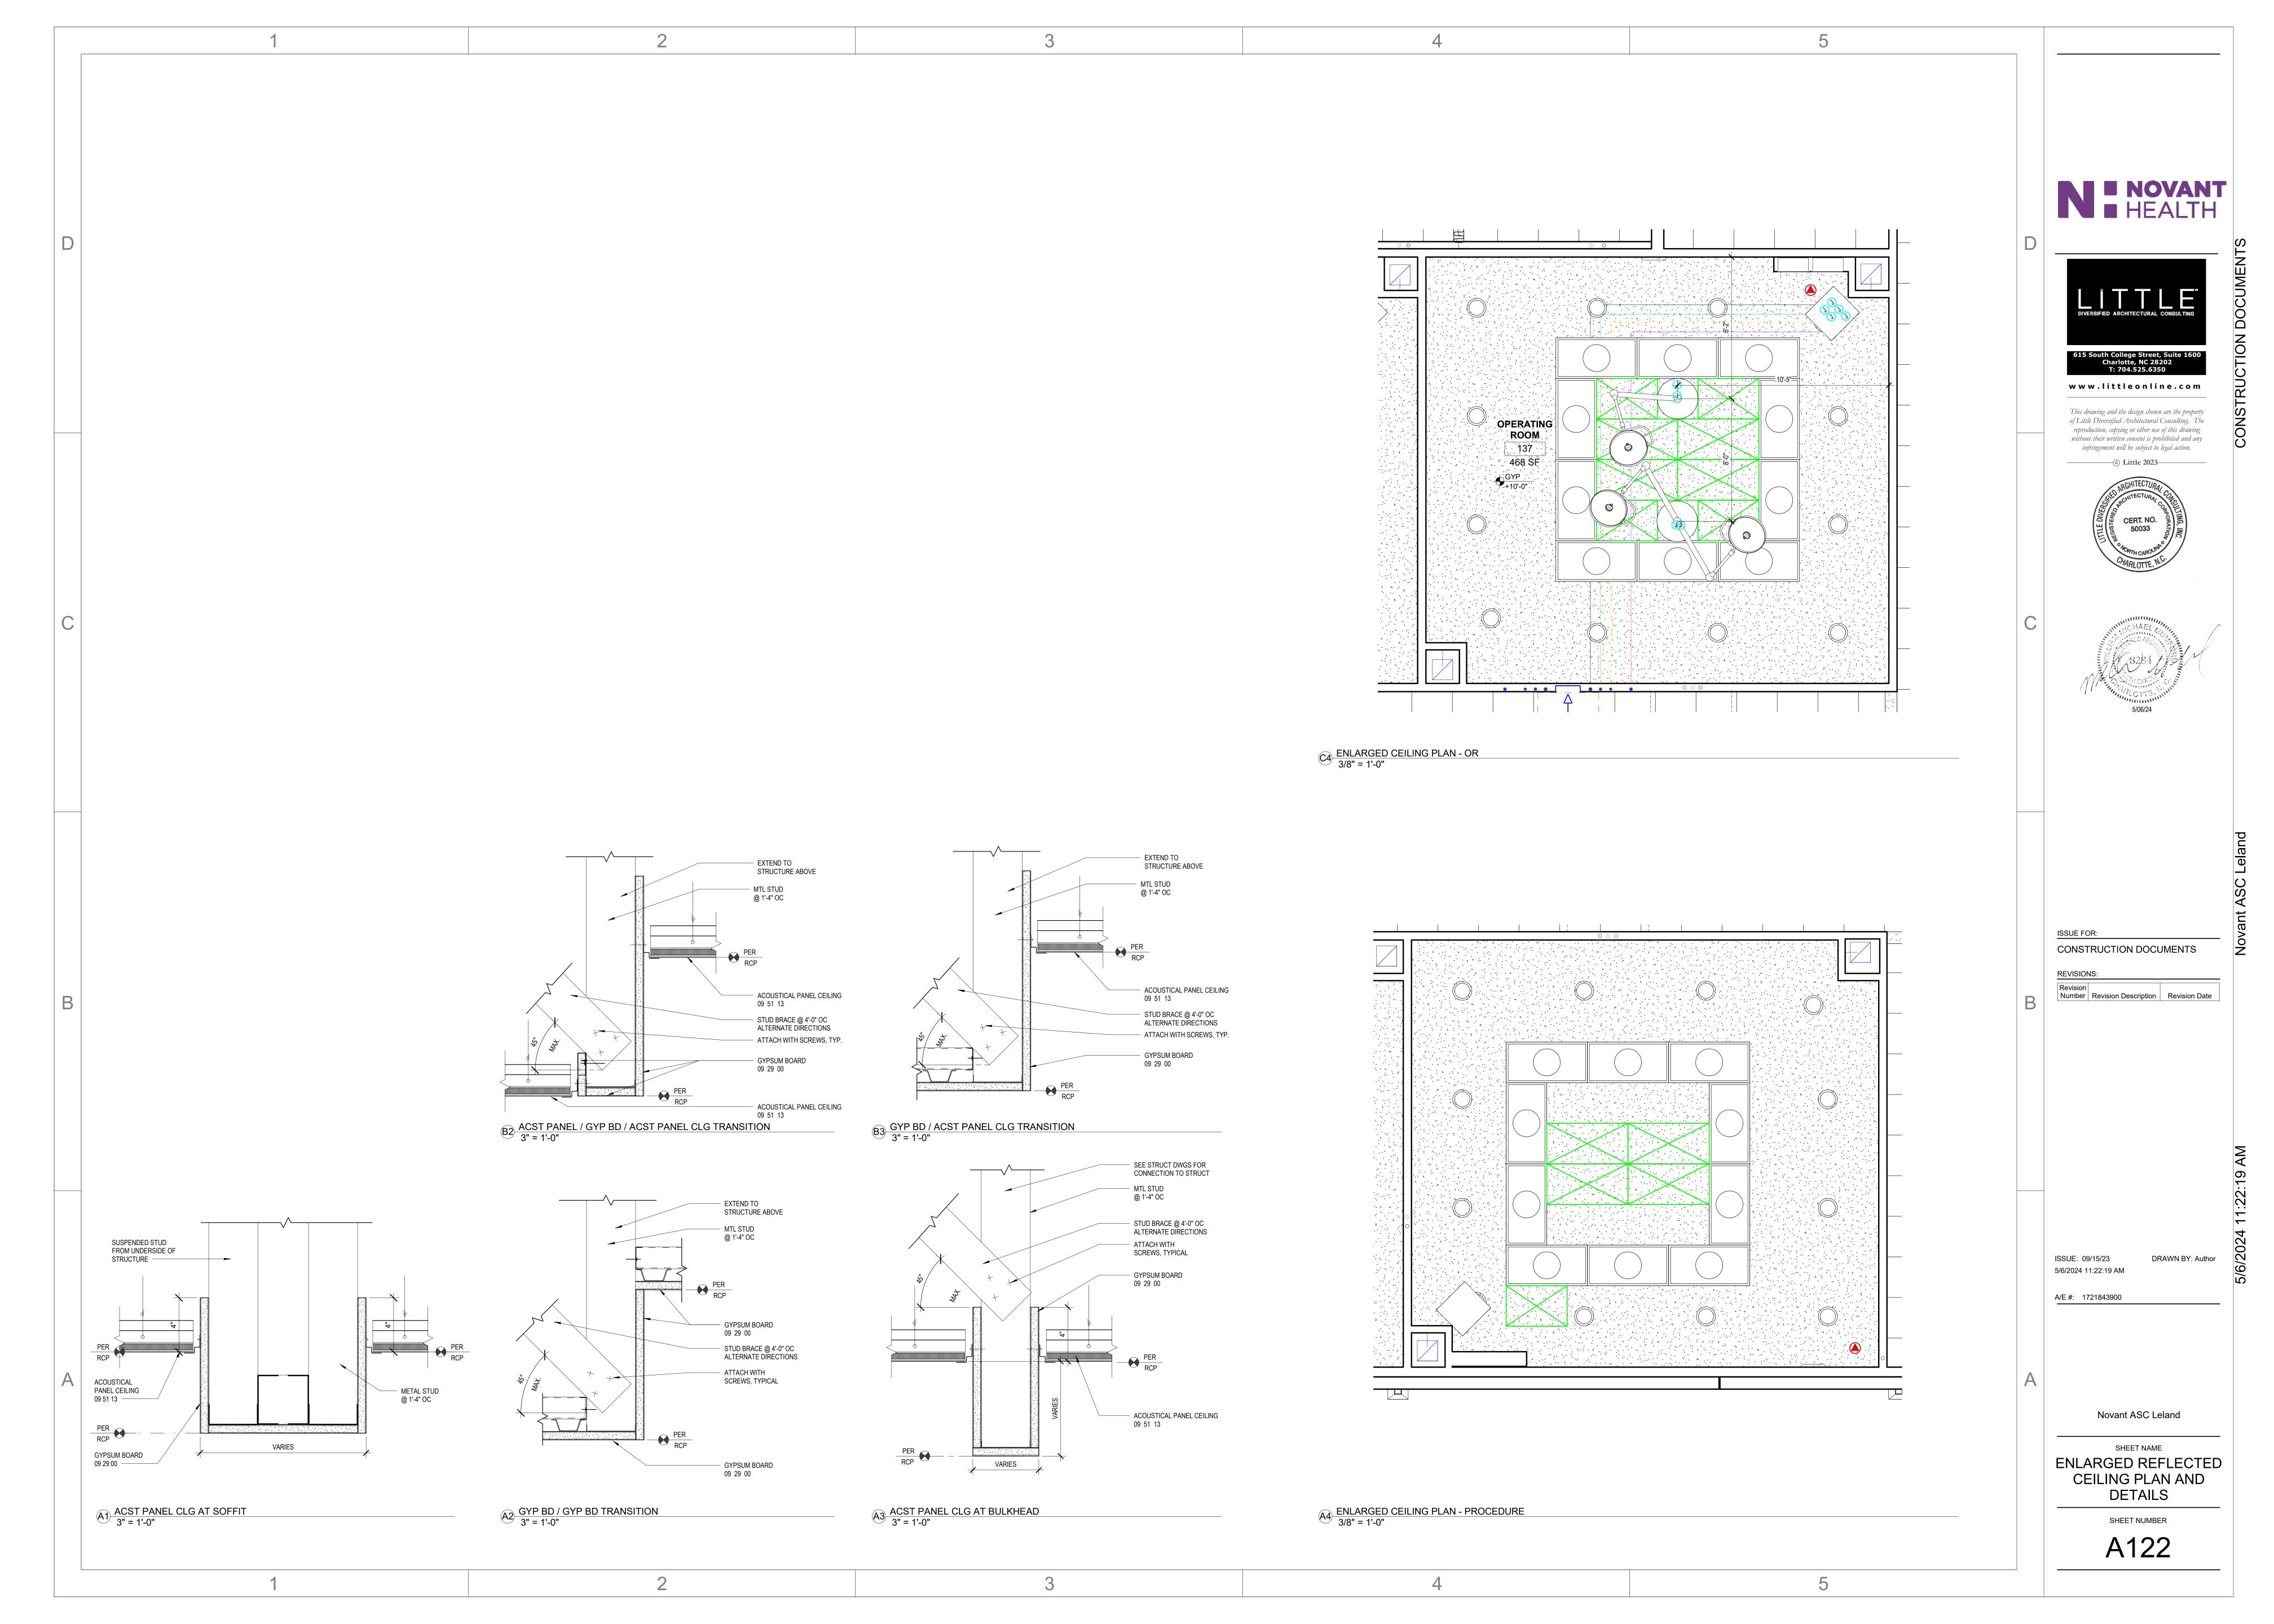


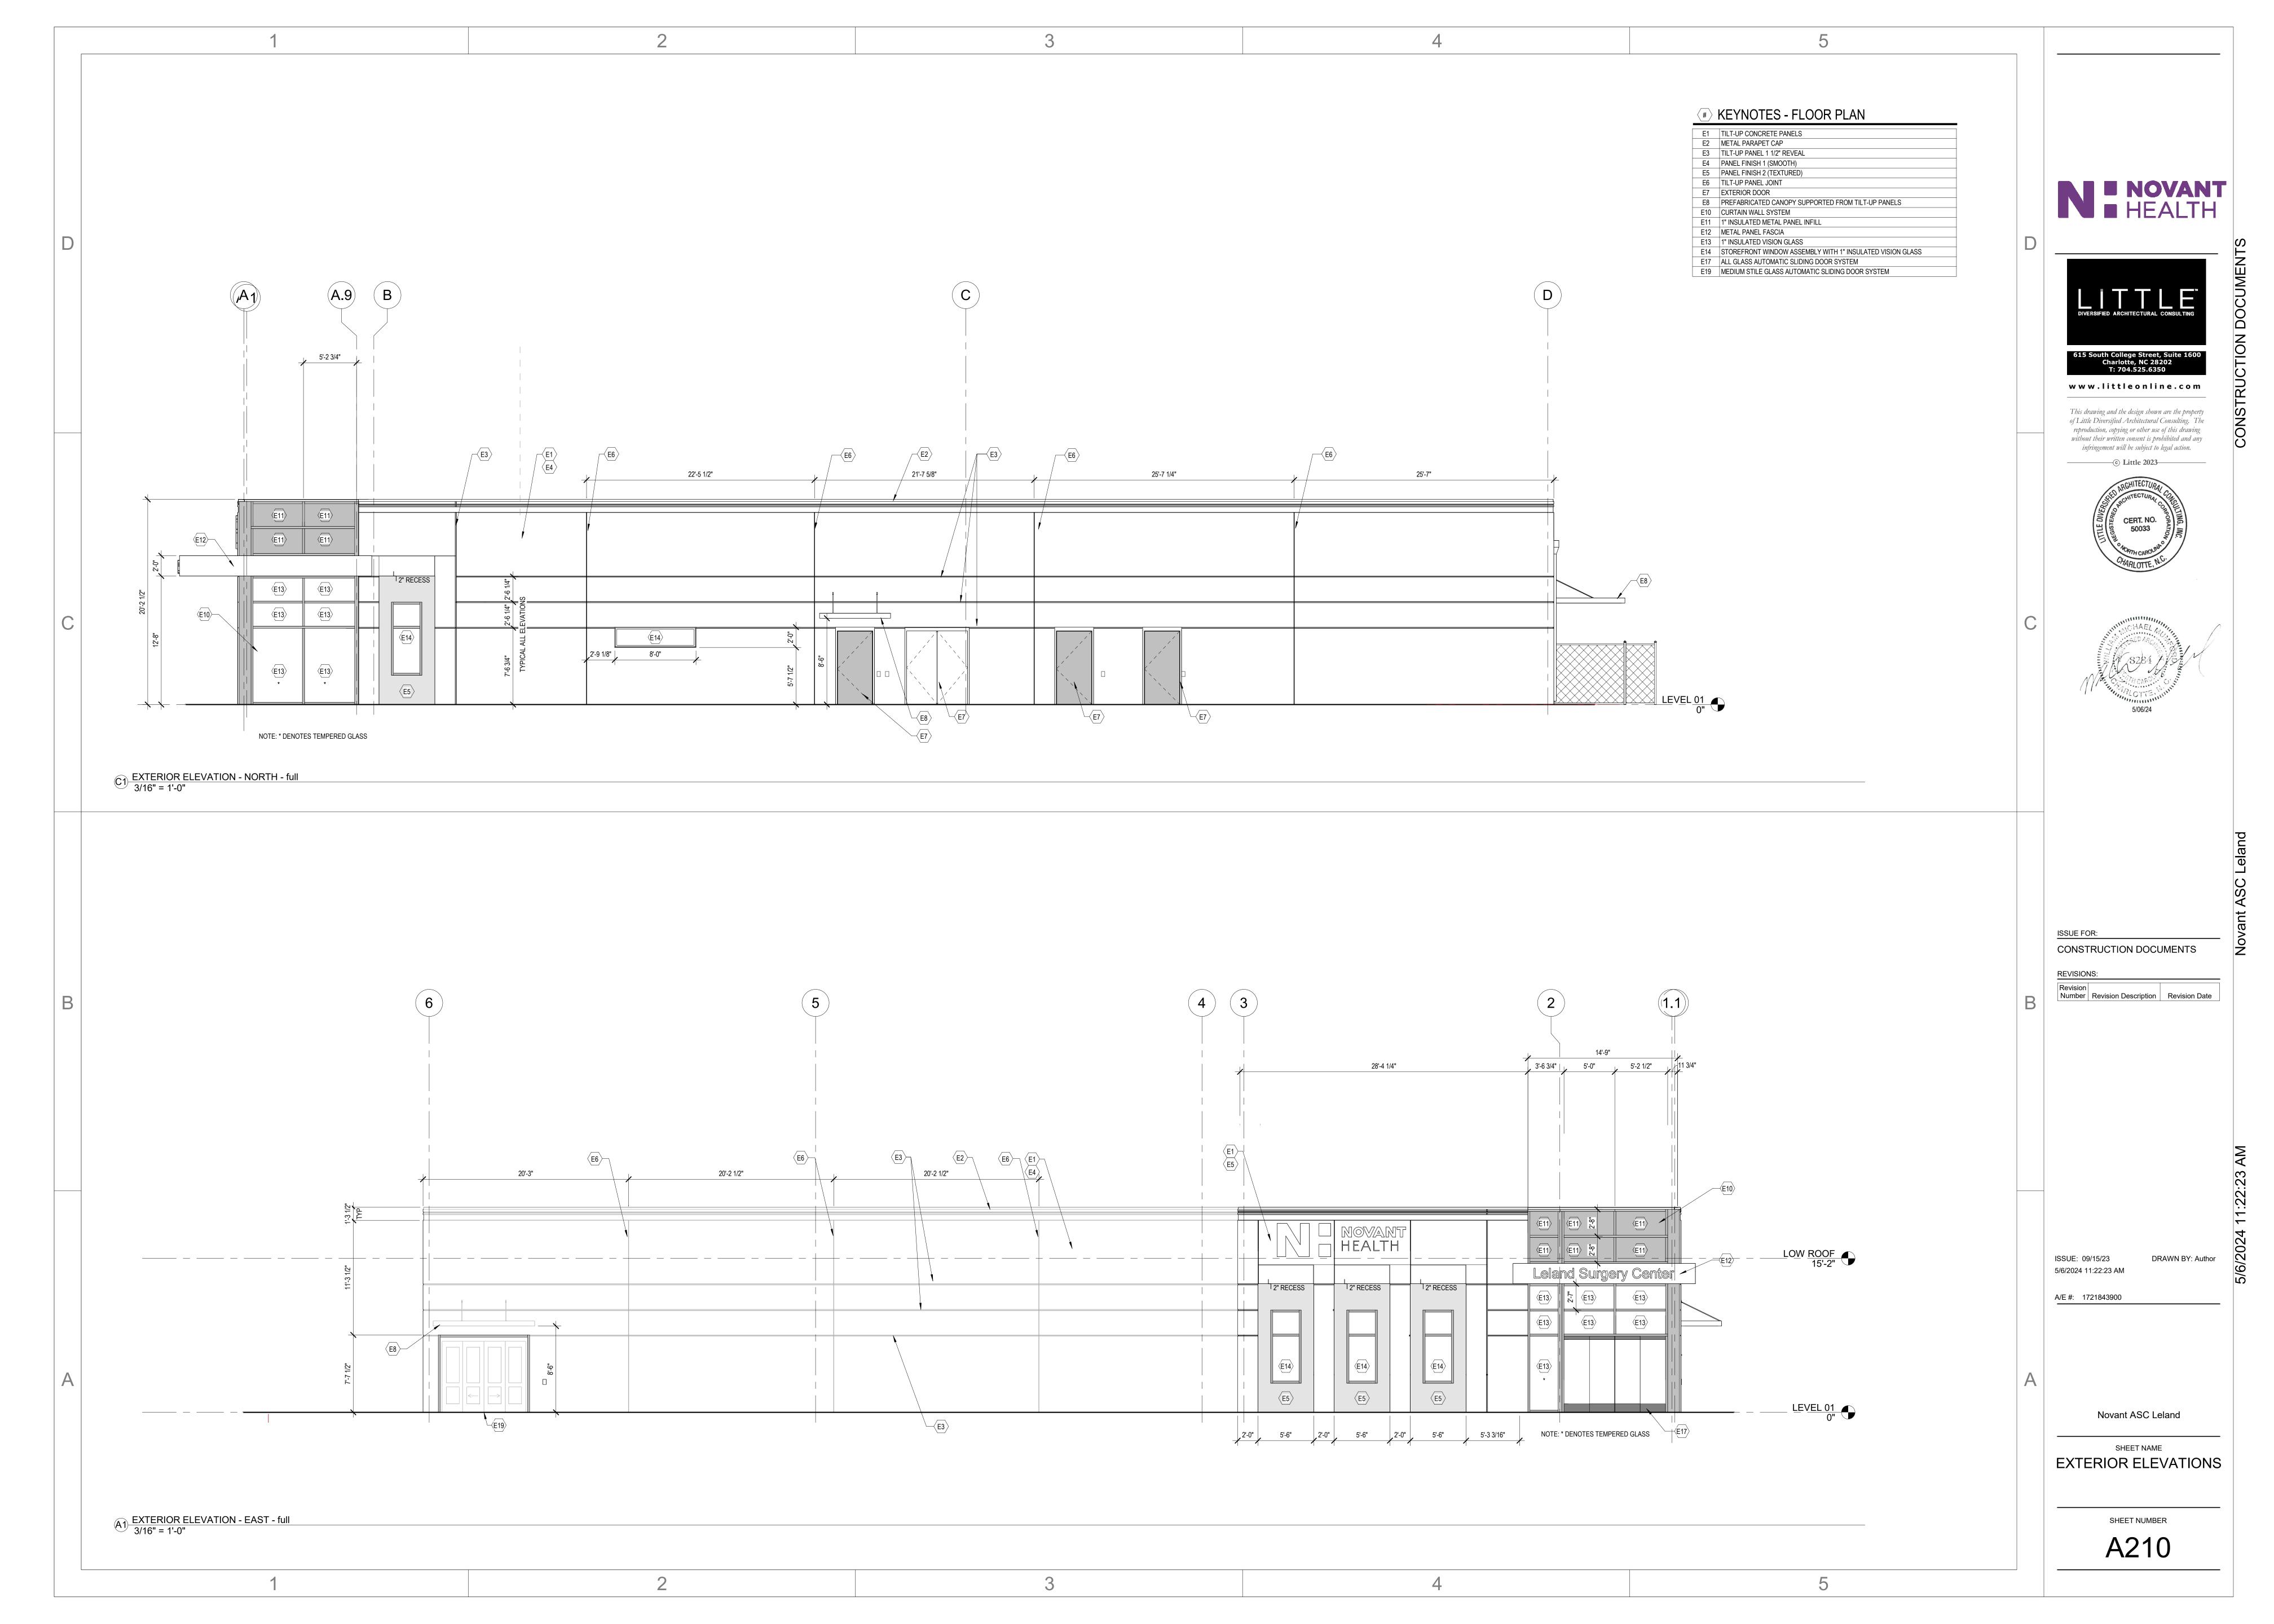


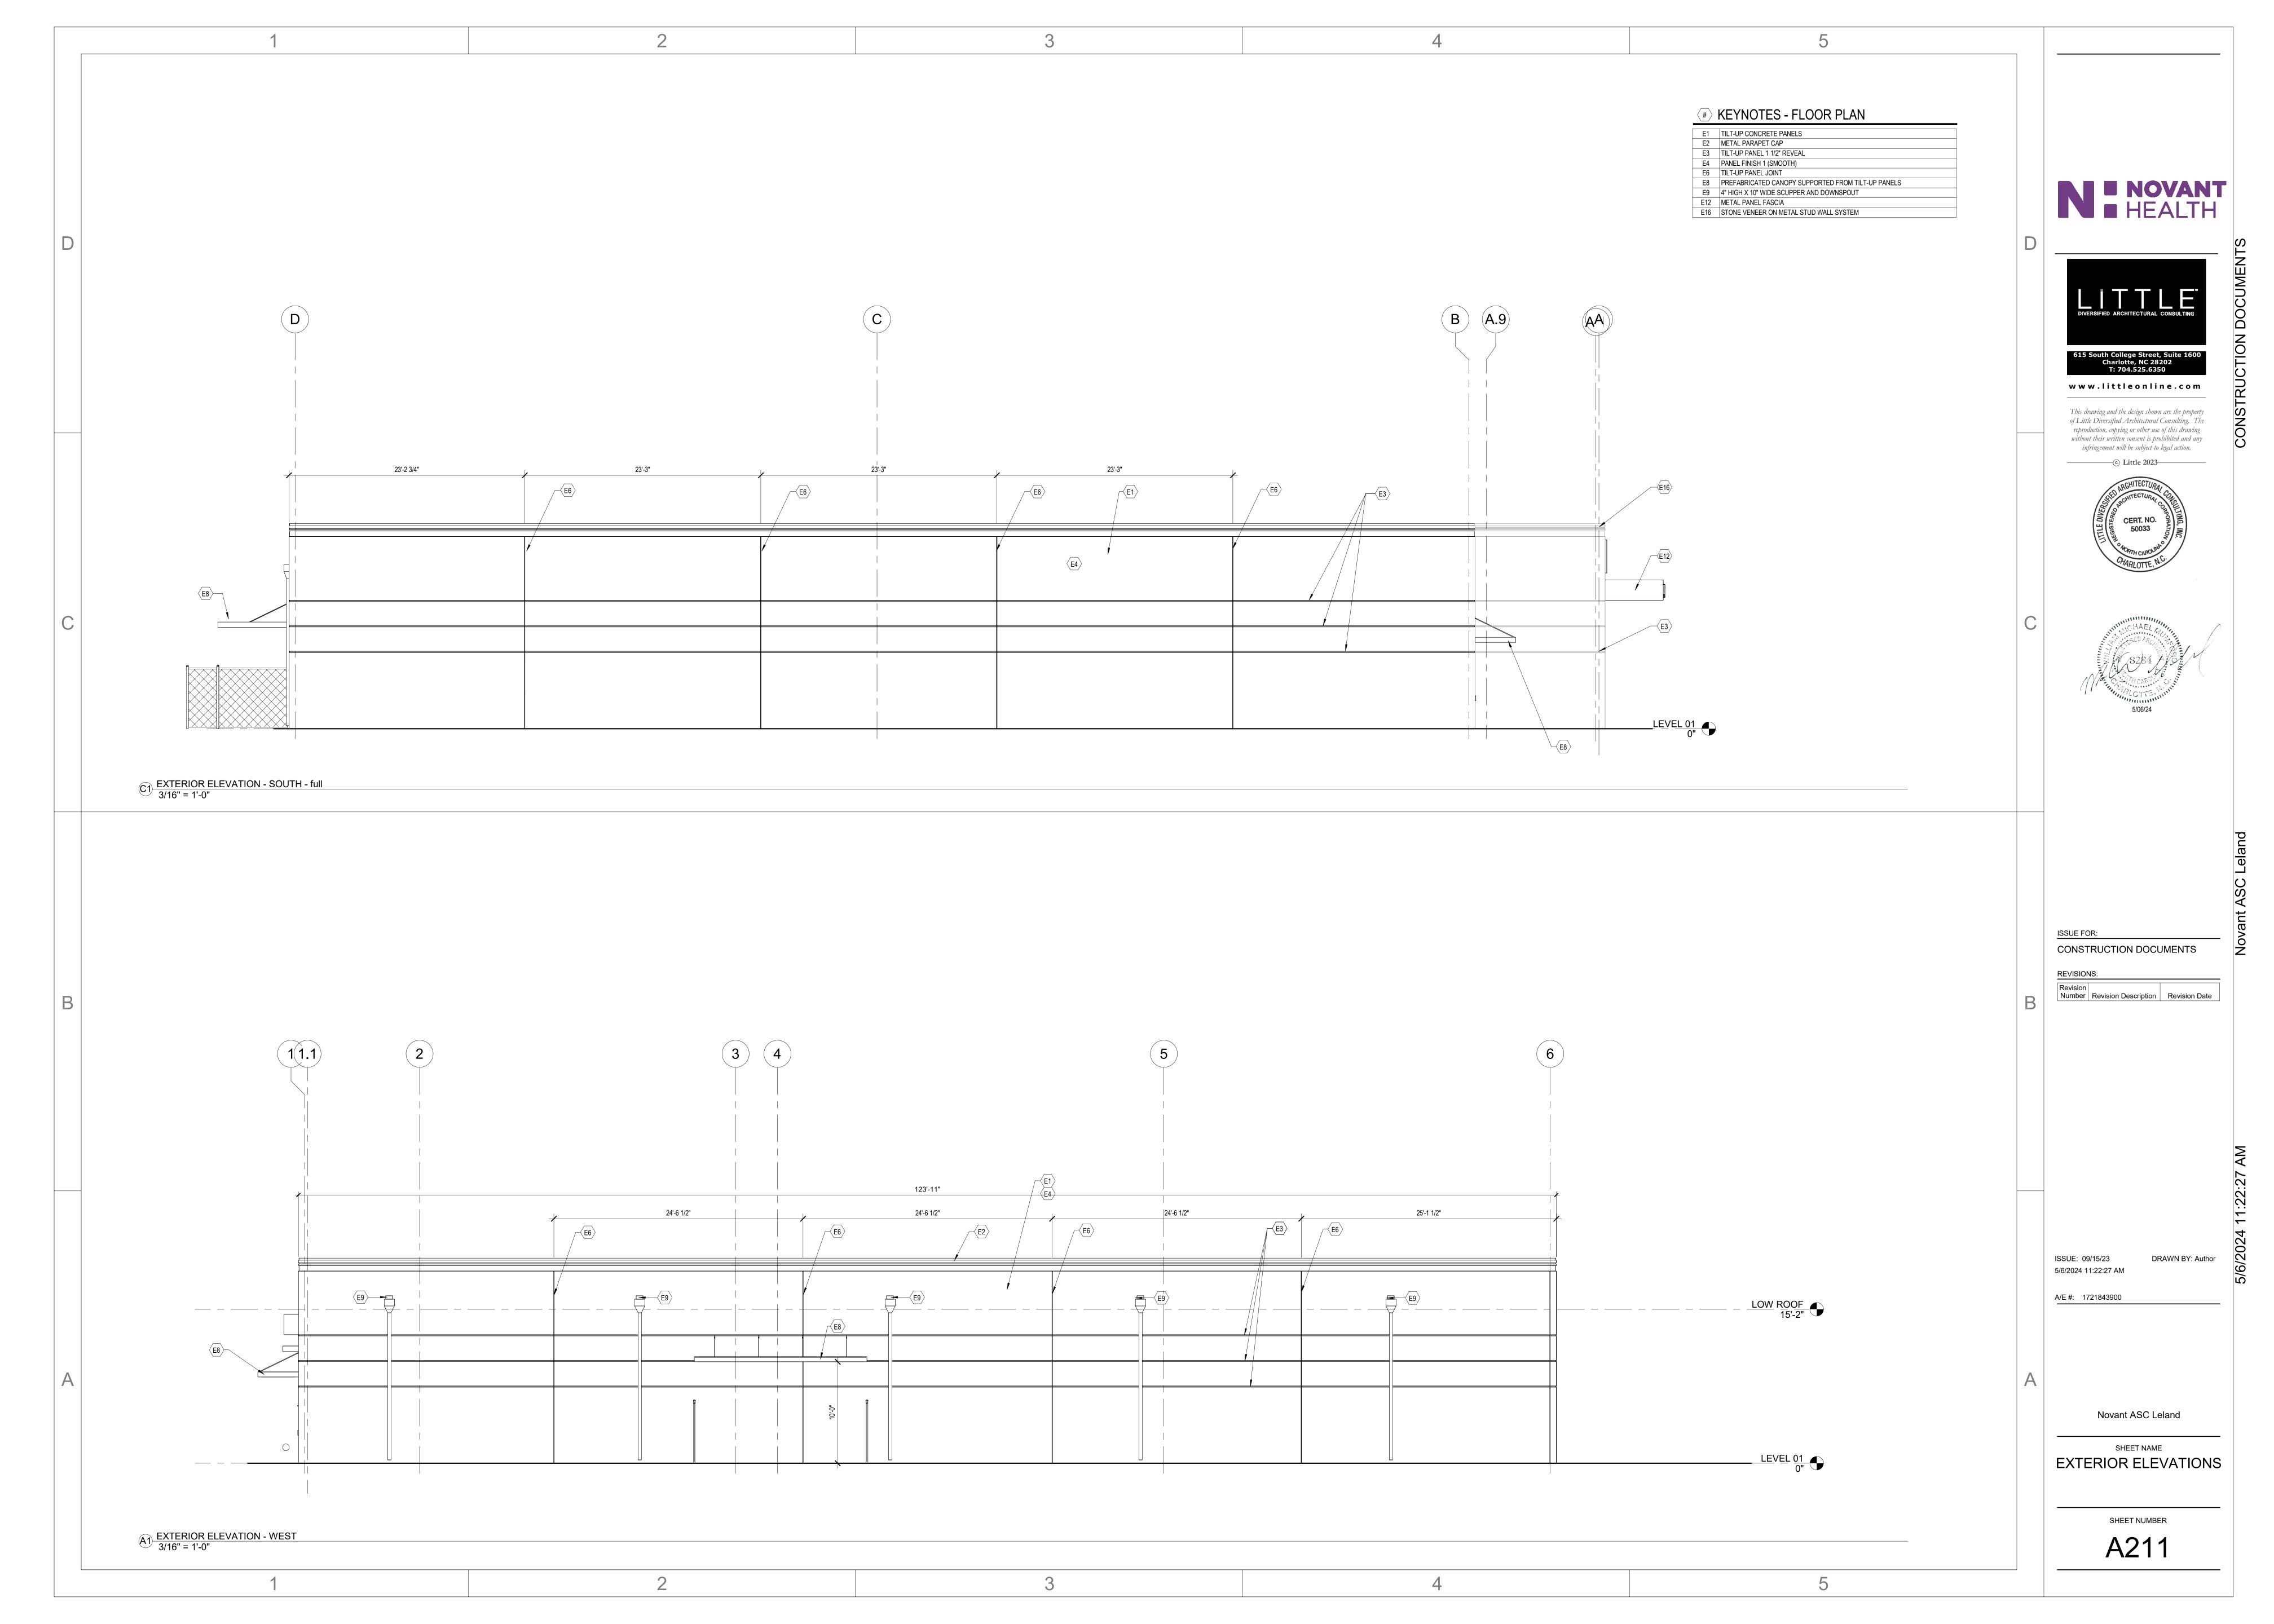





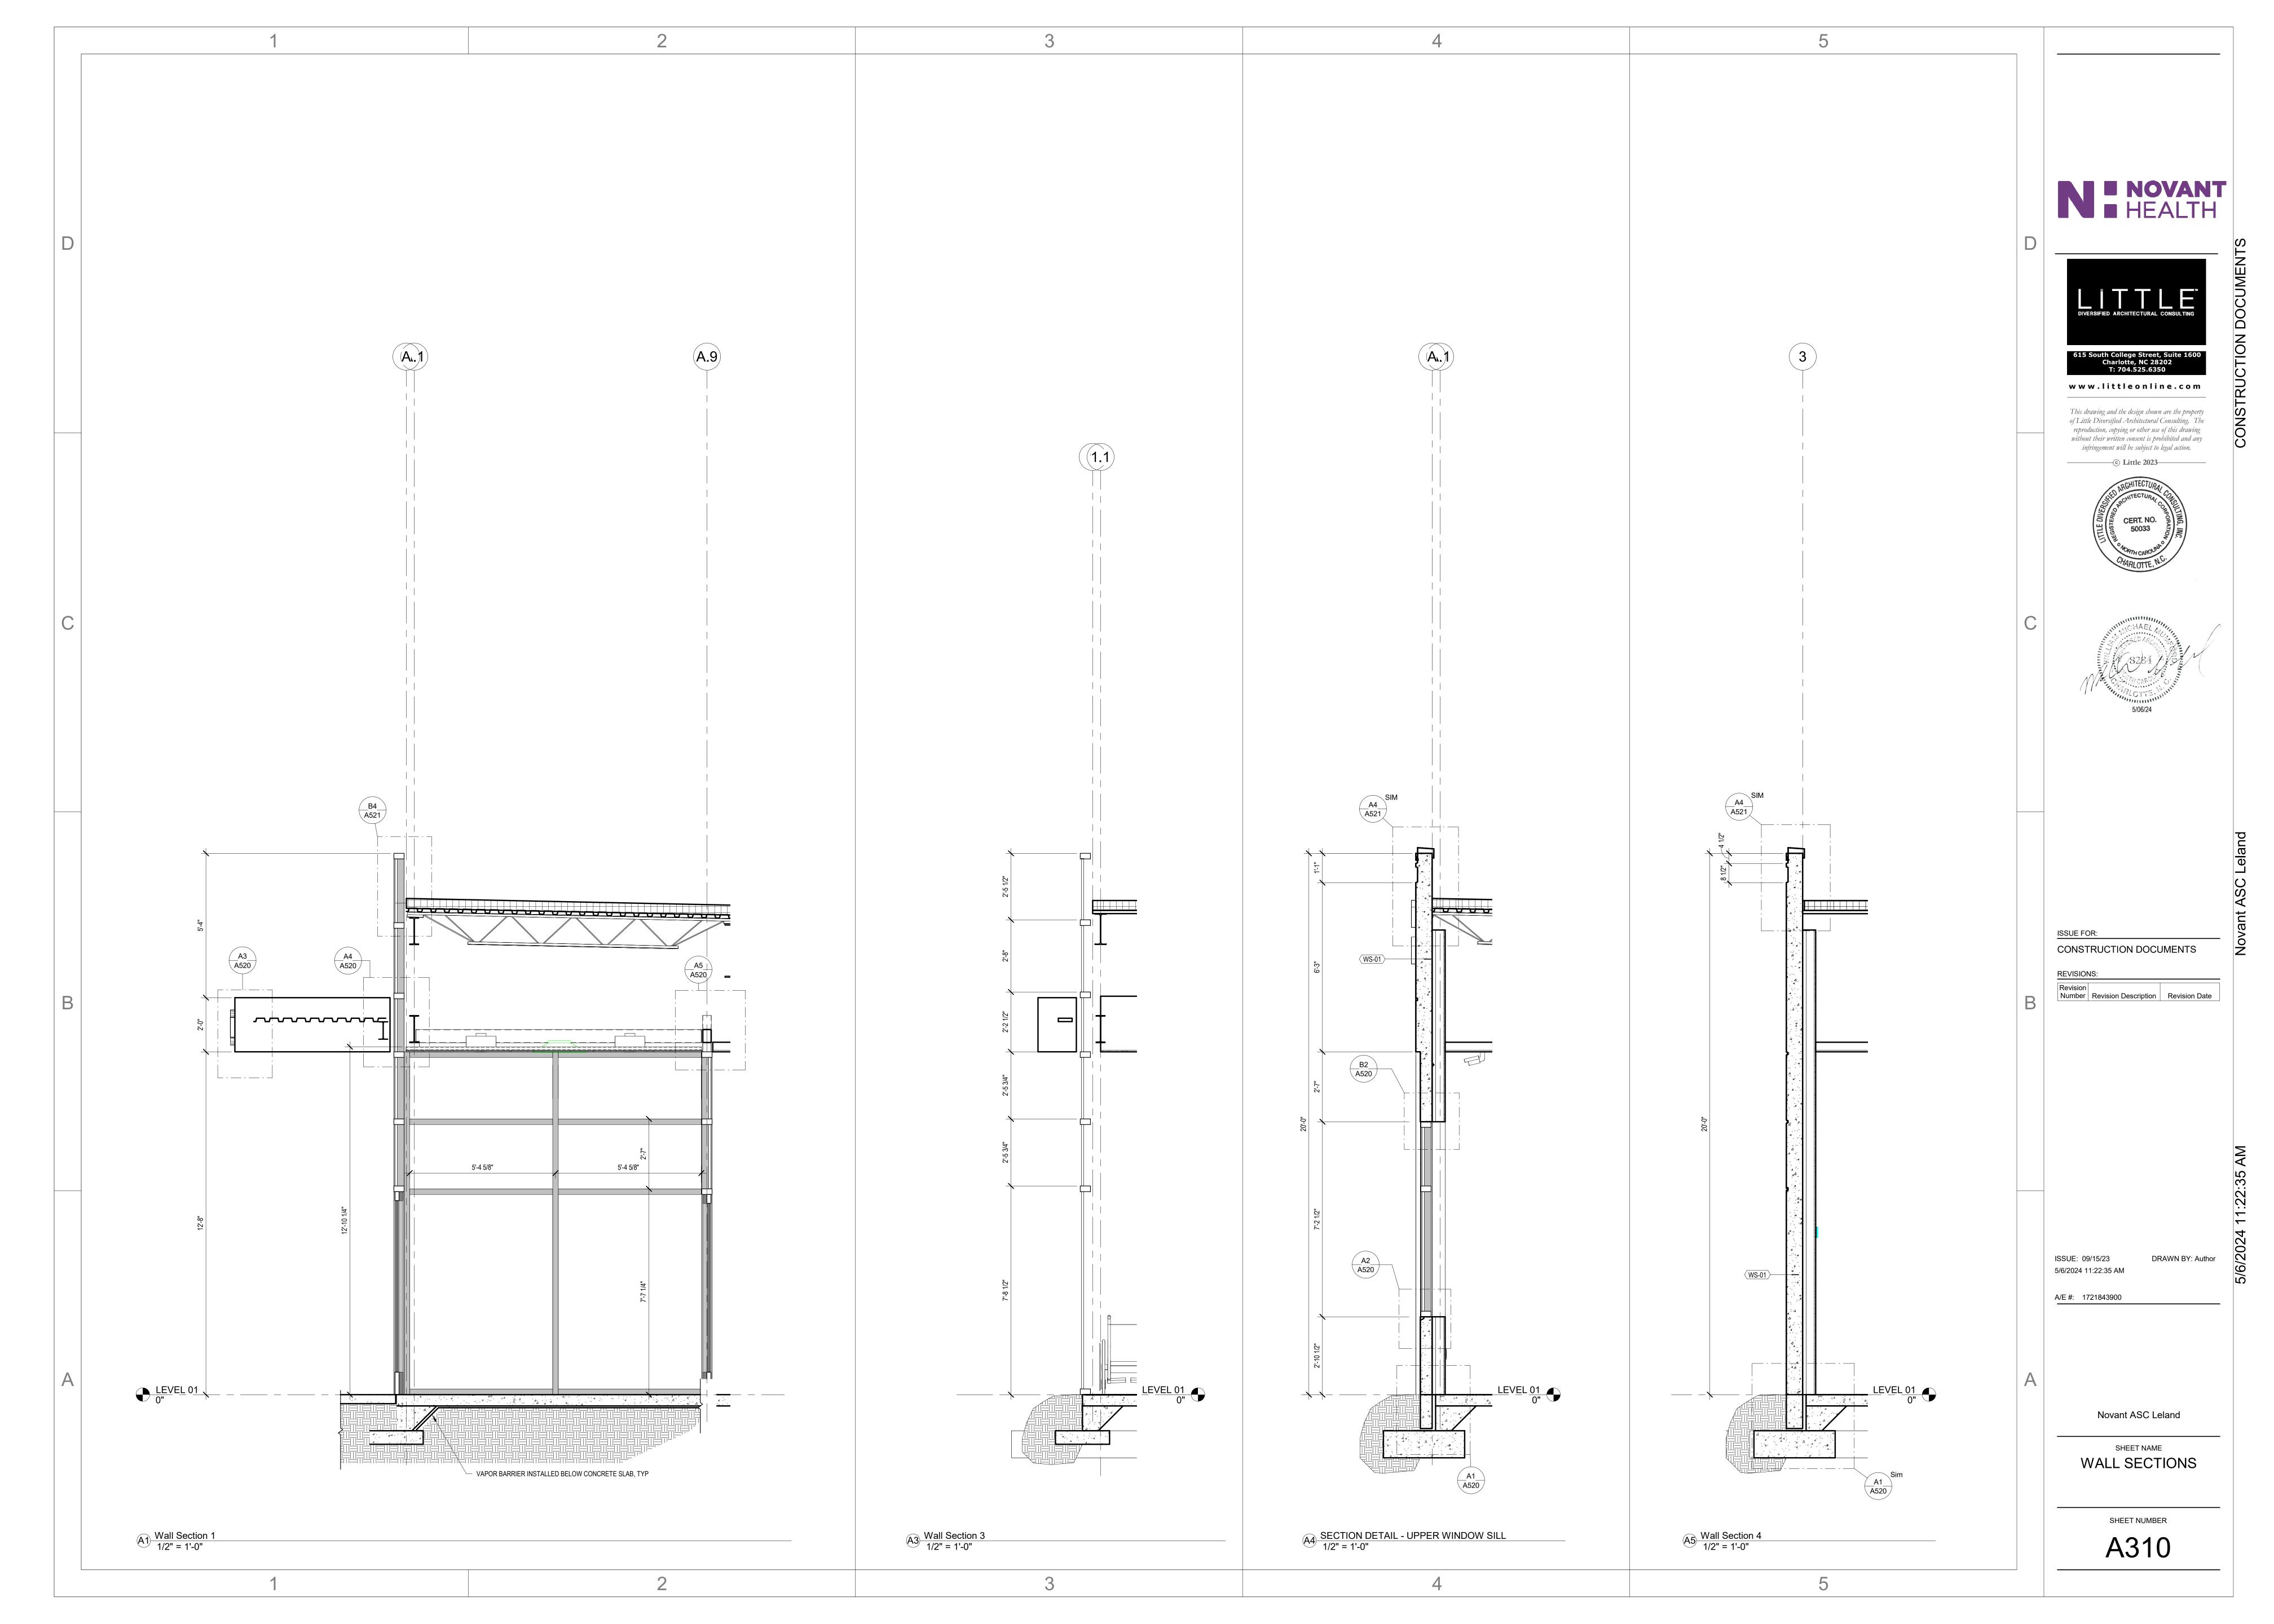


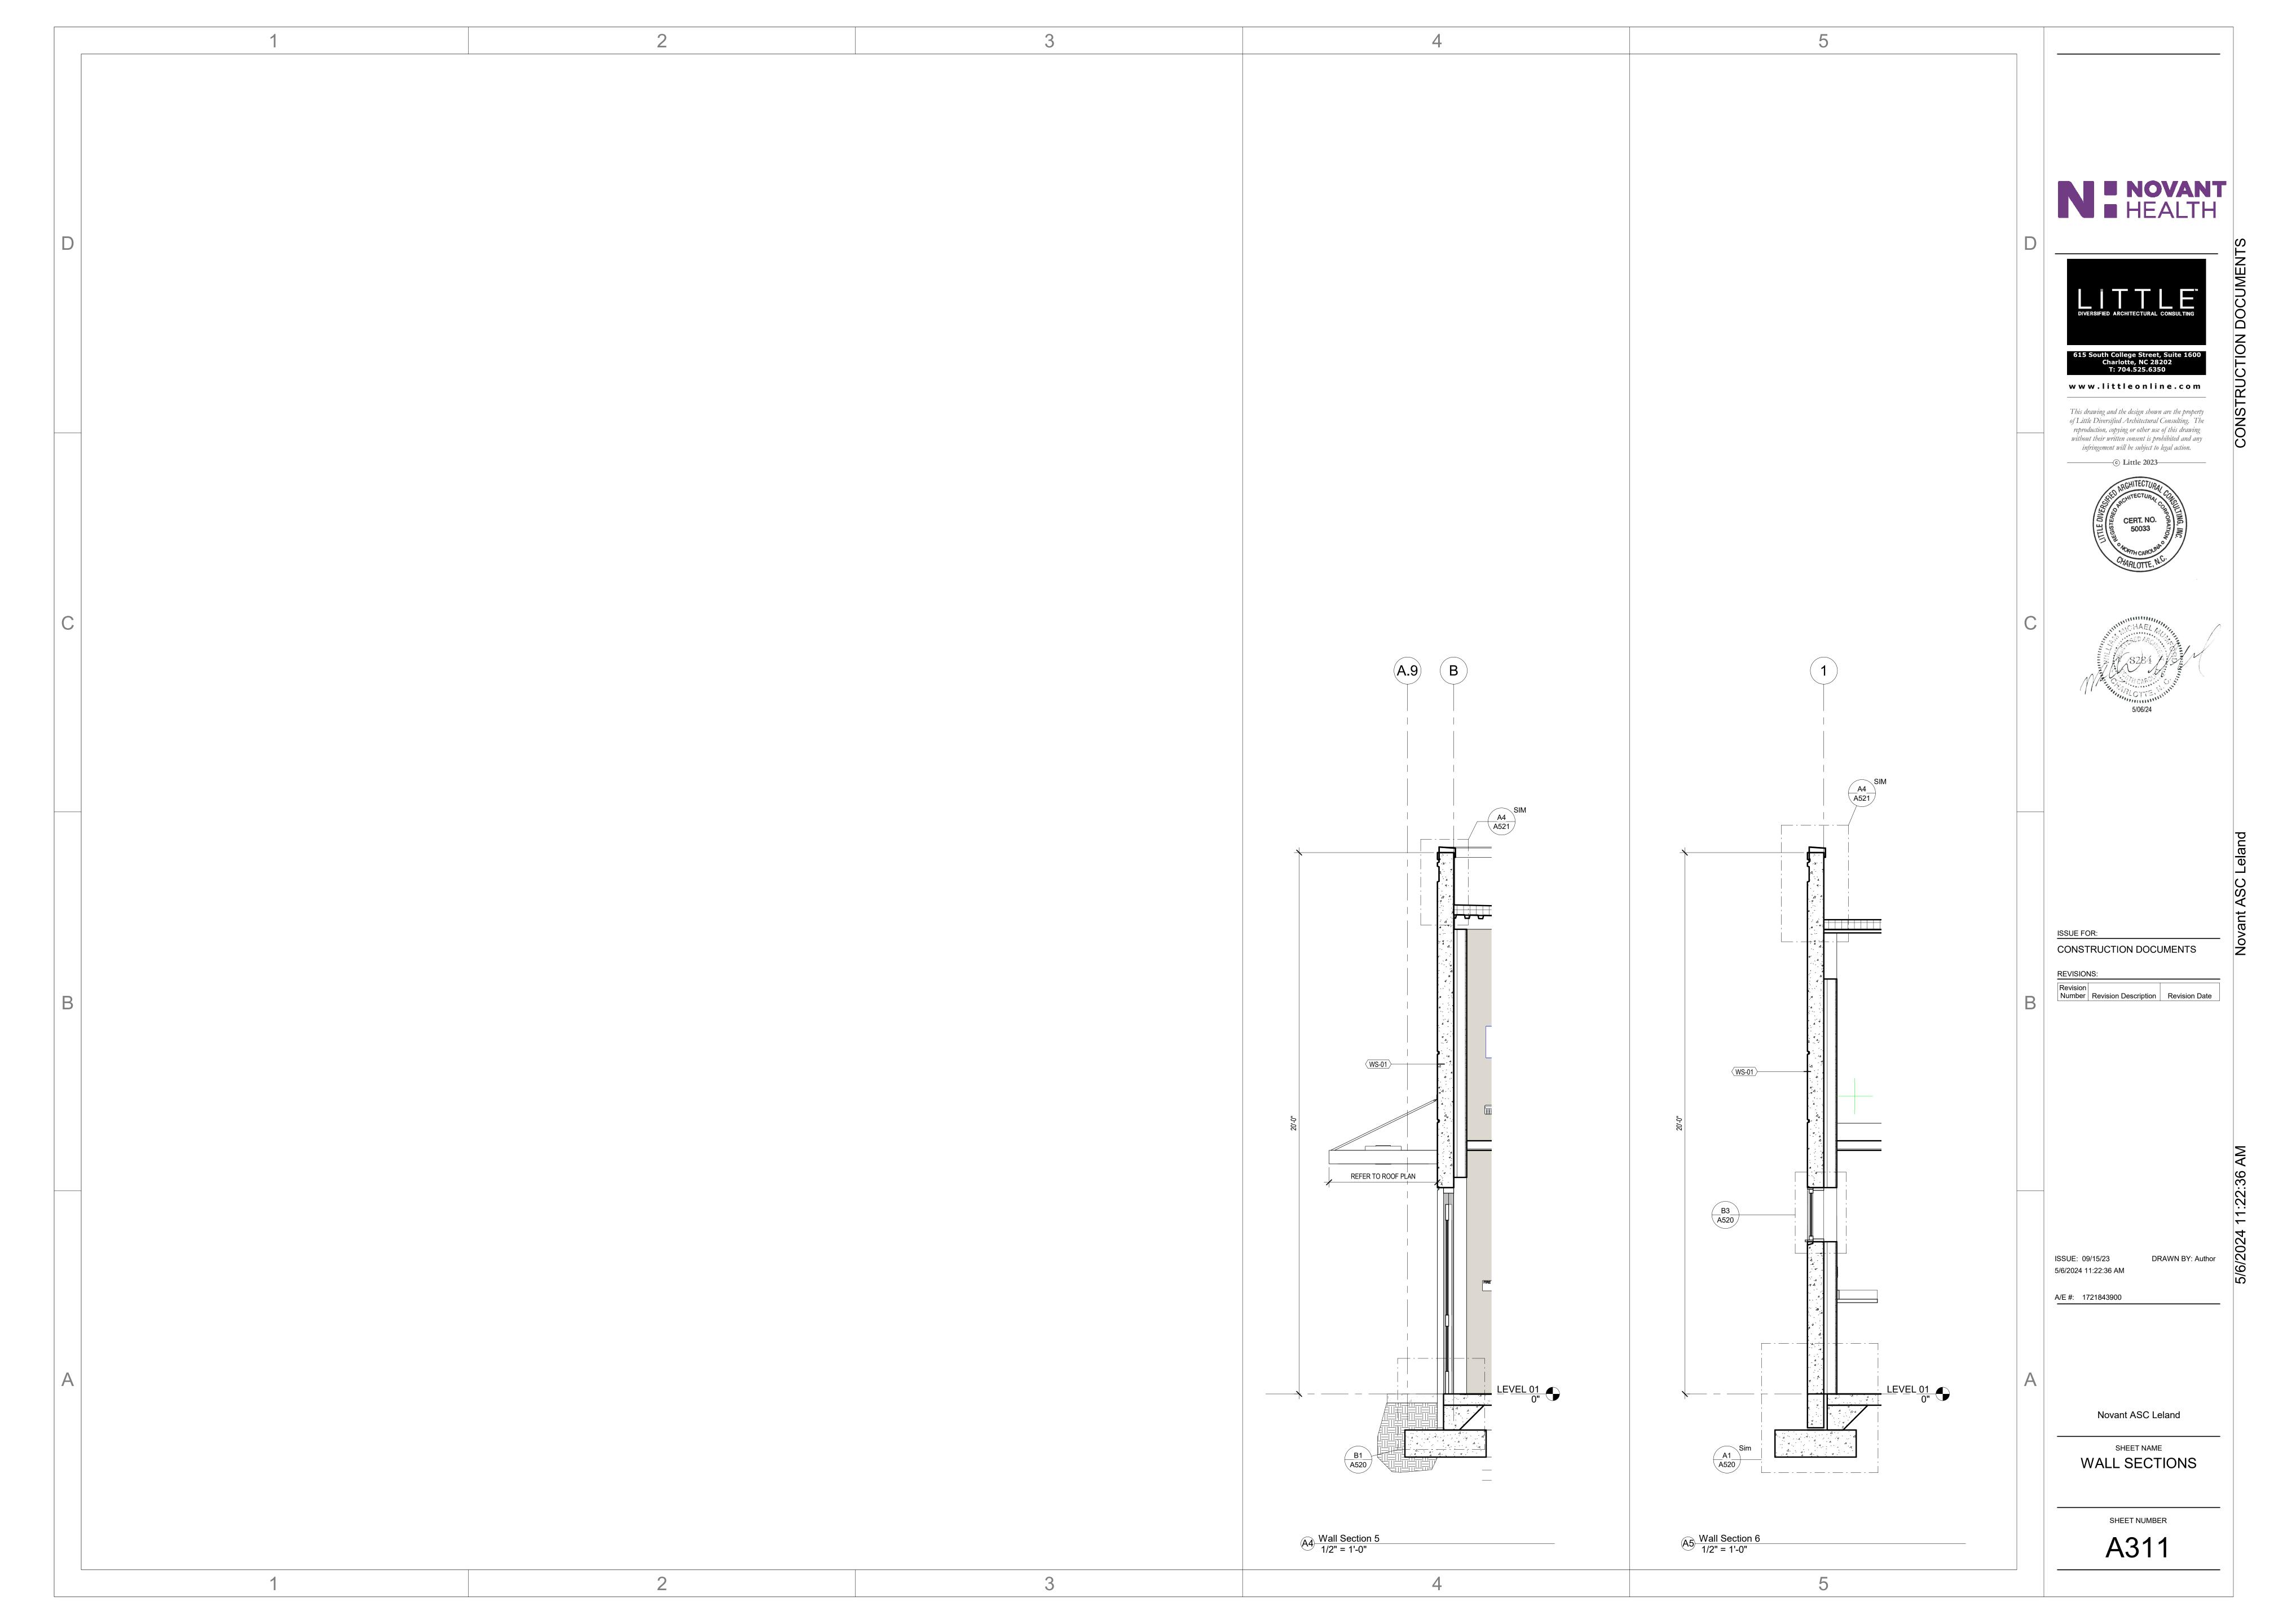


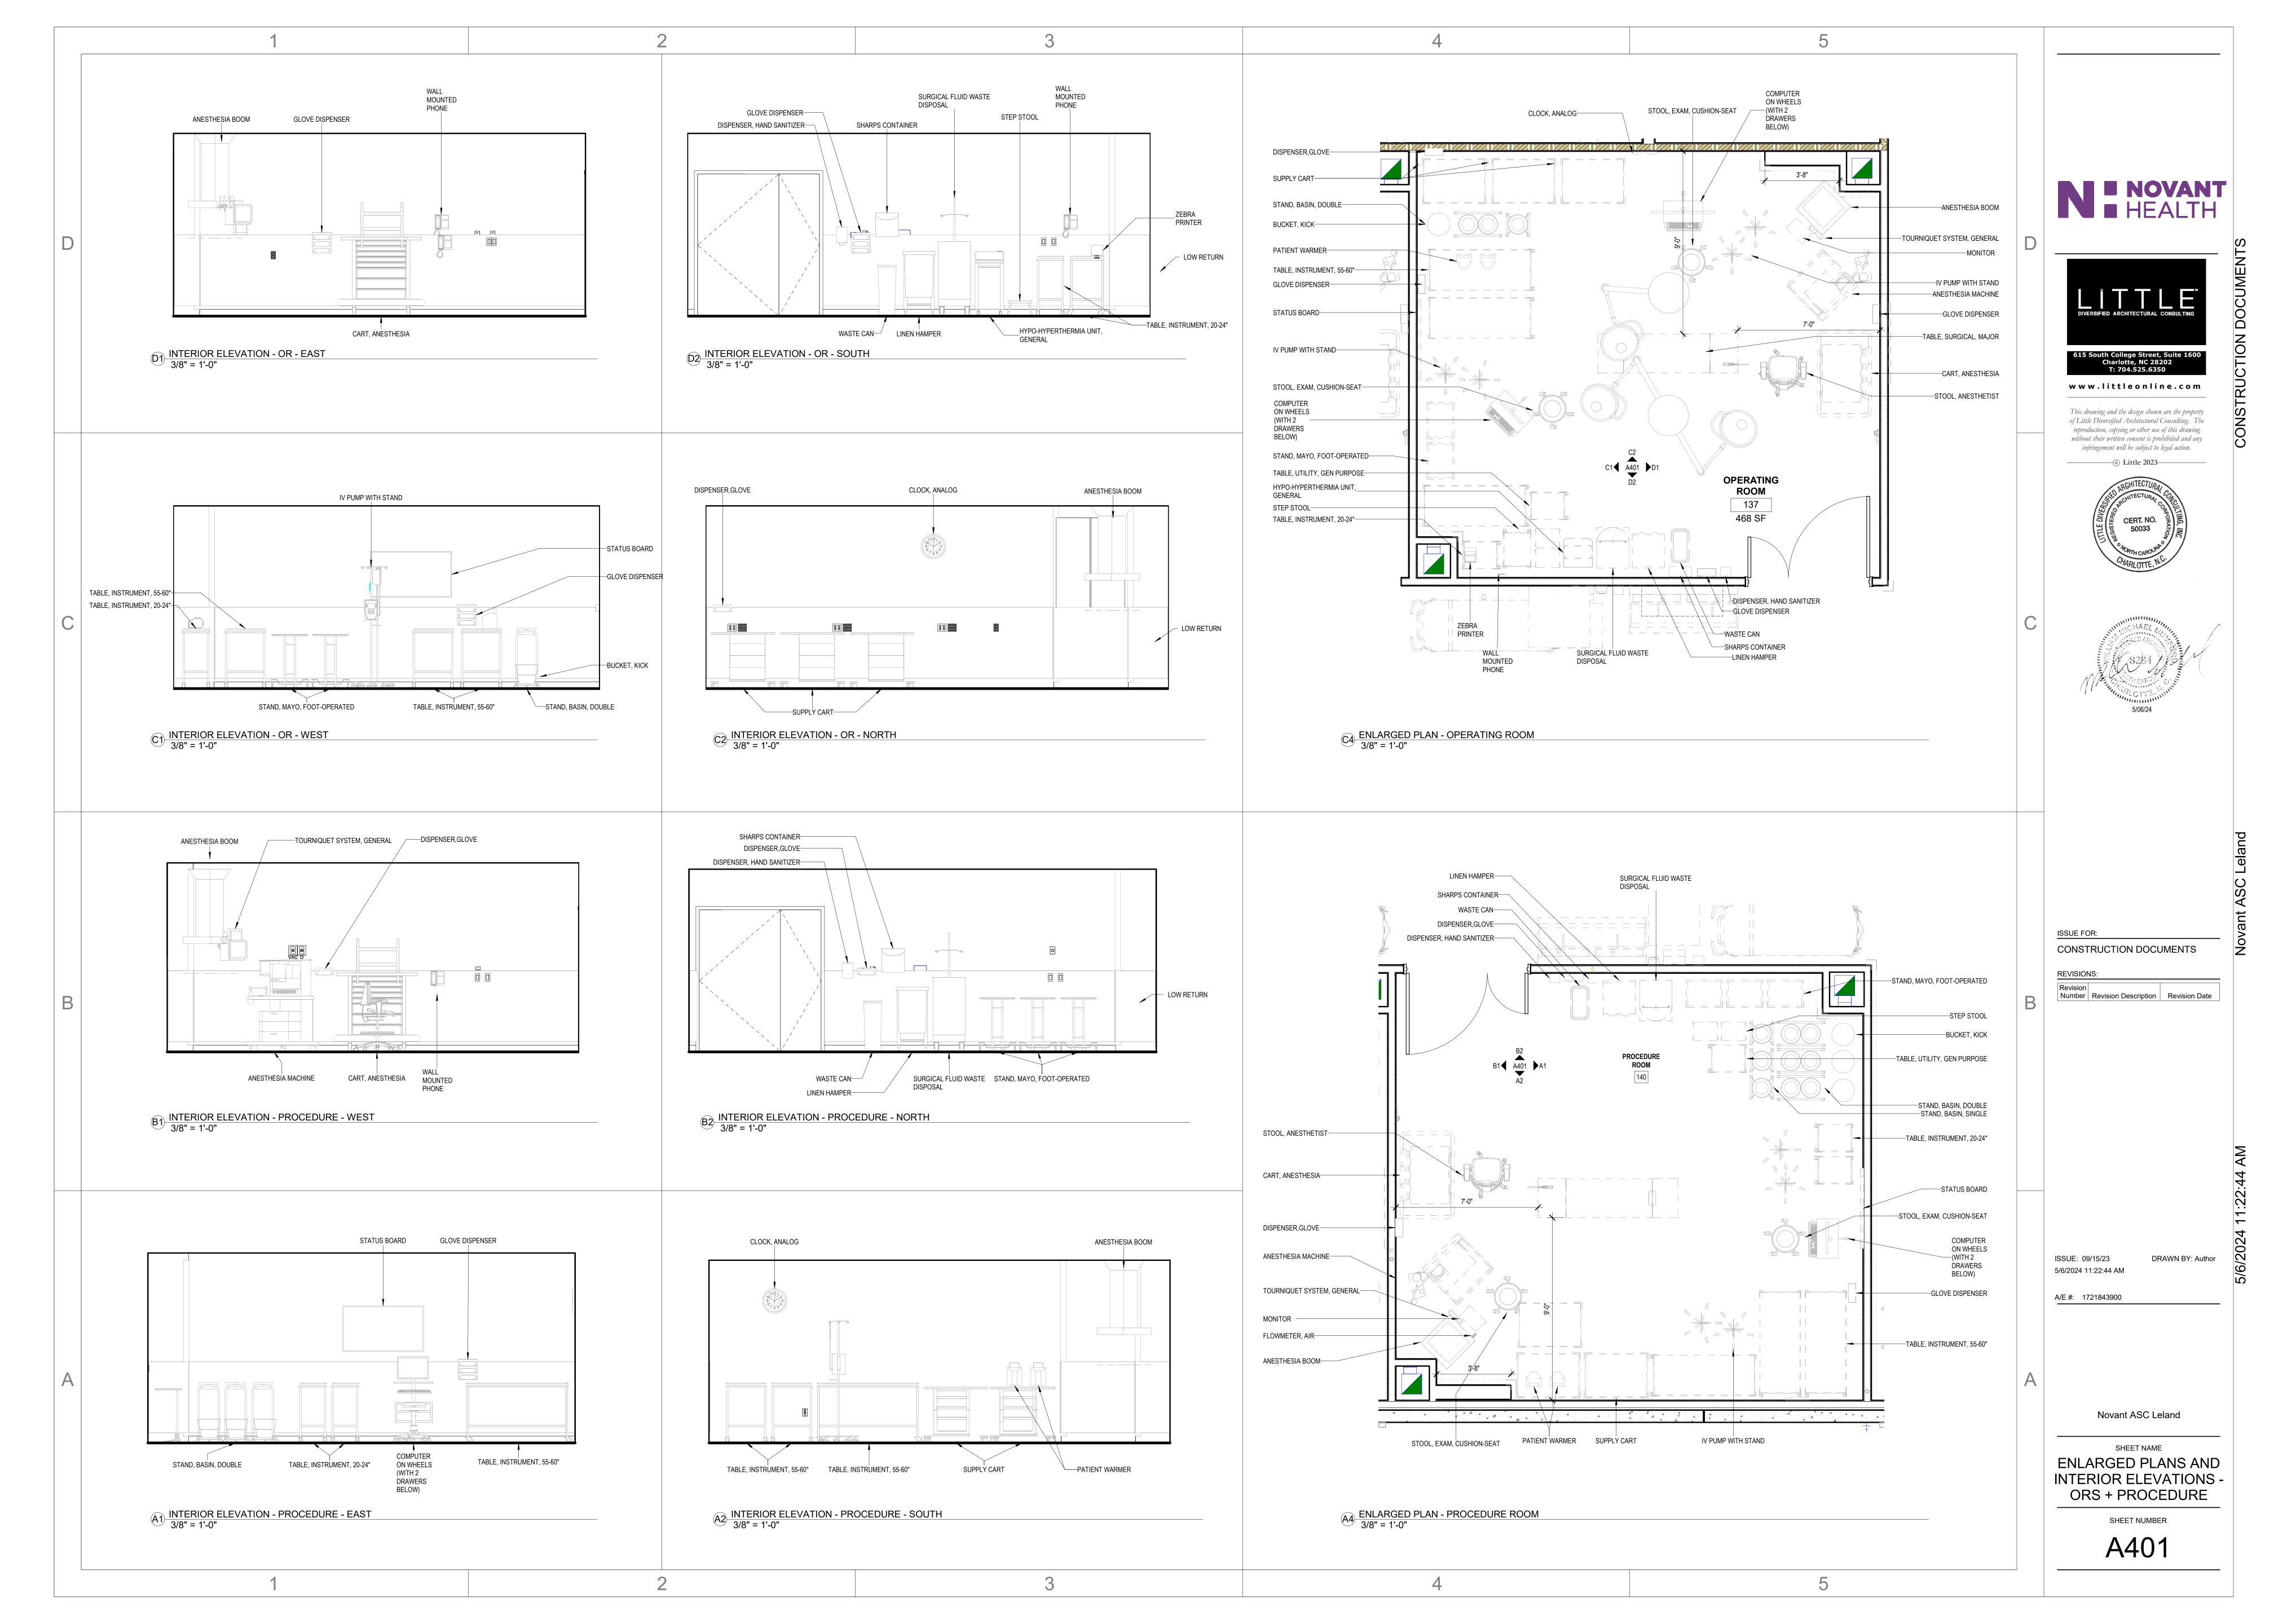


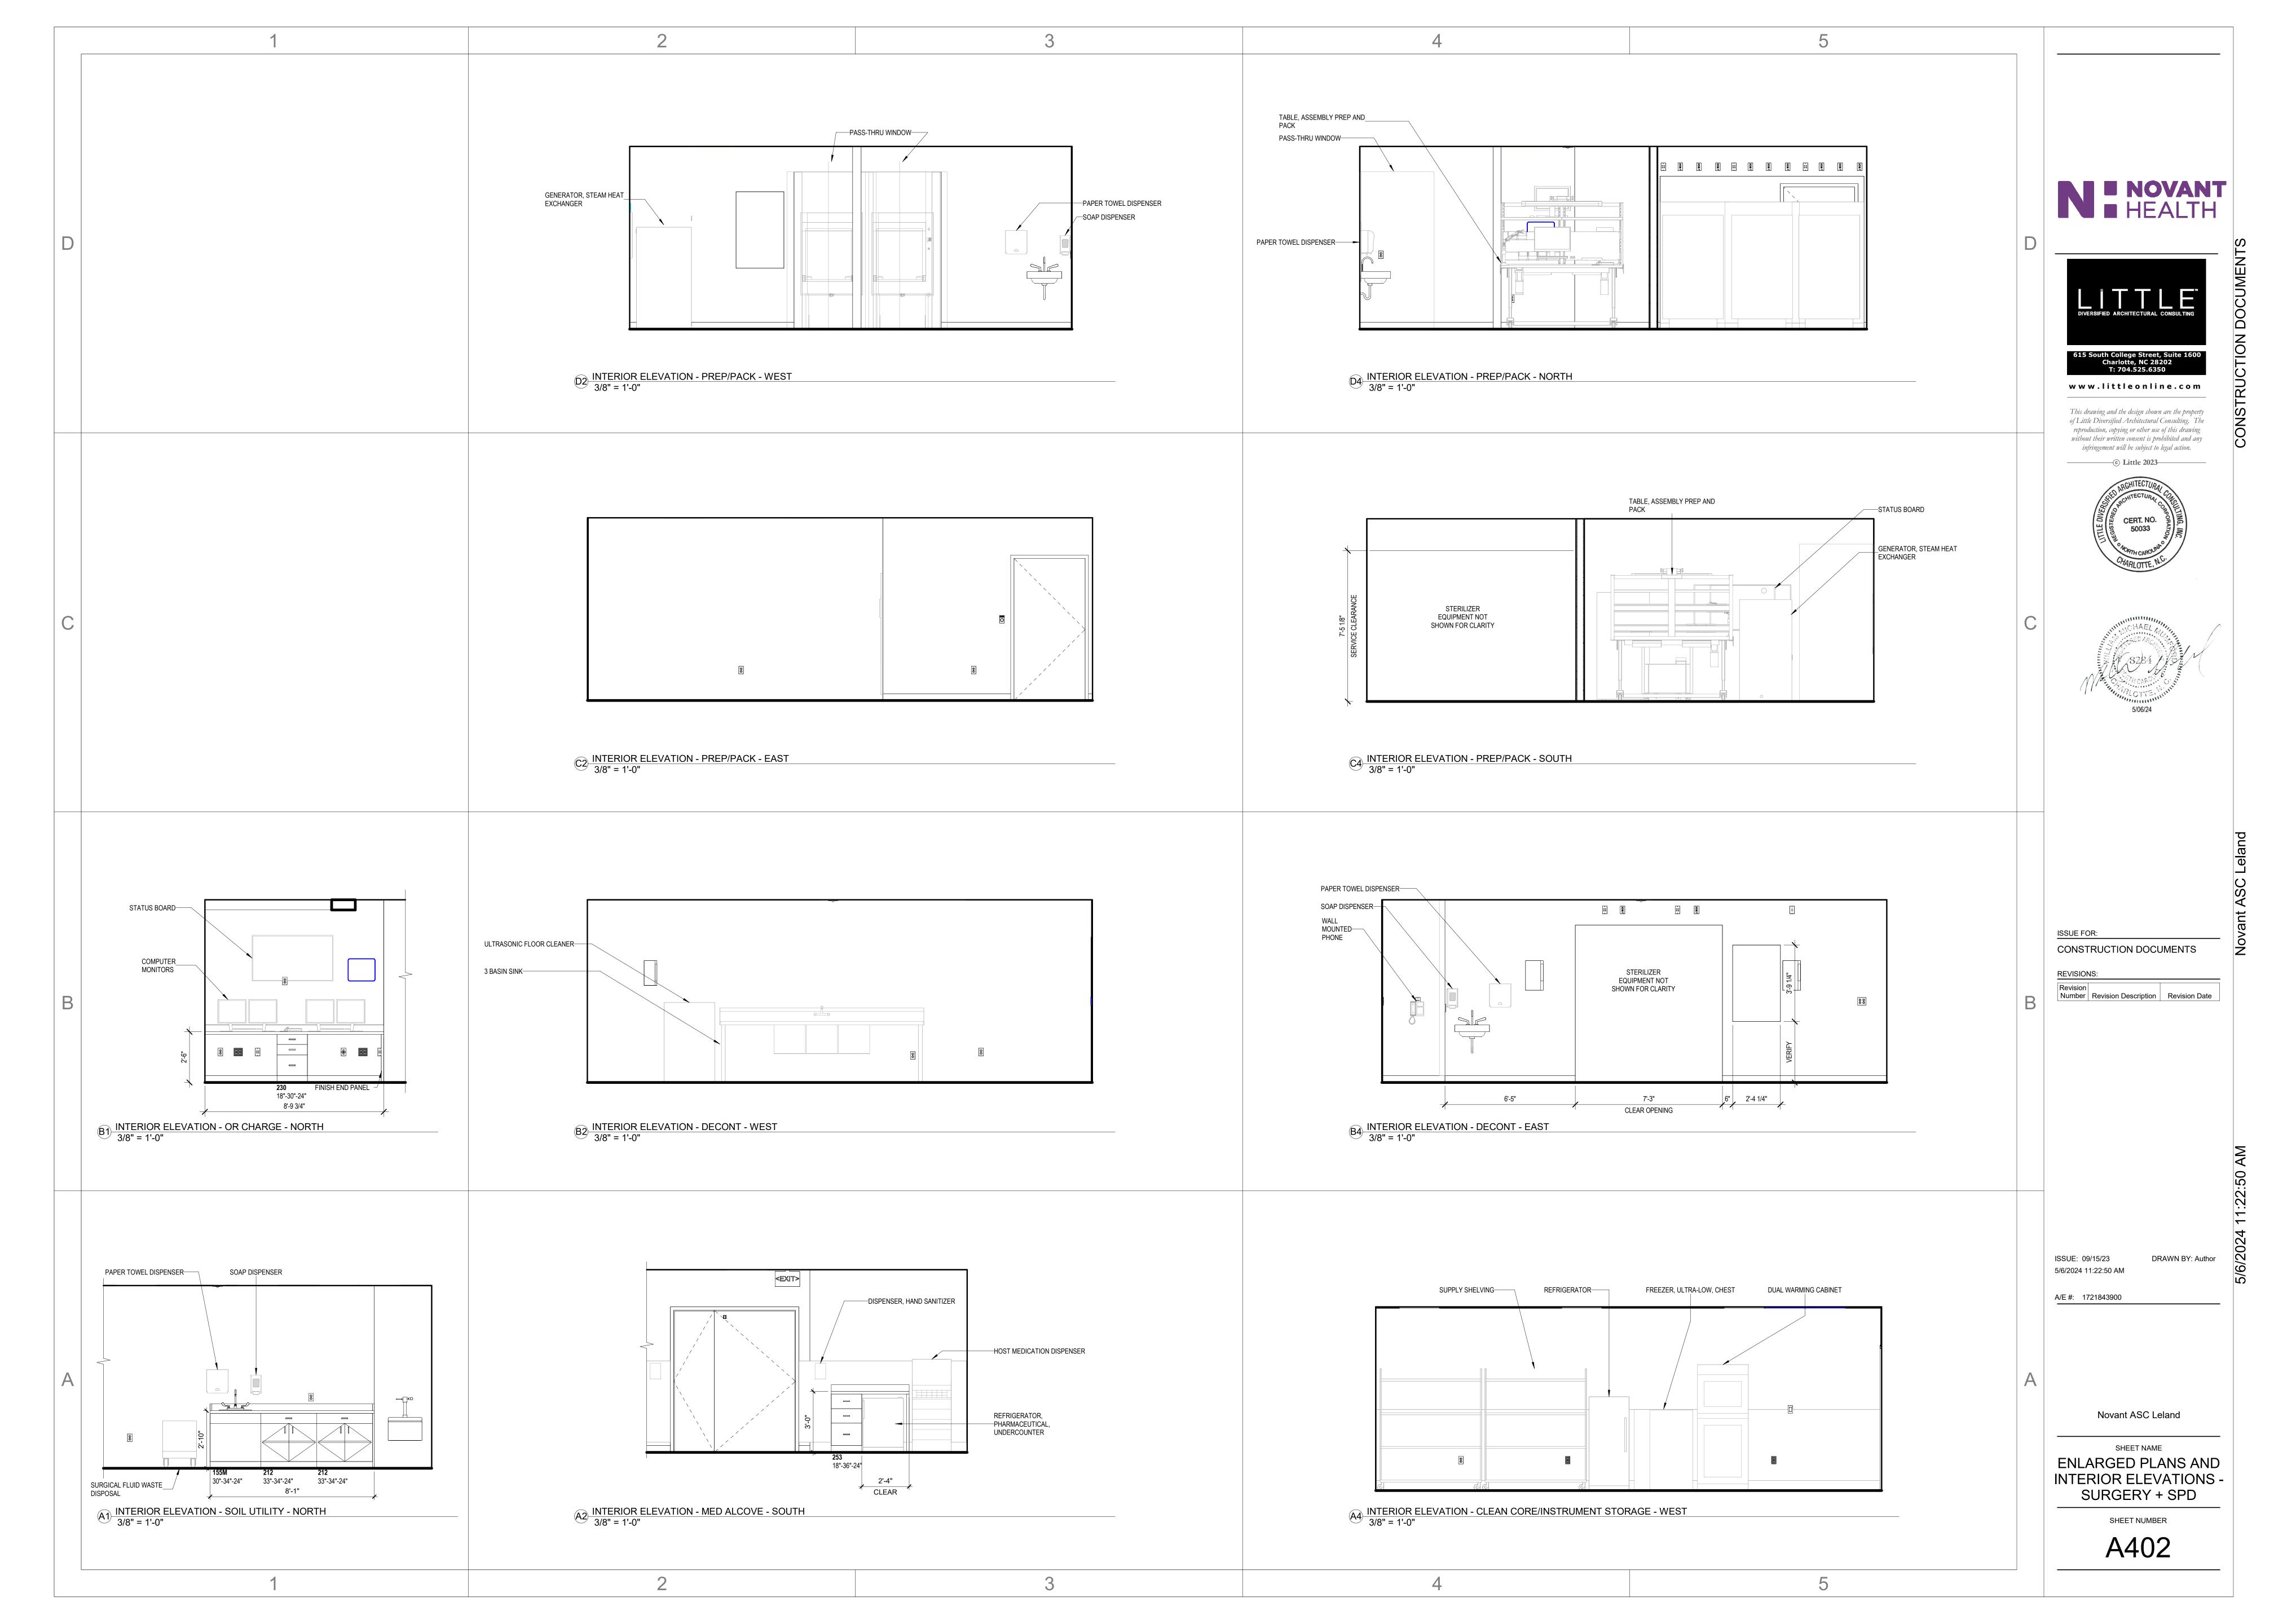


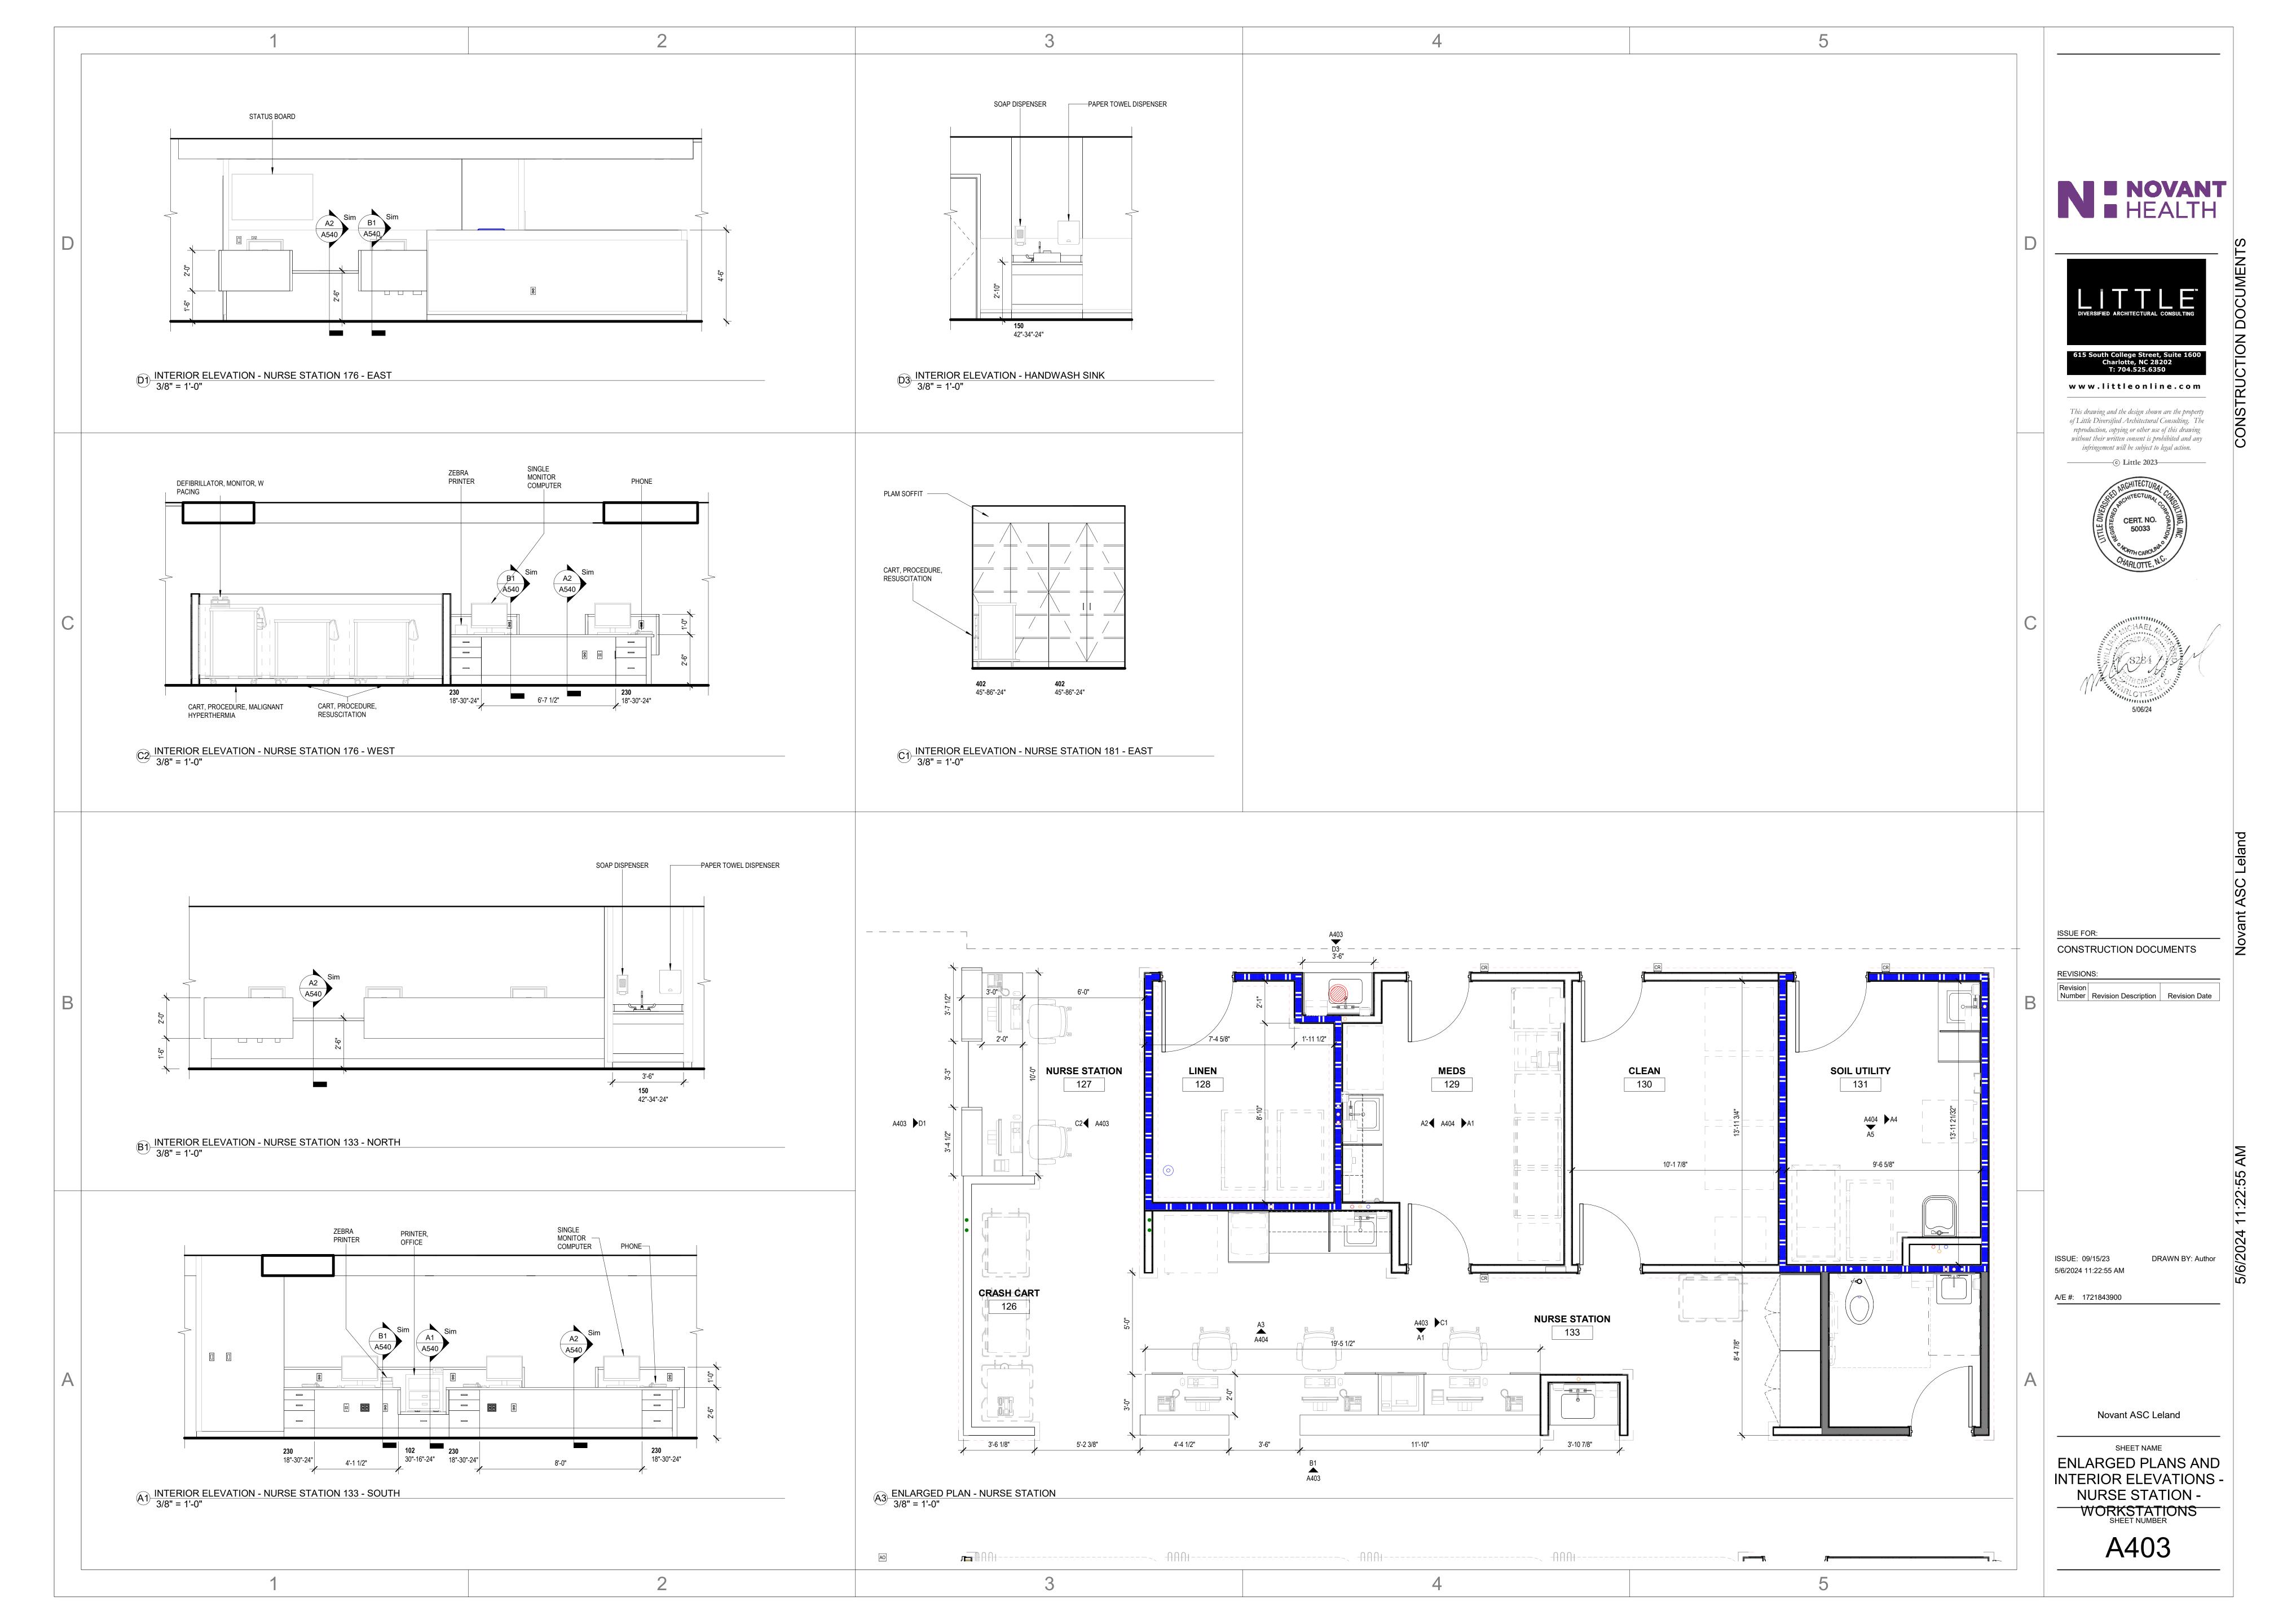


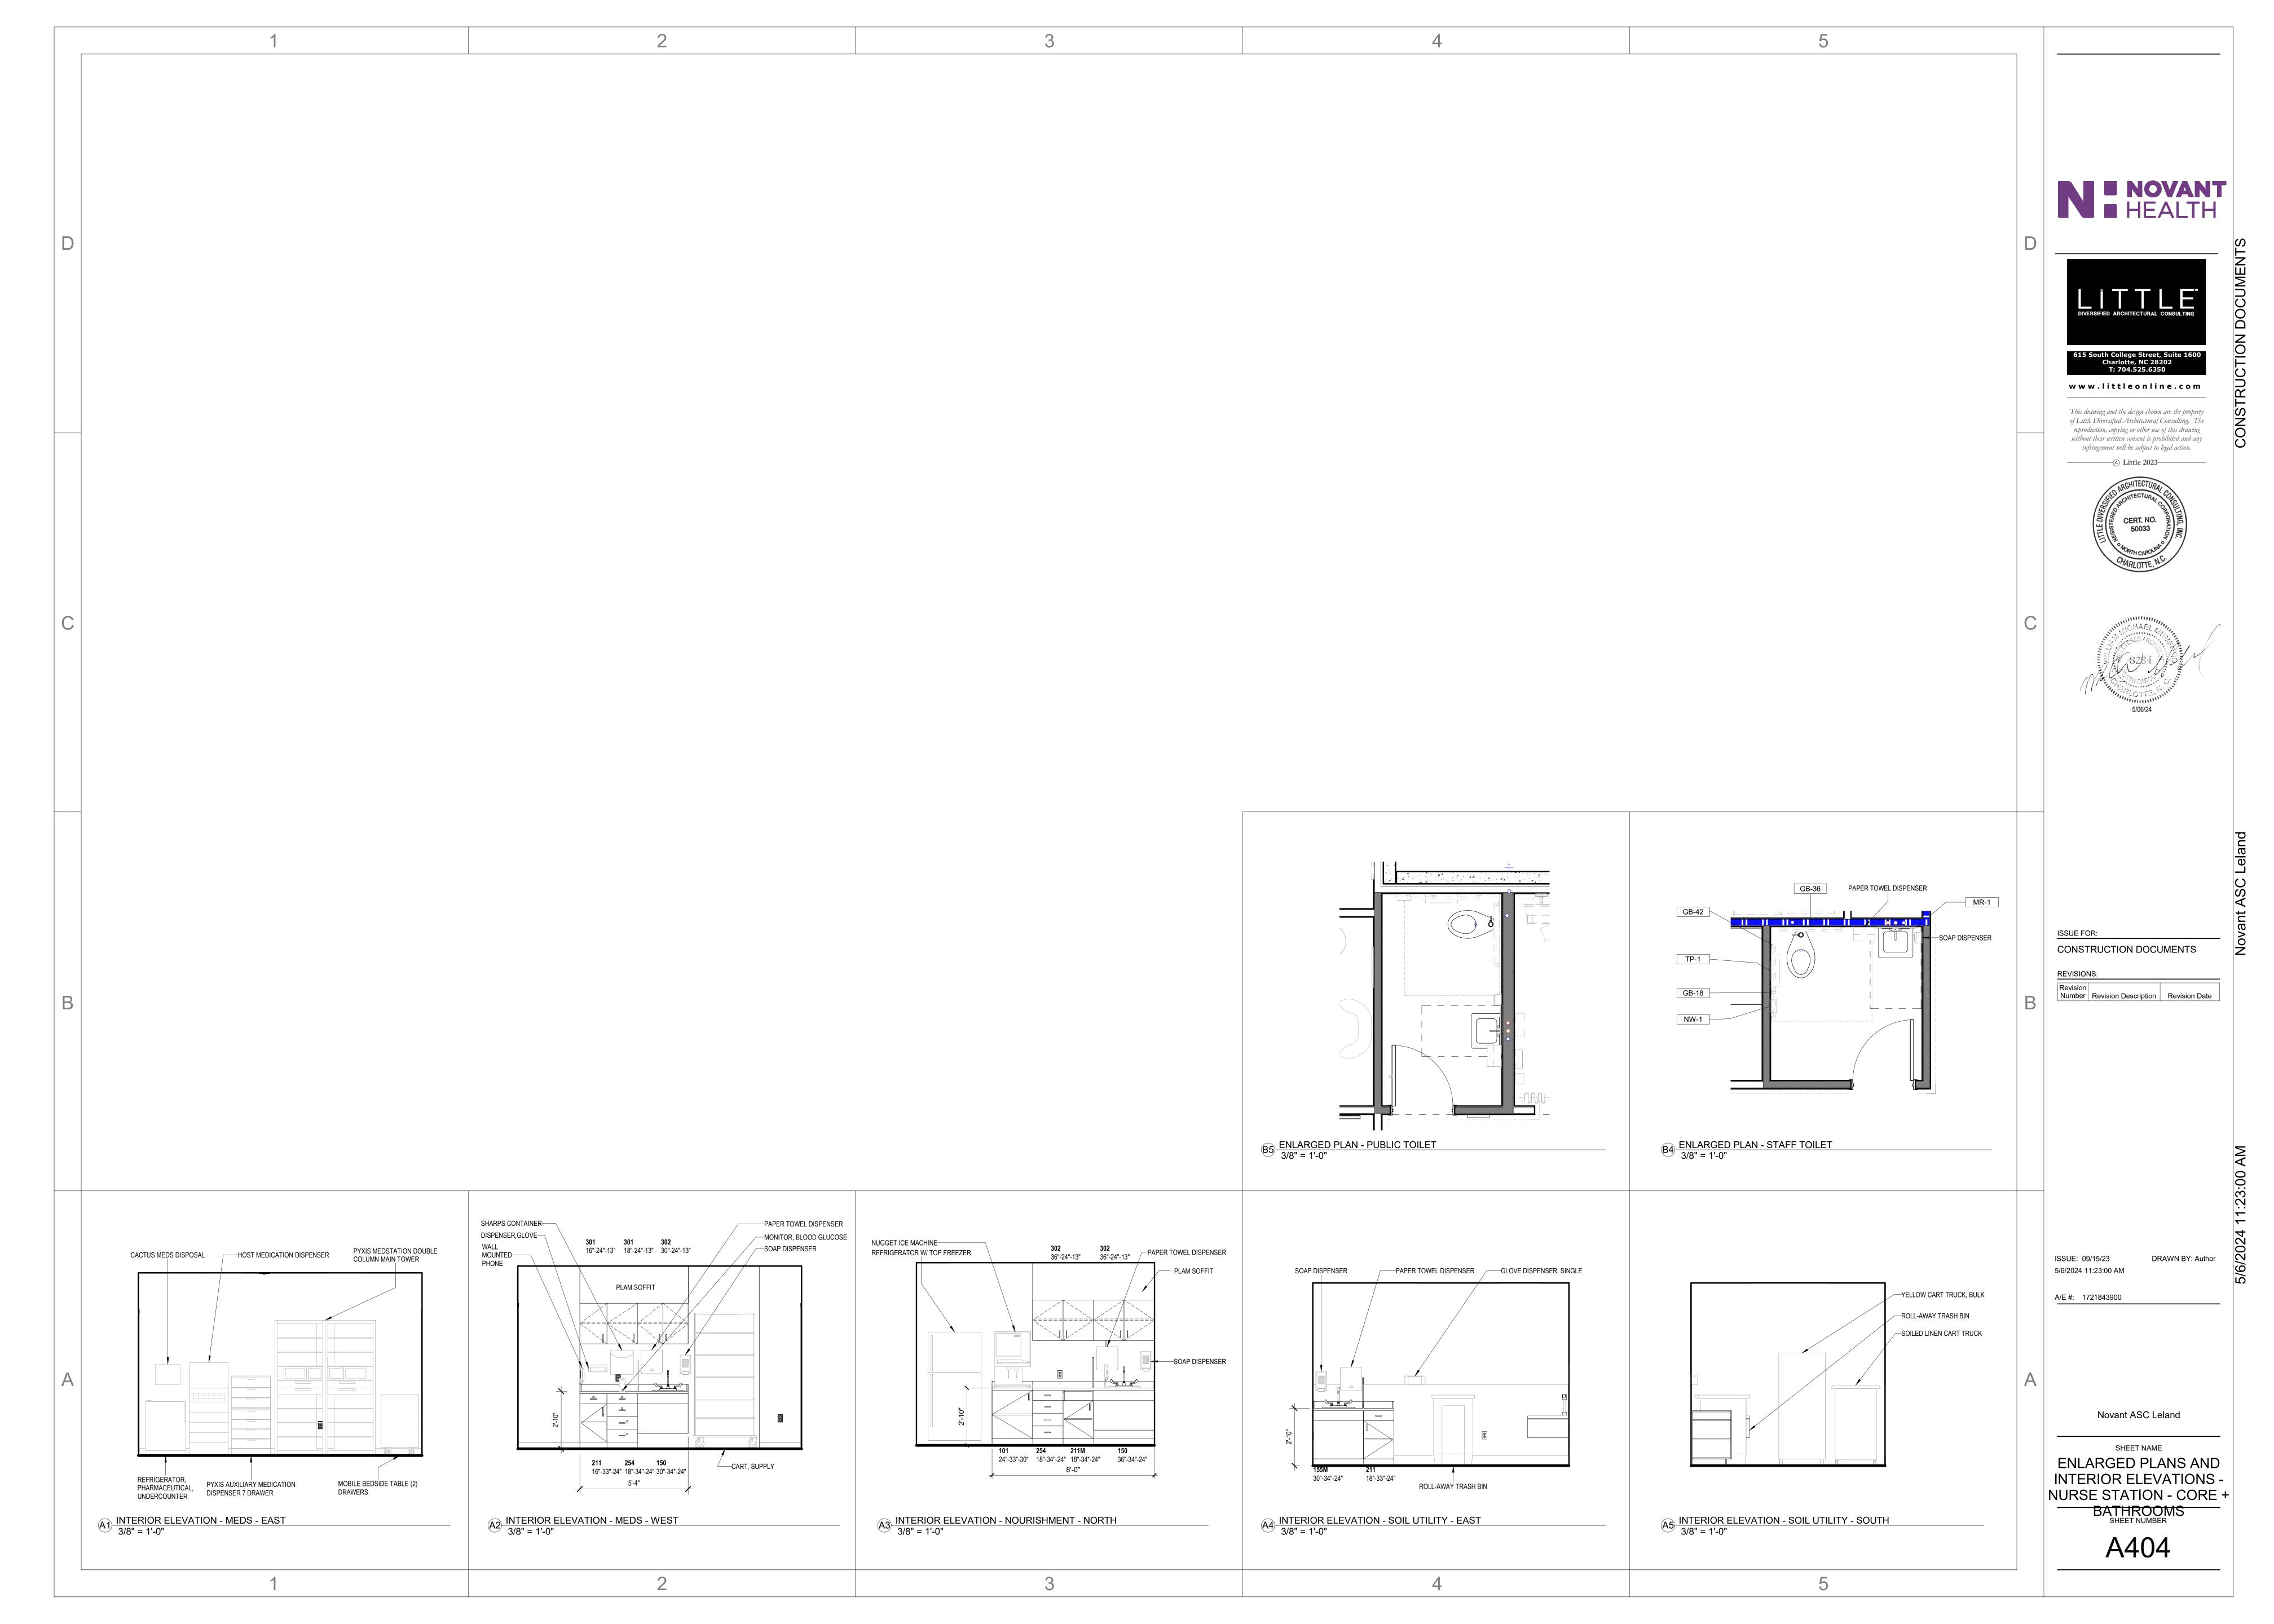


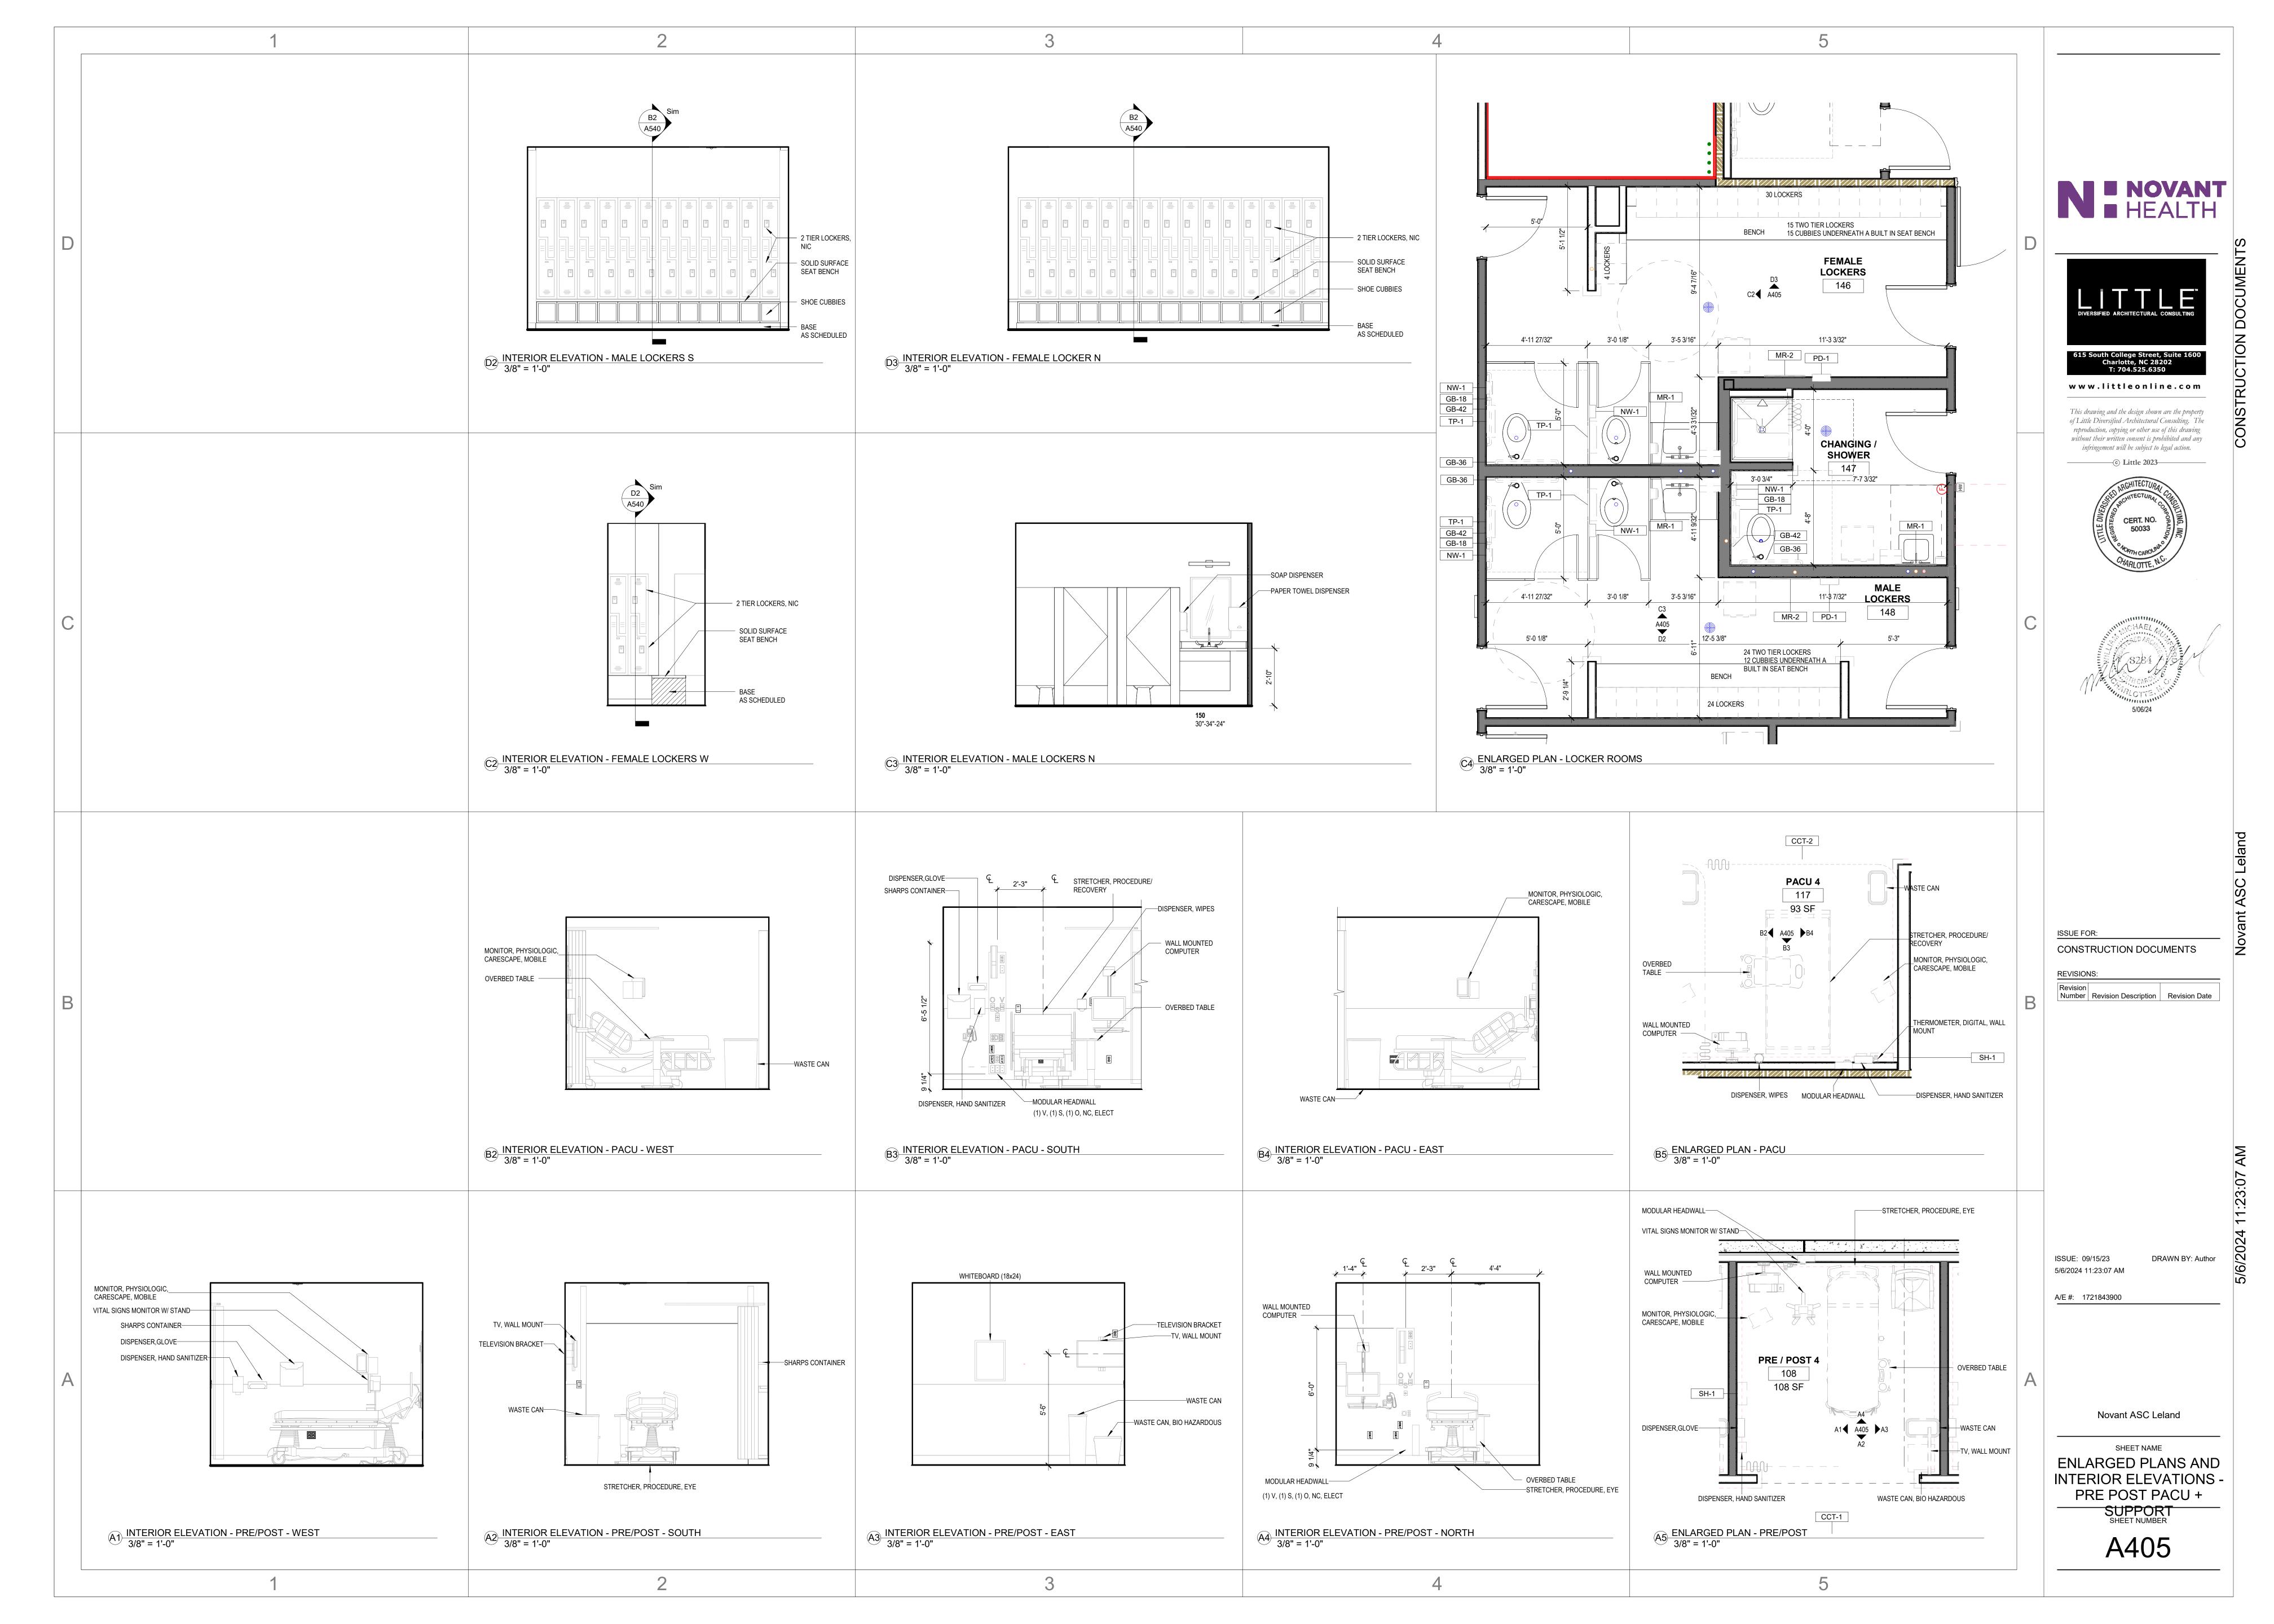


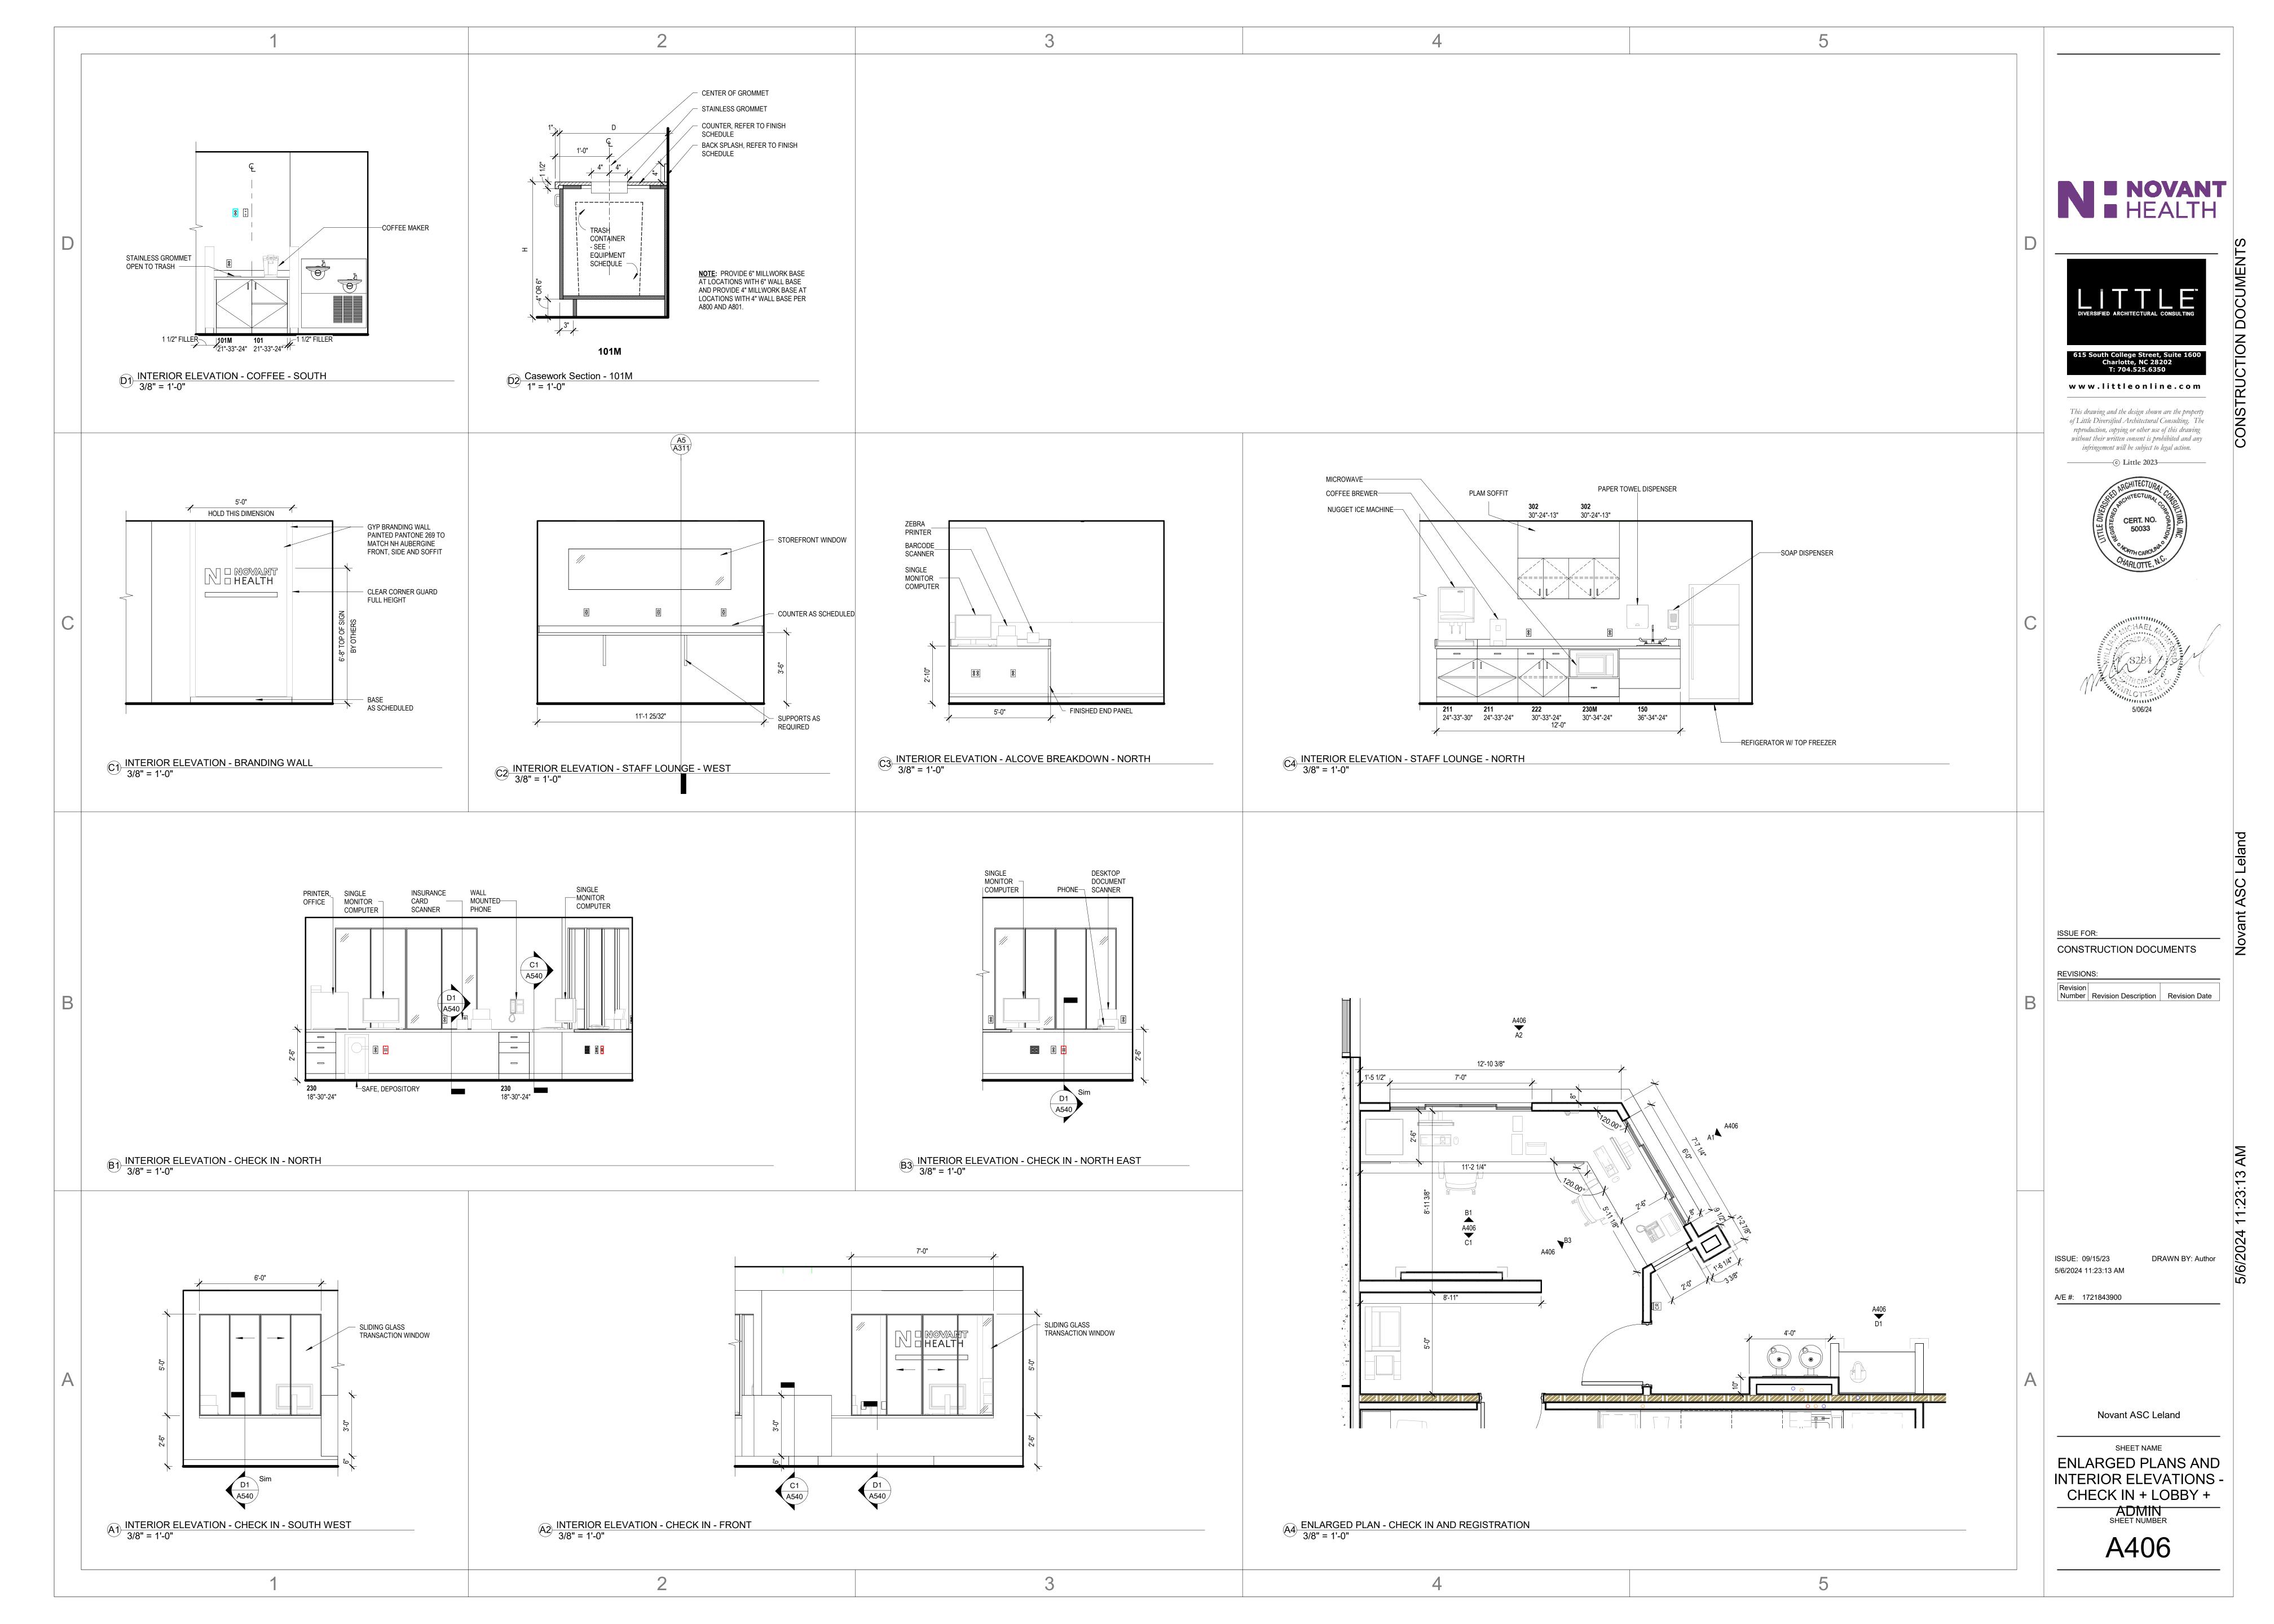


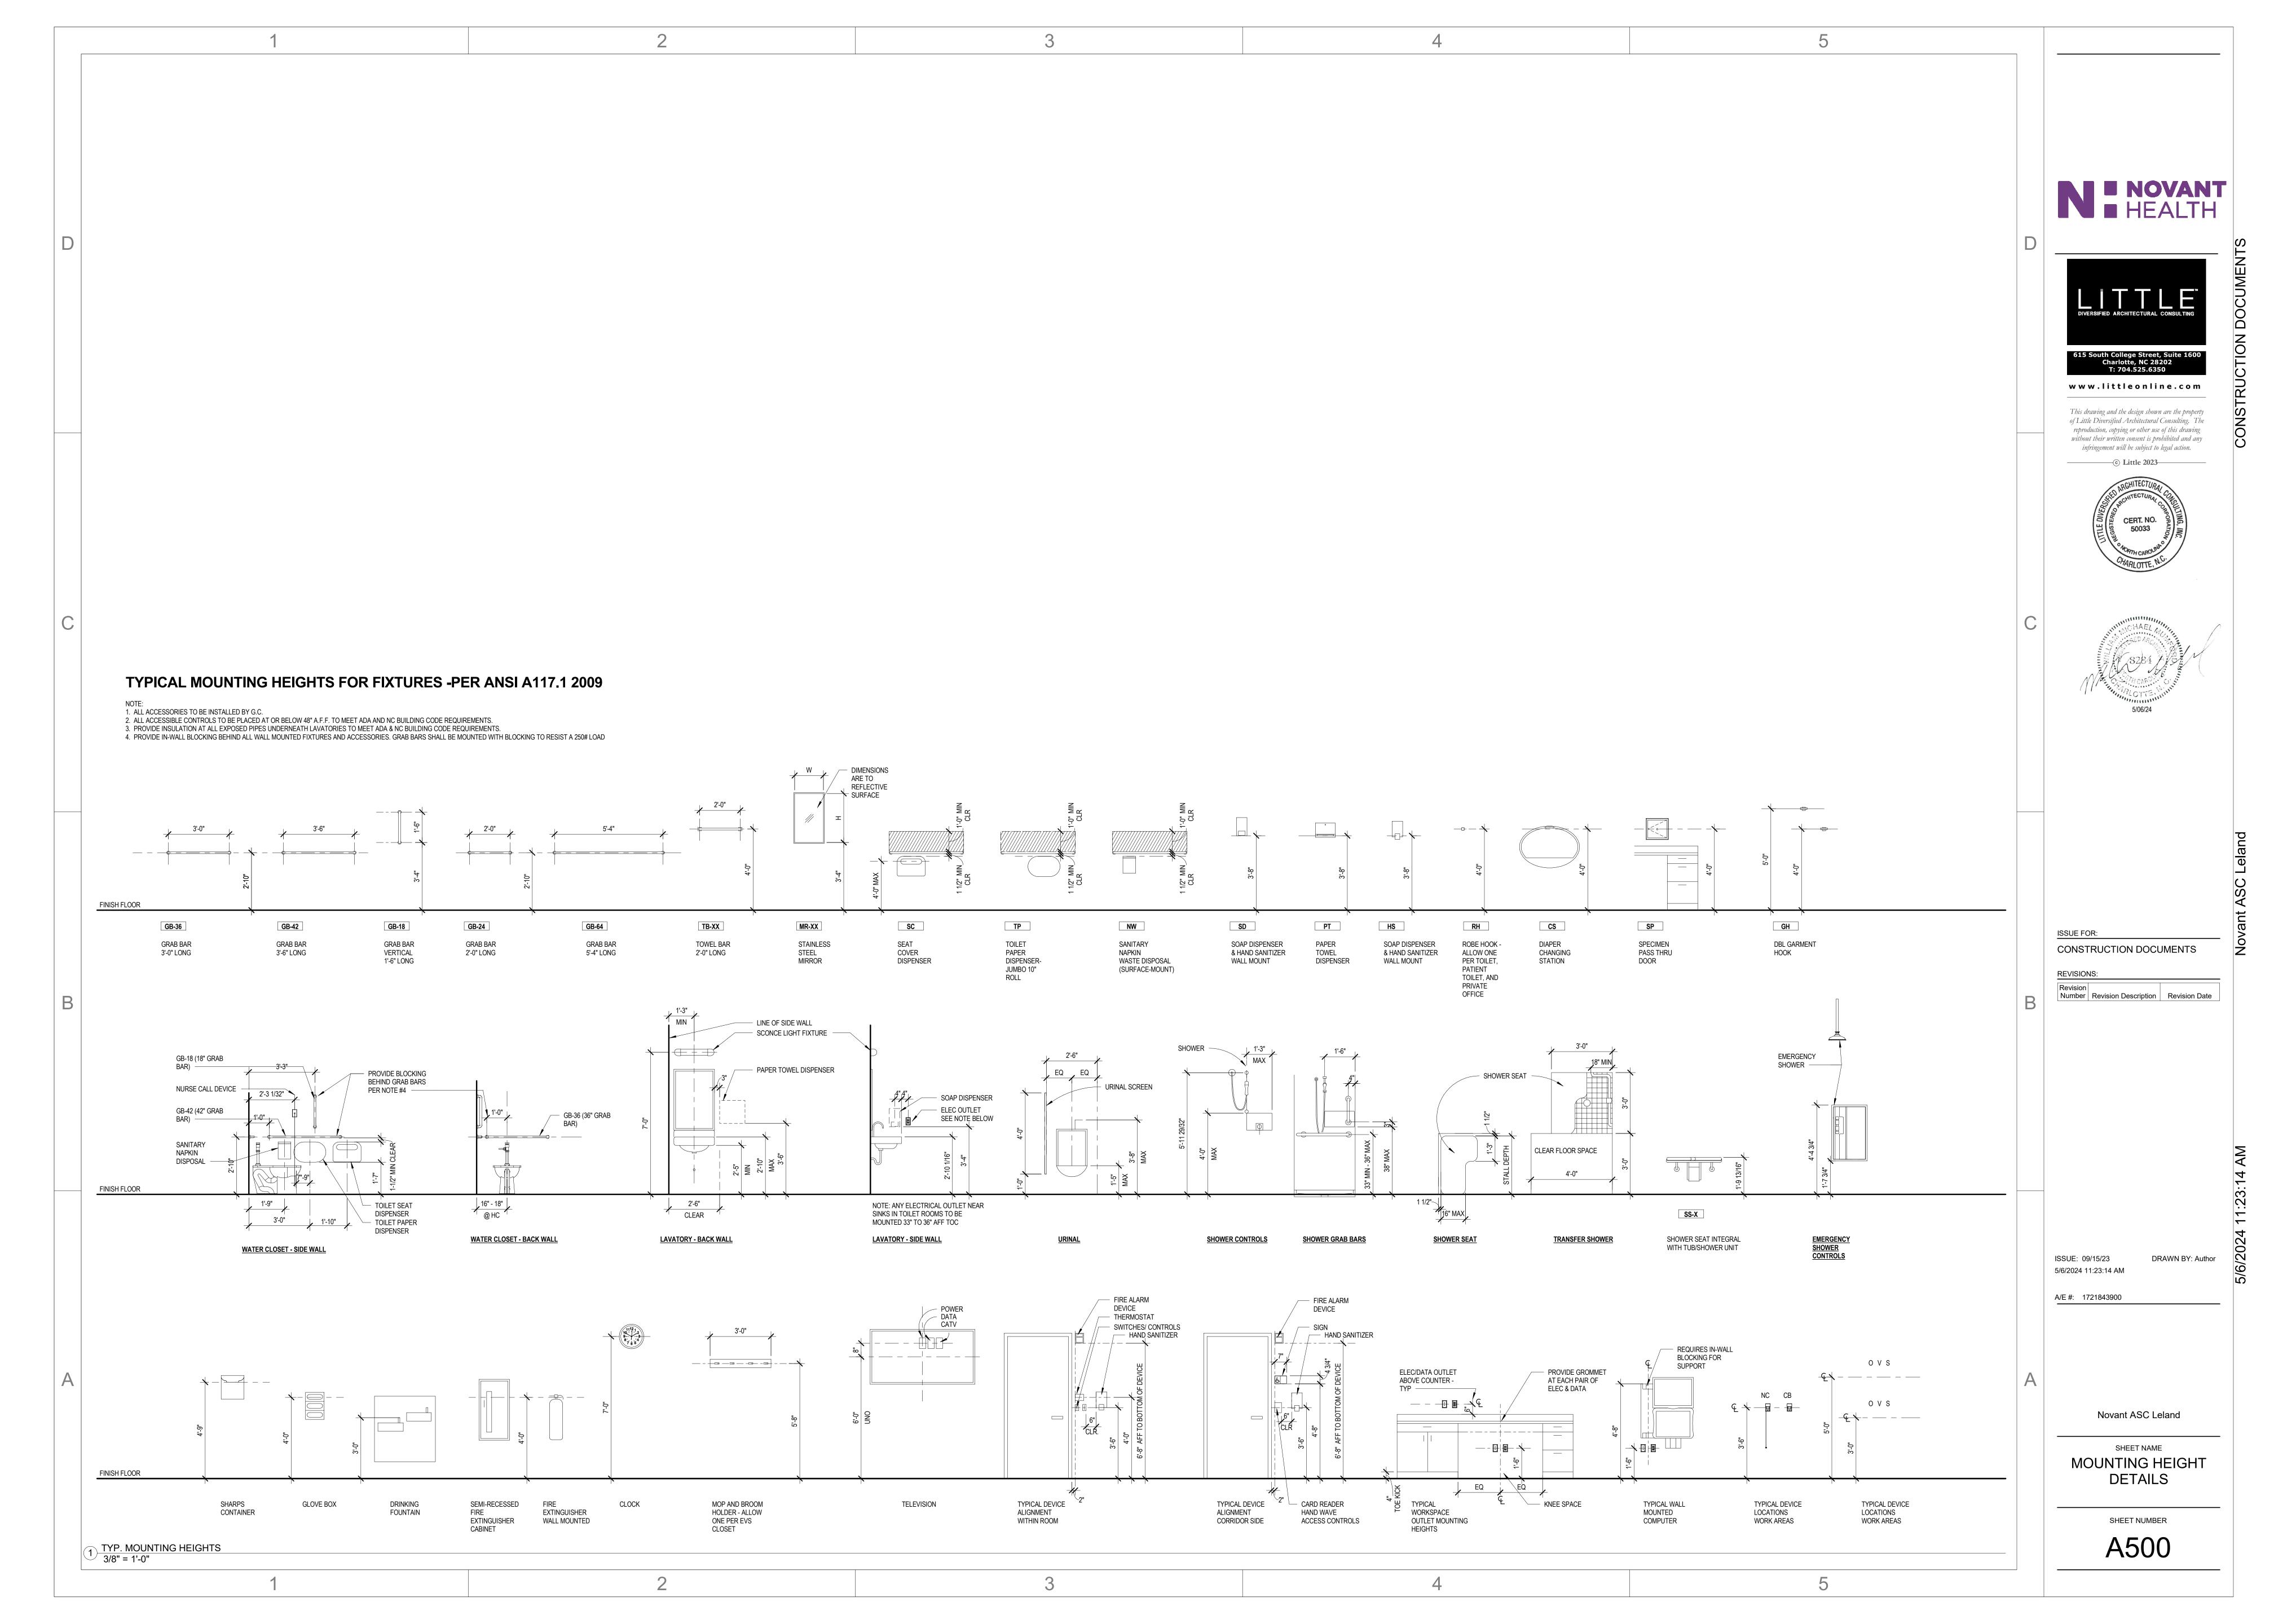


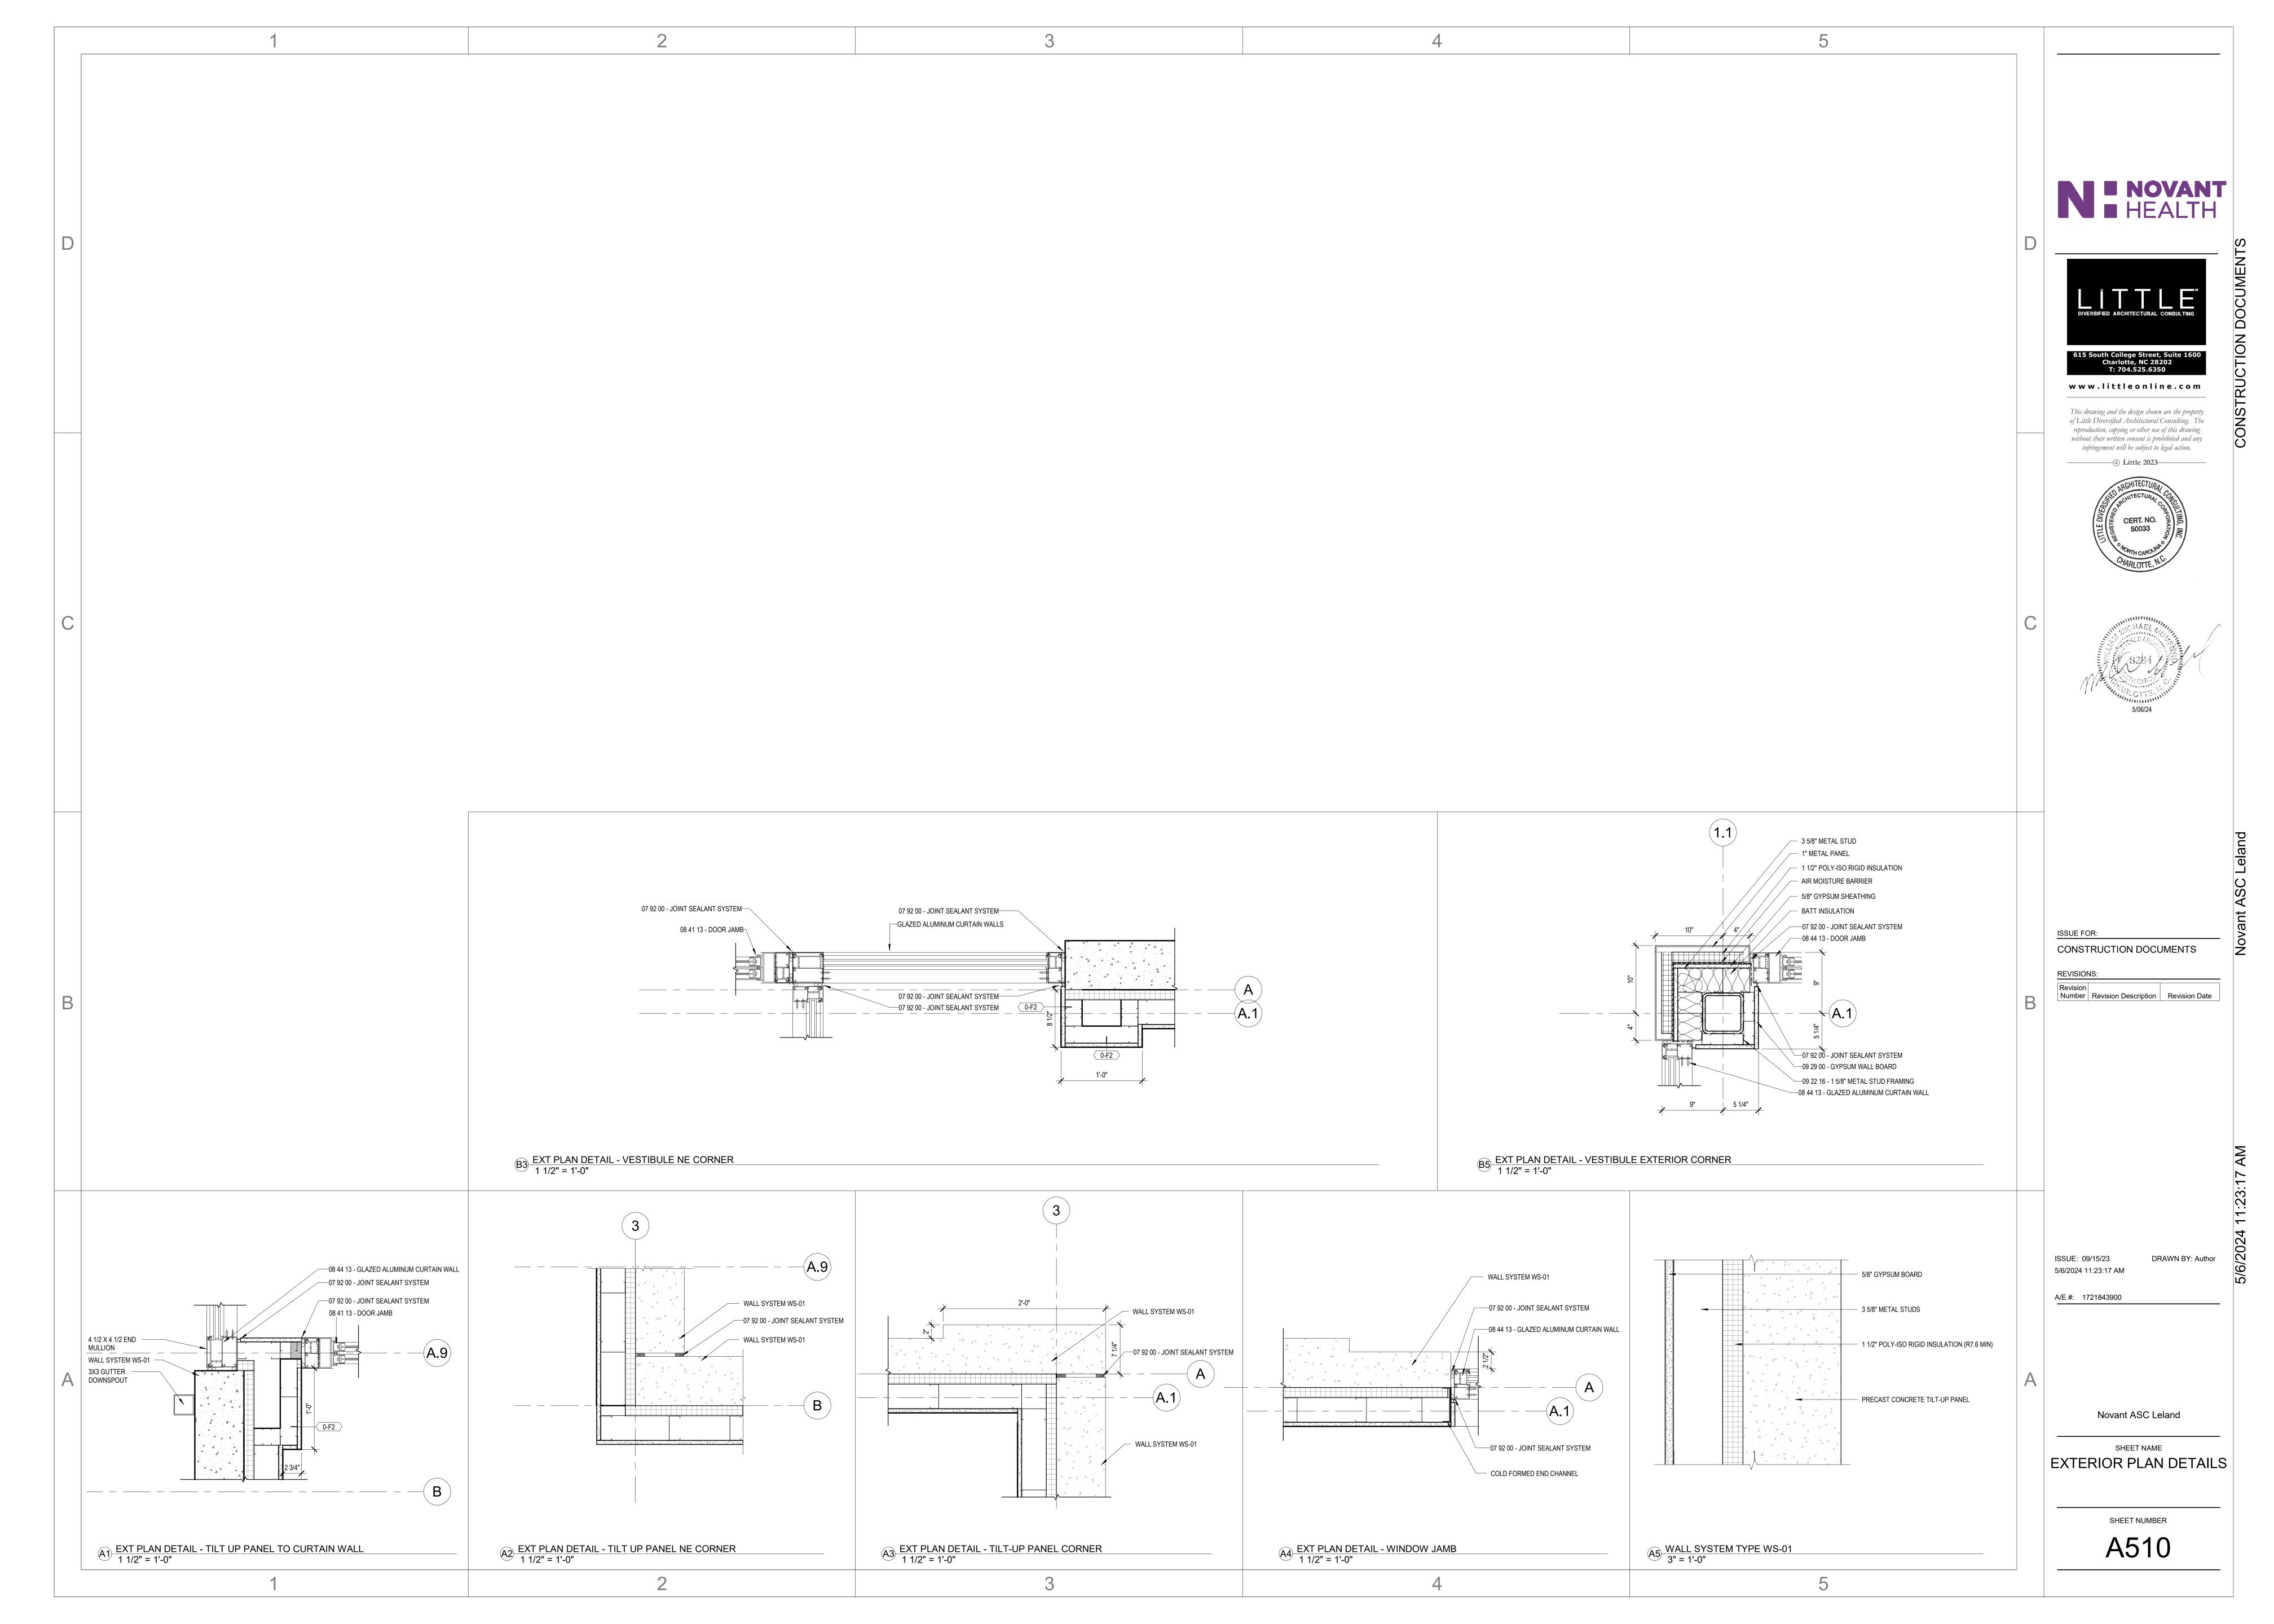


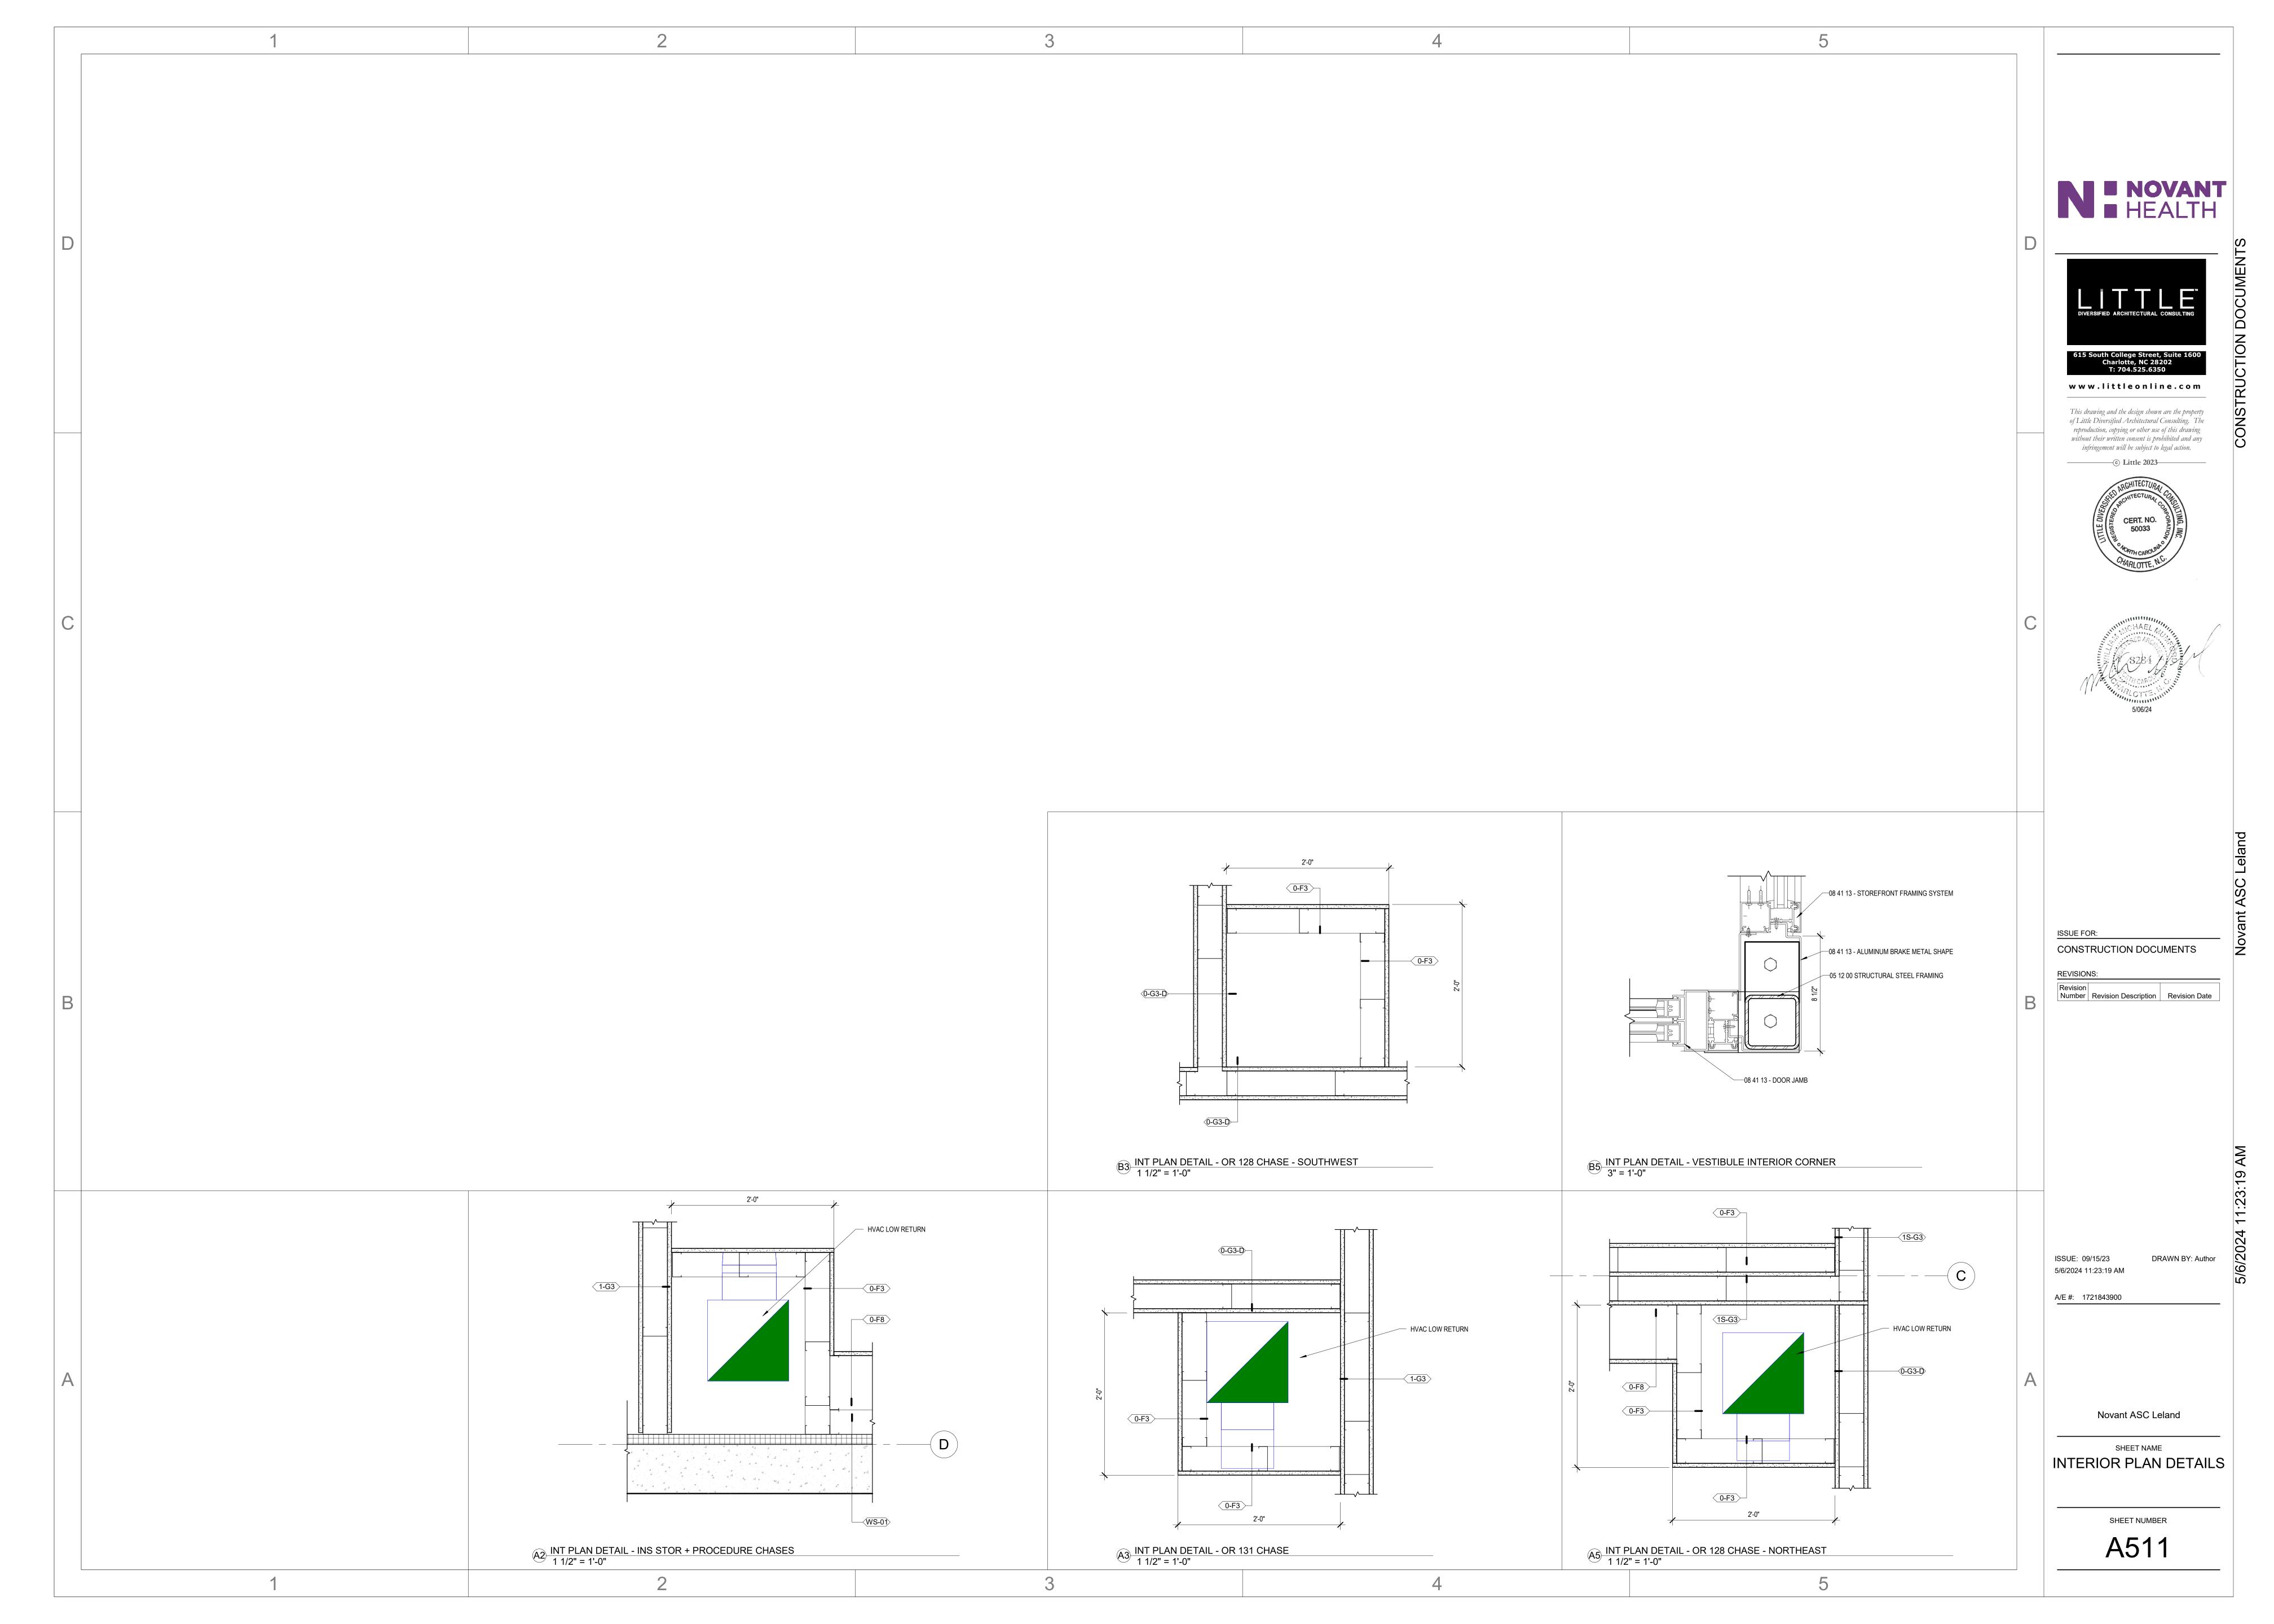

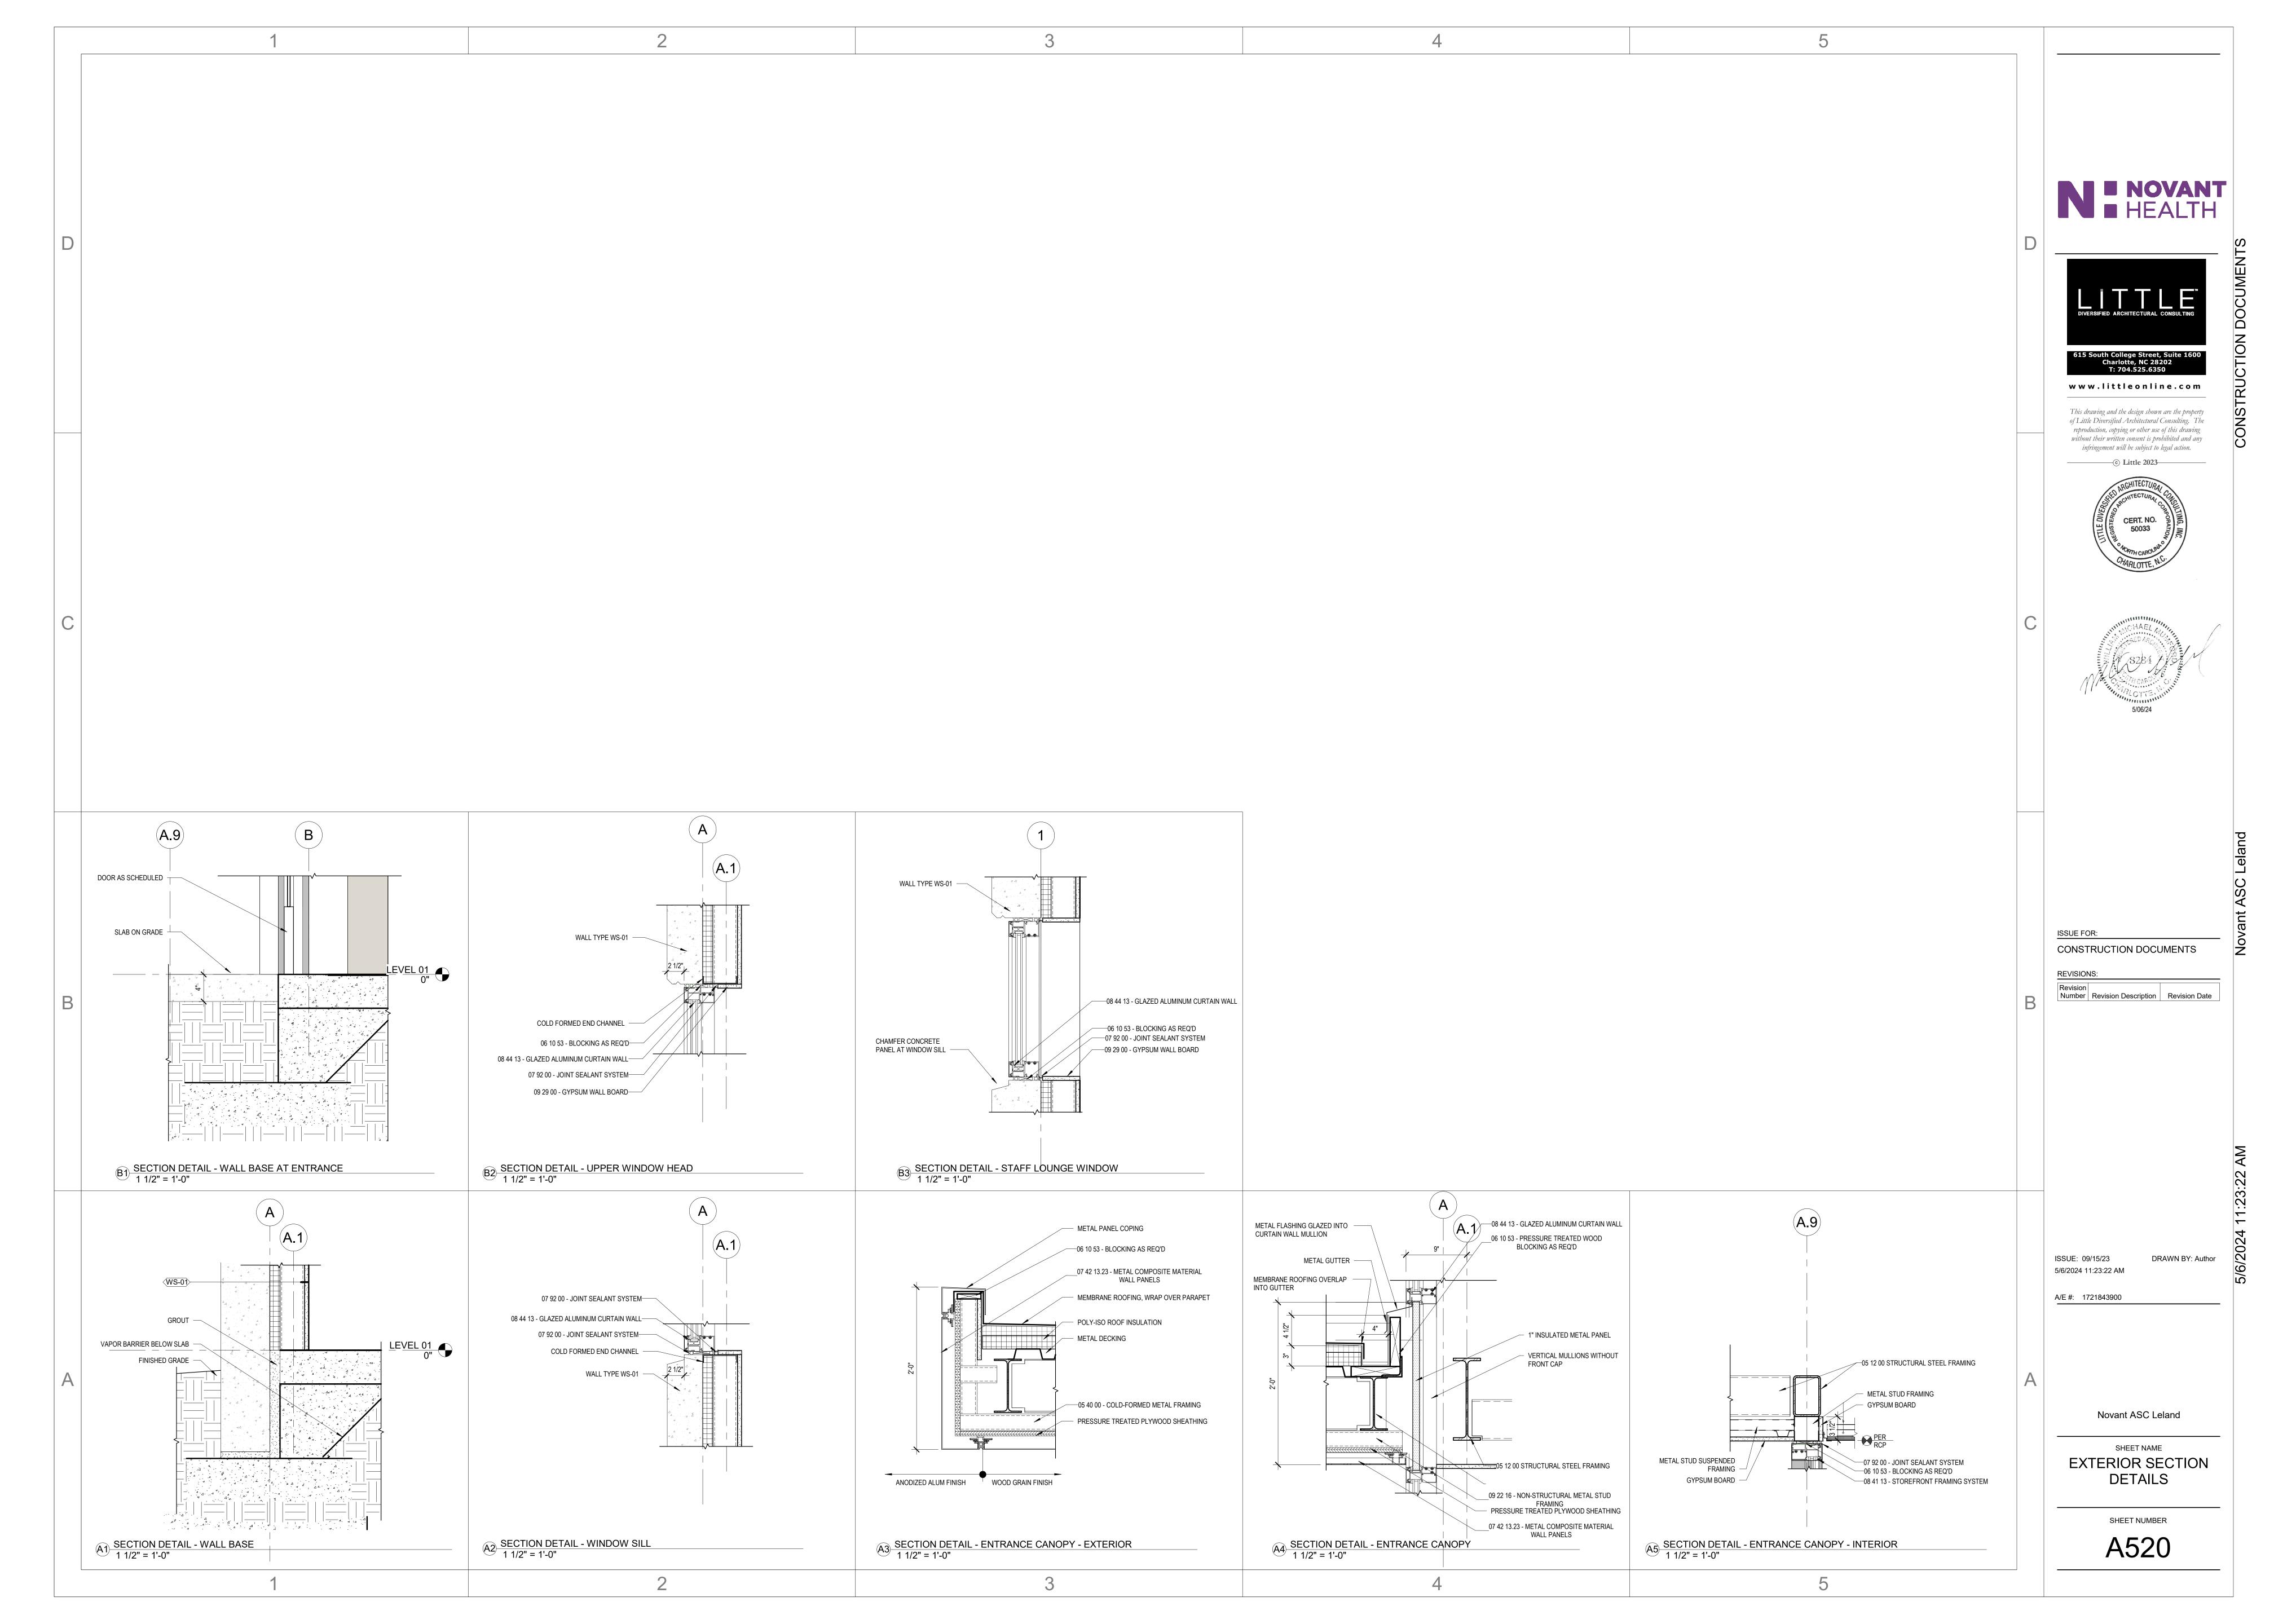

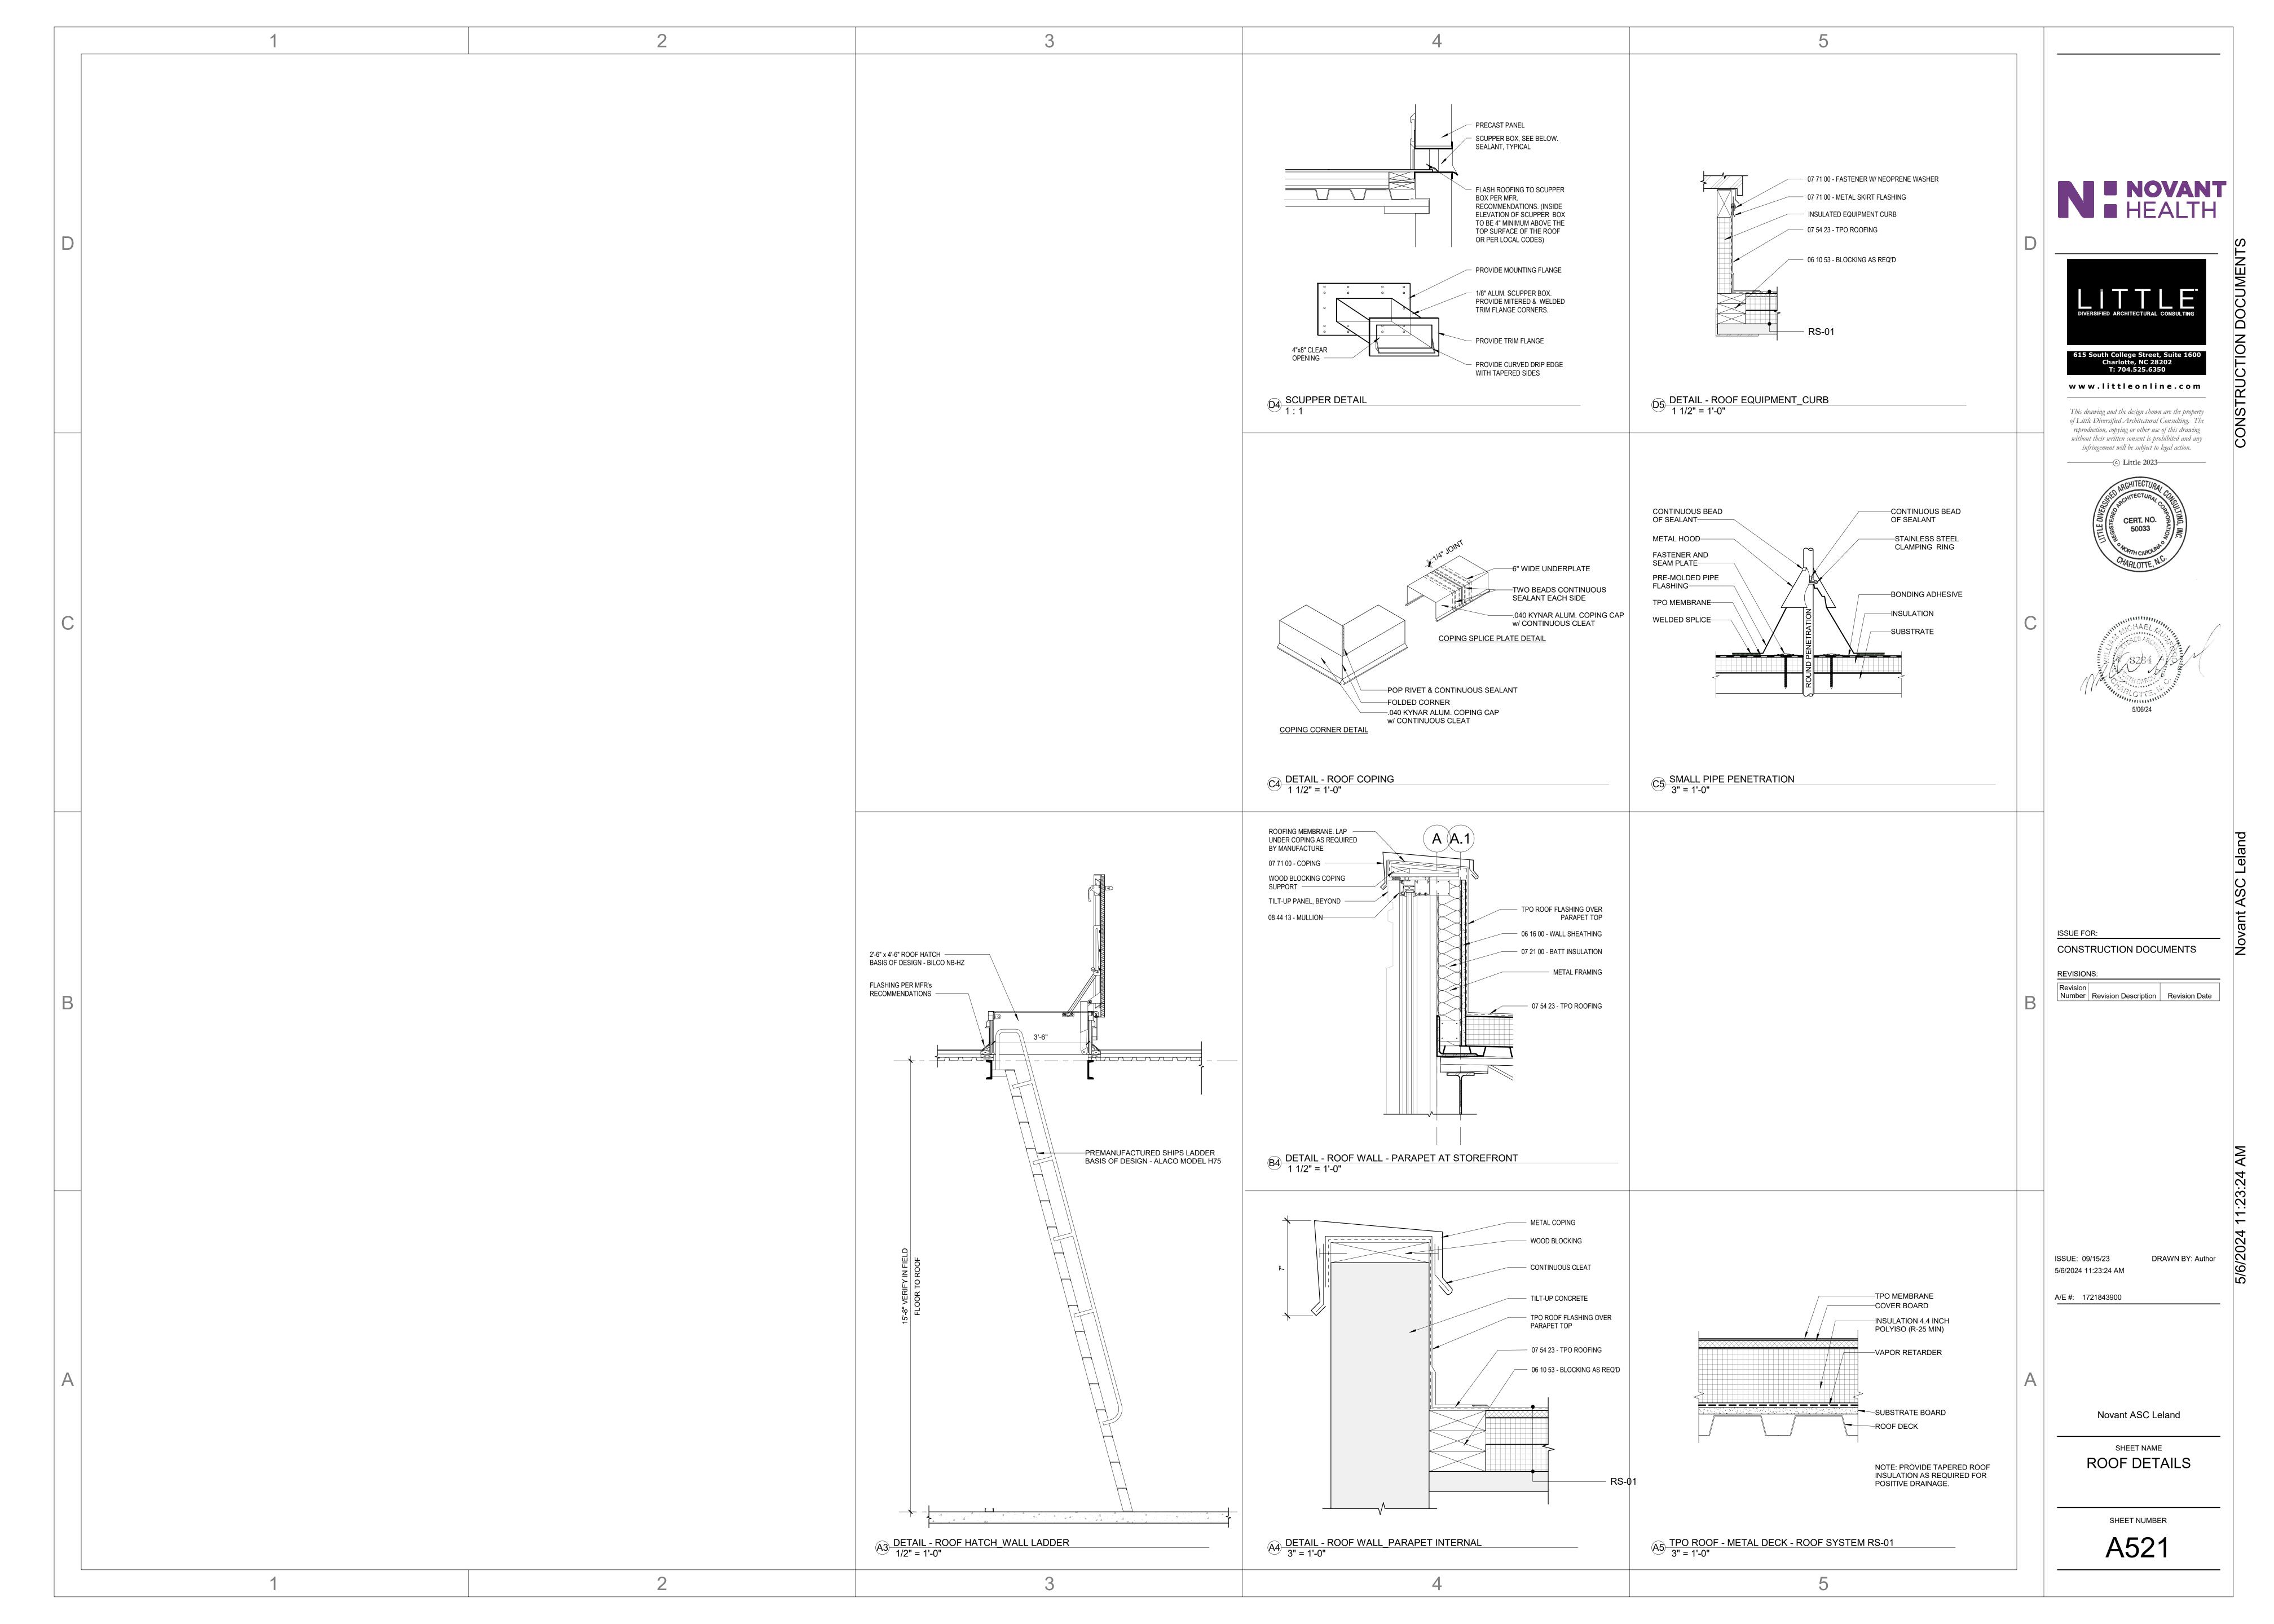

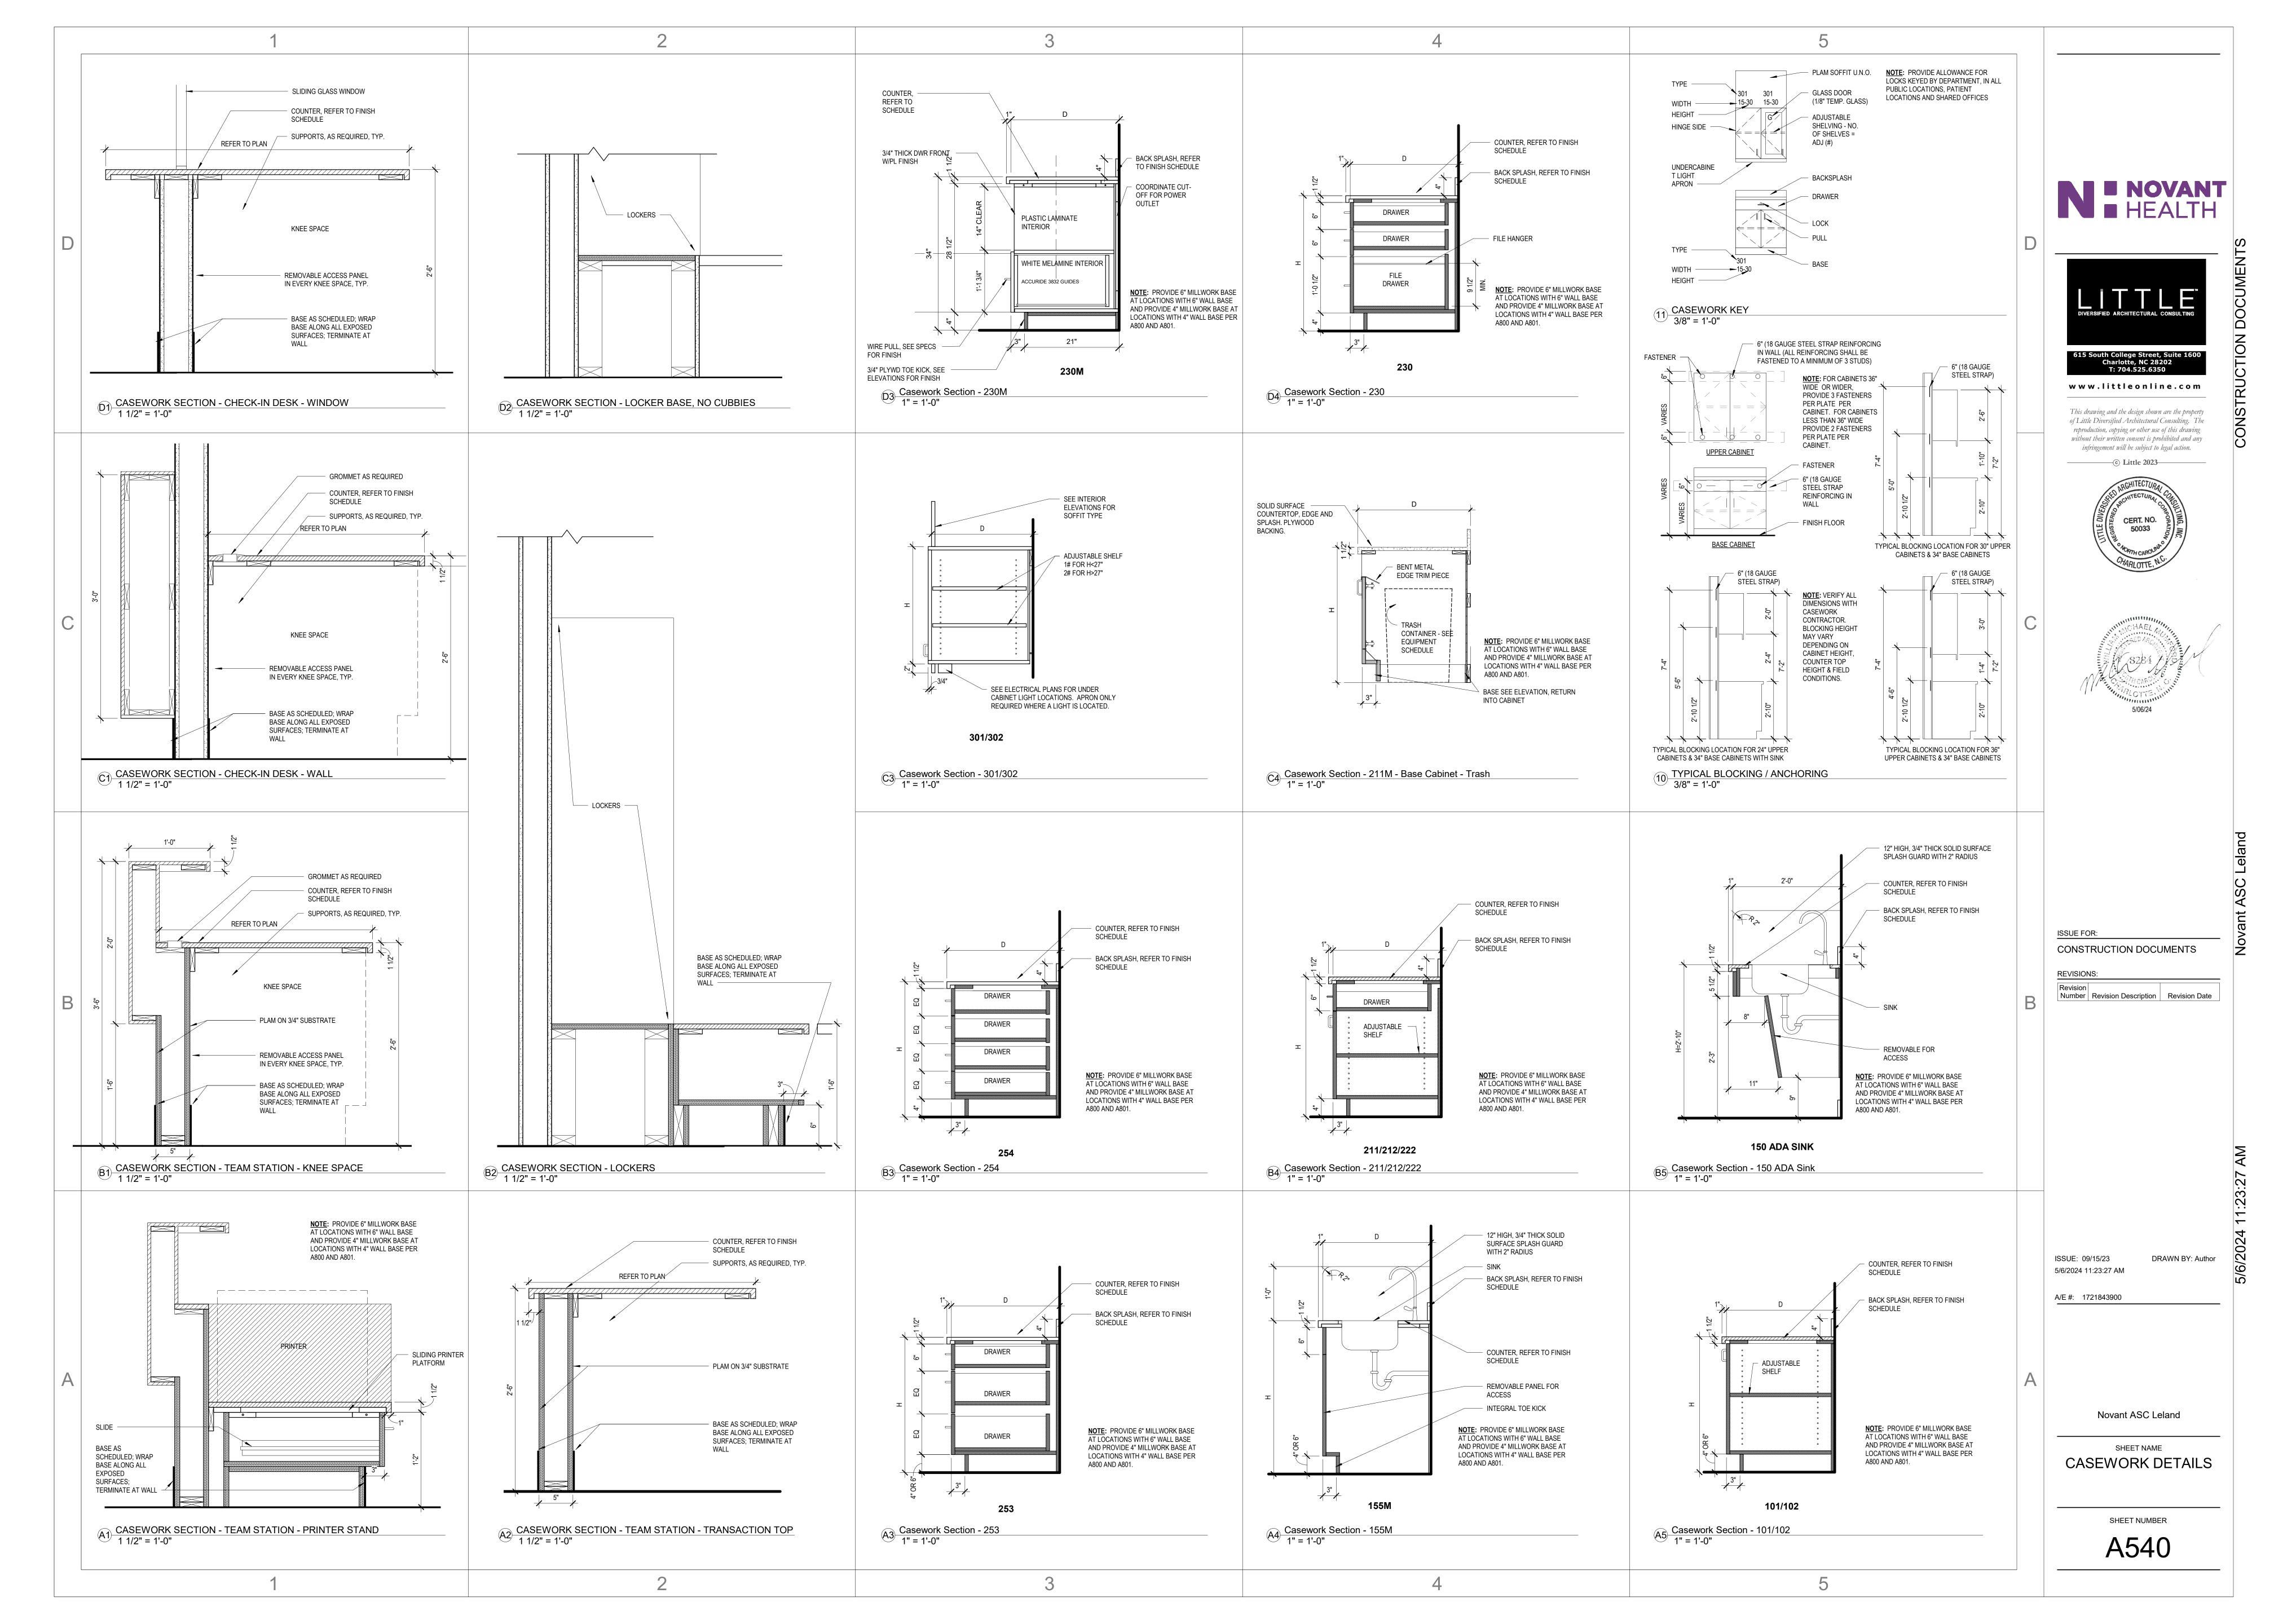

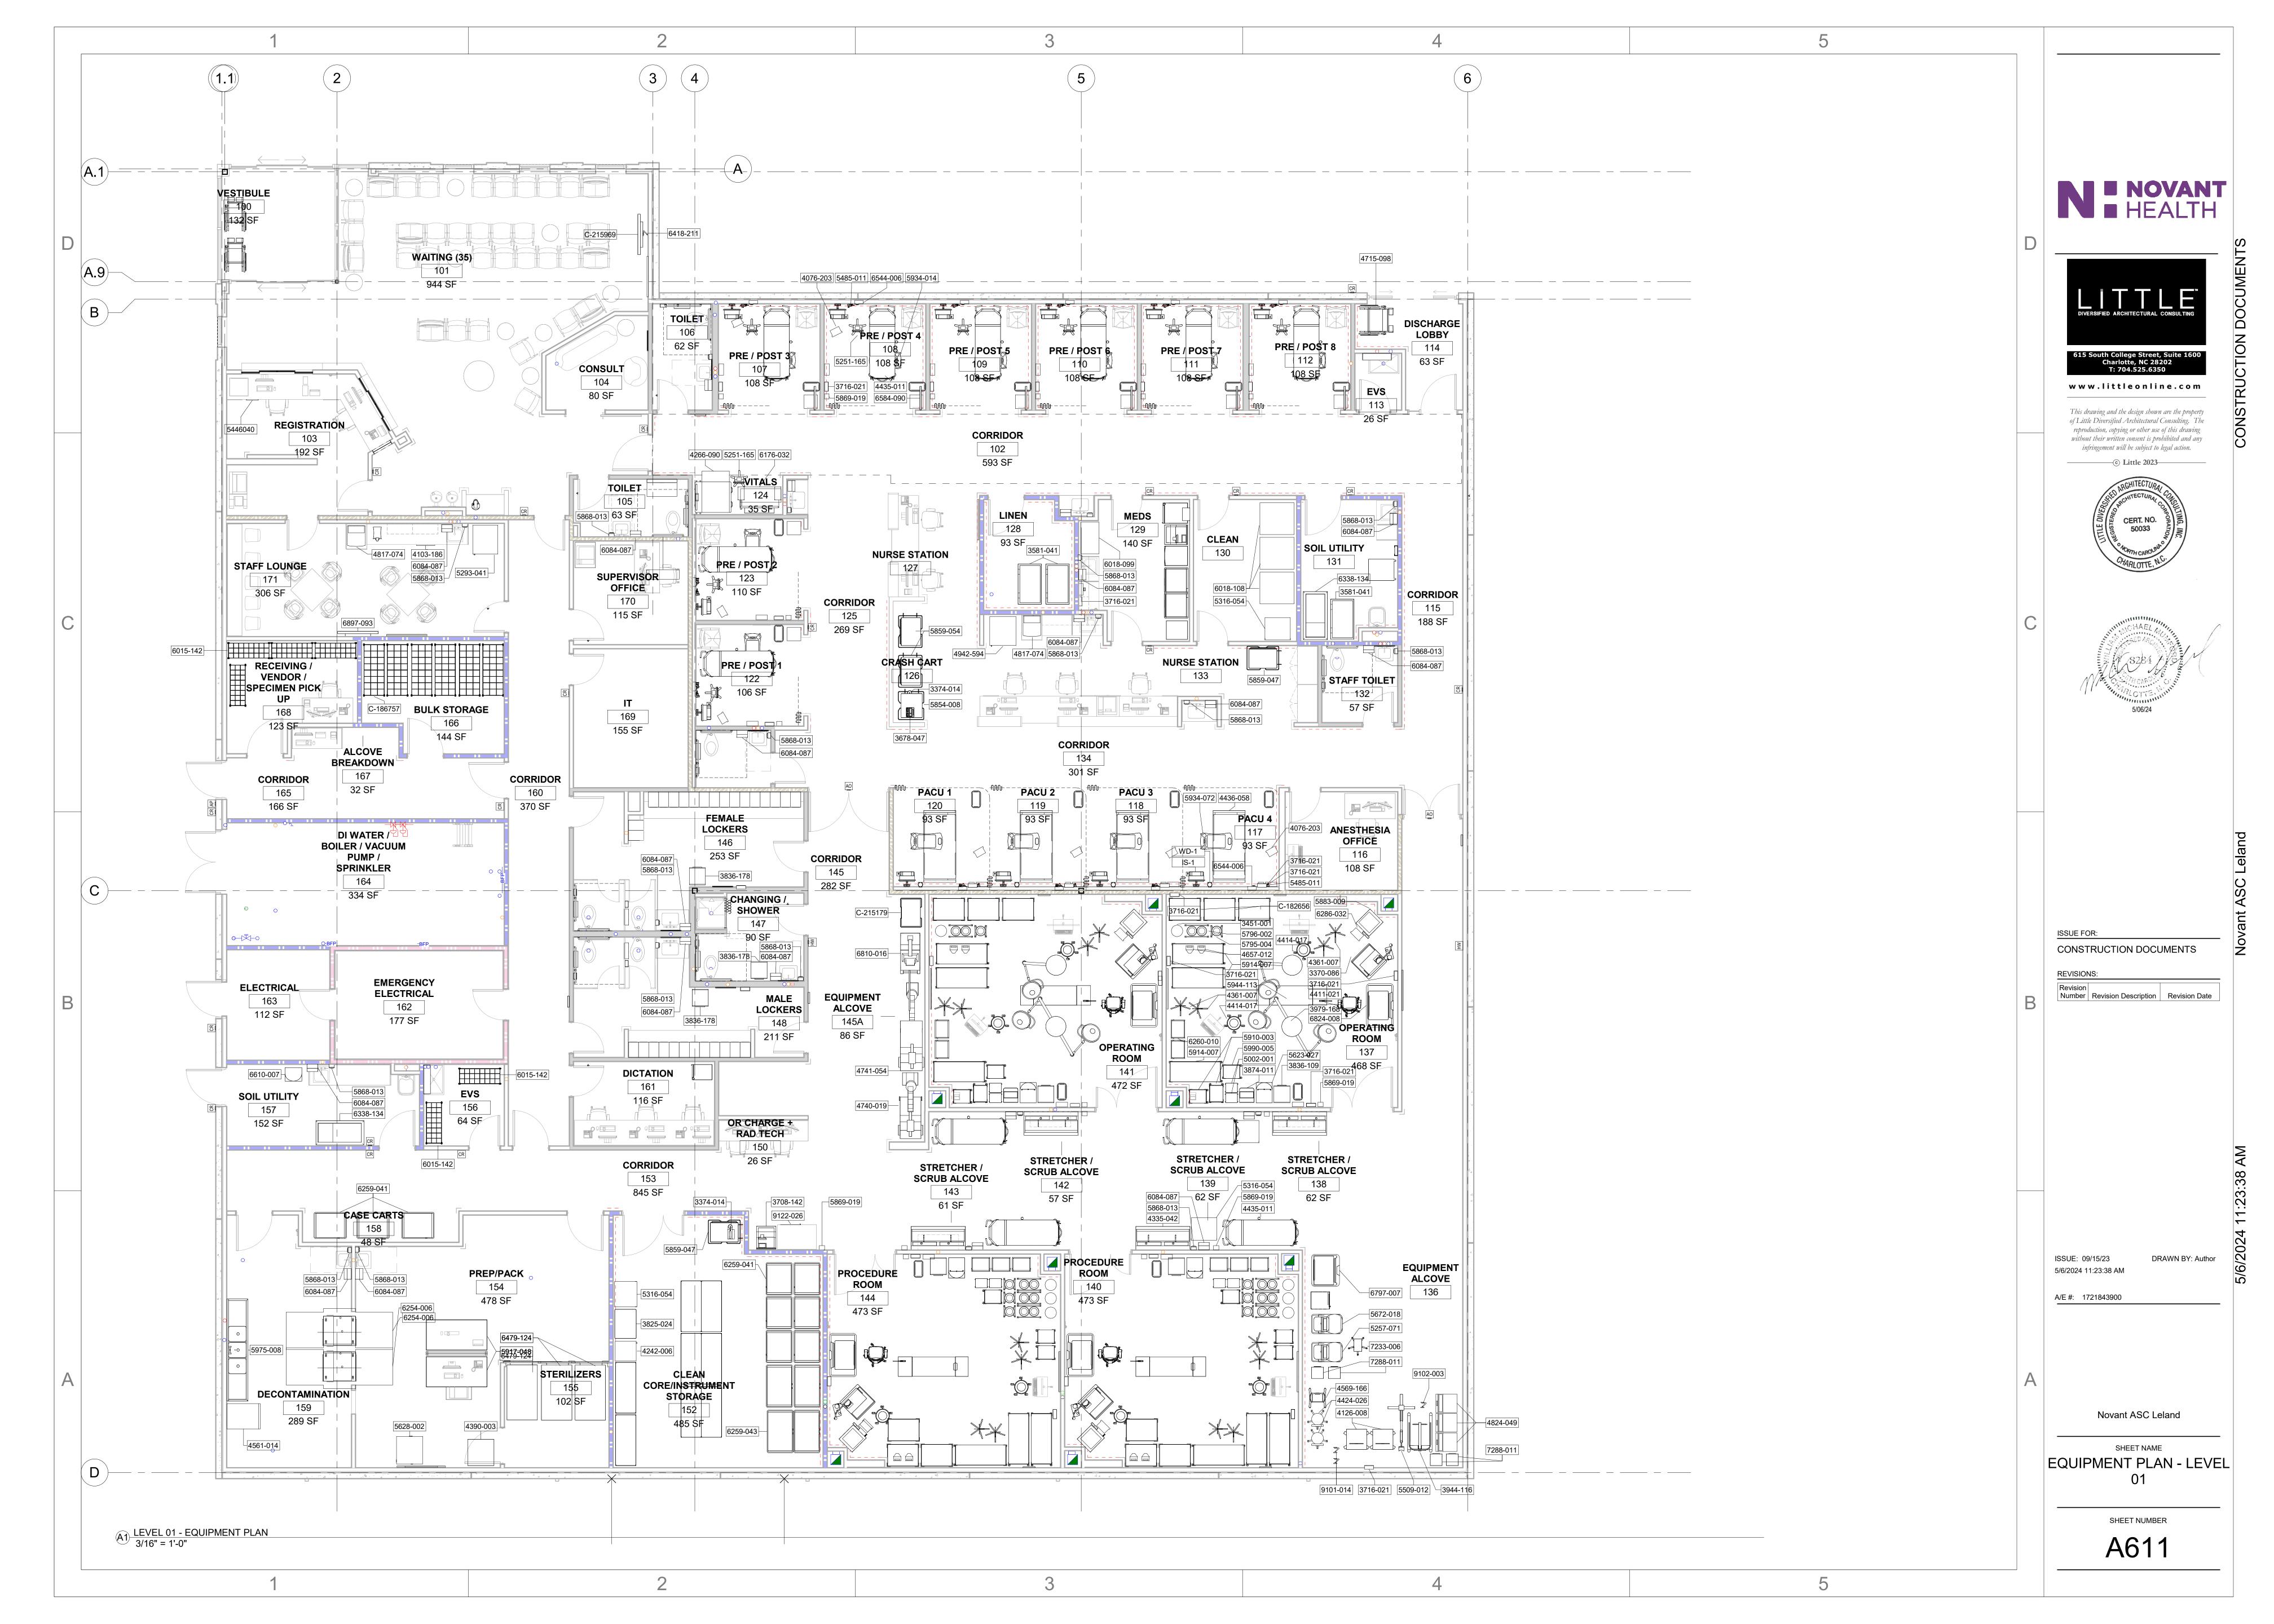

| Attainia ID                      | Family and Type  3370086 Anesthesia Machine, General: Anesthesia Machine, General   | Type Comments ANESTHESIA MACHINE   | Manufacturer GE Healthcare - Datex-Ohmeda                           | Model ANE13507  | Purchased By | Installed By Power | Emergency<br>Power Data | Plumbing   | Comments                | Attainia ID             | ACCESSORIES SCHEDU  DESCRIPTION   | MANUFACTURER          | MODEL   | G.C.<br>PROVIDED | G.C. OWNER<br>INSTALLED PROVIDE | R OWNER<br>ED INSTALLED C | COMMENTS |  |
|----------------------------------|---|--|---|---|--------------|--------------------|-------------------------|--|-------------------------|-------------------------|---|-----------------------|---|------------------|---------------------------------|---------------------------|----------|--|
| 3374-014<br>3451-001             | 3374014_Pump, Suction Aspirator, General, Portable: 3374014_Pump, Suction Aspirator, General, Portable: 3451001_Bucket, Kick: 3451001_Bucket, Kick: 3451001_Bucket, Kick  | ASPIRATOR, RESCUSITATION, PORTABLE BUCKET, KICK  | GE Realtricare - Datex-Offfieda                                     | ANE 13507   |              |                    |                         |  |                         | 3716-021<br>5868-013    | Dispenser, Glove, Triple Box Soap Dispenser, Wall Mount   | Medical               | 8555SA Stackable  Provon FMX-12/250mL                                   |                  | x x                             |                           |          |  |
| 3581-041<br>3678-047<br>3708-142 | 3581041_Cart - Truck, Linen, Bulk: Cart Truck-Linen-Bulk 3678047_Defibrillator, Monitor, w Pacing: Defibrillator-Portable 3708142_Dispenser, Medication, Host (Main) - Pyxis MedStation ES: 6 Drawer  | YELLOW CART TRUCK, BULK DEFIBRILLATOR, MONITOR, W PACING HOST MEDICATION DISPENSER                               | MEDTRONIC PHYSIO-CONTROL PYXIS/CARDINAL HEALTH                      | 70507-000091<br>MAIN  |              |                    |                         | N/A  |                         | 5869-019                | Dispenser, Hand Sanitizer, Wall Mount   |                       | (5160-06) Purell NXT Maximum Capacity (2220-08)                         |                  | <u>χ</u>                        |                           |          |  |
| 3711-048                         | 3711048_Dispenser, Medication, Auxiliary - Pyxis MedStation ES: 7 Drawer  | PYXIS AUXILIARY MEDICATION DISPENSER DRAWER  PYXIS MEDSTATION DOUBLE COLUMN MAIN                                 | R 7 PYXIS/CARDINAL HEALTH   | M35A7DRW3   |              |                    |                         | N/A<br>N/A   |                         | 6084-087<br>CCT-1       | Dispenser, Paper Towel, Surface Mount  Track, Cubicle, Surface Mounted, with Curta                    | (59498A)              | enMotion Impulse 8"<br>Automated (Black)<br>Optitrac Curtain Track with | X                | x x                             |                           |          | N HE   |
| 3711-051                         | 3711051_Dispenser, Medication, Auxiliary - Pyxis MedStation ES Double Column - Clear: Main Tower <varies></varies>  | TOWER <pre></pre>  | N PYXIS/CARDINAL HEALTH <varies></varies>                           | MAIN<br><varies></varies>   |              |                    |                         |  |                         | CCT-2                   | Straight  Track, Cubicle, Surface Mounted, with Curta   |                       | Removable and Standard<br>End Caps and Carriers  Optitrac Factory Bend  | X                | <u>x</u>                        |                           |          |  |
| 3803-078<br>3806-054<br>3825-024 | 3803078_Flowmeter, Oxygen: 3803078_Flowmeter, Oxygen 3806054_Flowmeter, Air: 3806054_Flowmeter, Air 3825024_Freezer, Ultra-low, Chest: 3825024_Freezer, Ultra-low, Chest  | FLOWMETER, OXYGEN FLOWMETER, AIR FREEZER, ULTRA-LOW, CHEST   |   |   |              |                    |                         |  |                         |                         | 90 Degree Bend  | ani, iiii 10 Si Equal | Curtain Track with Removable and Standard End Caps and Carriers         |                  |                                 |                           |          |  |
| 3836-109<br>3836-178<br>3874-011 | 3836-109_Hamper, Linen: 3836-109_Hamper, Linen 3836-178_Hamper, Linen: 3836-178_Hamper, Linen 3874011_Hypo-Hyperthermia Unit, General: 3874011_Hypo-Hyperthermia Unit, General  | LINEN HAMPER LINEN HAMPER HYPO-HYPERTHERMIA UNIT. GENERAL  |   |   |              |                    |                         |  |                         | CH-1                    | Surface Mounted Double Robe Hook (High Low)  Baby Changing Station                                    | KOALA                 | B-76727<br>KB200  | X X              | X                               | <varies></varies>         |          |  |
| 3944-116<br>3979-168<br>4076-203 | 3944116_Lift, Patient, Battery Powered: 3944116_Lift, Patient, Battery Powered 3979168_Light, Surgical, Dual, Ceiling: 3979168_Light, Surgical, Dual, Ceiling 4076203_Monitor, Physiologic, Bedside, Portable - Carescape B450 w PDM: Carescape | CEILING MOUNTED SURGICAL LIGHT   | PHILIPS MEDICAL SYSTEMS   |   |              |                    |                         |  |                         | GB-18<br>GB-36<br>GB-42 | Grab Bar, 18", Vertical Grab Bar, 36" Grab Bar, 42"   | BOBRICK<br>BOBRICK    | 6806<br>6806<br>6806  | X X X            | <u> </u>                        |                           |          | DIVERSIFIED ARCHITECTURAL  |
| 4103-186                         | B450 w PDM (PACU, ED) 4103186_Oven, Domestic, Microwave, Countertop: 1.6 cu ft Capacity, Stainless Steel  | MOBILE   | AMANA AMANA   | RMS10TS   |              |                    |                         |  |                         | MH-1<br>MR-1            | Utility Shelf with Mop Hooks Framed Mirror (18"W x 36"H)  |                       | B-239<br>B-165 2436   | X X              | <u>;</u>                        |                           |          |  |
| 4126-008<br>4242-006             | 4126008_Phacoemulsifier, Ophthalmic: Dual Monitor 4242006_Refrigerator, Domestic: REF-1B Refrigerator   | REFRIGERATOR   | WHIRLPOOL   | Model #WRB119WFBM -<br>Icemaker w/ Bottom-Freezer;<br>Size: 29-3/4"W x 67"H x |              |                    |                         |  |                         | MR-2<br>NW-1<br>PD-1    | Framed Mirror (24"W x 60"H)  Disposal, Sanitary Napkin  Dispenser, PPE                                | BOBRICK               | B-165 2460<br>B-270   | X X              | <u>;</u>                        |                           |          | 615 South College Street<br>Charlotte, NC 28   |
| 4248-081                         | 4248081_Regulator, Suction: 4248081_Regulator, Section  | REGULATOR, VACUUM  |   | 33-3/8"D; 120V/15 Amp   |              |                    |                         |  |                         | SC-1<br>SH-1<br>TP-1    | Shower Rod with Curtain & Hooks Disposal, Sharps, Wall Mounted Dispenser, Toilet Paper, Surface Mount | BOBRICK               | B-207<br>B-2740   | X X X            | <u>X</u> X                      |                           |          | T: 704.525.63  |
| 4266-090<br>4335-042             | Scale, Wheelchair: SC-3 WHEELCHAIR SCALE 4335042_Sink, Scrub, 2-Bay, Stainless Steel: 4335042_Sink, Scrub, 2-Bay, Stainless Steel   | WHEELCHAIR SCALE   | Health o meter  | 2600KL  |              |                    |                         |  |                         | WB-1                    | Whiteboard, 18" x 24"   | Bebruert              |   |                  | X                               | X                         |          | This drawing and the design show   |
| 4361-007<br>4390-003             | 4361007_Stand, IV, Chrome: IV Pump 4390003_Sterilizer, Hydrogen Peroxide, Mobile: 4390003_Sterilizer, Hydrogen Peroxide, Mobile   | IV PUMP WITH STAND<br>HYDROGEN PEROXIDE STERILIZER   |   |   |              |                    |                         |  |                         | NOTE                    | II MOUNTED TO DECEME THE TOTAL THE  | OCKING                |   |                  |                                 |                           |          | of Little Diversified Architectural reproduction, copying or other use without their written consent is pre  |
| 4411-021<br>4414-017<br>4424-026 | 4411021_Stool, Anesthetist: 4411021_Stool, Anesthetist 4414017_Stool, Exam, Cushion-Seat: 4414017_Stool, Exam, Cushion-Seat 4424026_Stool, Surgeon: 4424026_Stool, Surgeon  | STOOL, ANESTHETIST<br>STOOL, EXAM, CUSHION-SEAT  | Pedigo Products, Inc. Pedigo Products, Inc.                         | T-583<br>P-536-GS   |              |                    |                         |  |                         | NOTE: ALL WAL           | LL MOUNTED TO RECEIVE FIRE TREATED WOOD BL  | LOCKING               |   |                  |                                 |                           |          | infringement will be subject to  Co Little 2023  |
| 4435-011<br>4436-058             | 4435011_Stretcher, Procedure, Eye ENT: Stretcher, Transport 4436058_Stretcher, Procedure Recovery: Prim with Fifth Wheel 1105 (30' Litter)  | STRETCHER, PROCEDURE, EYE STRETCHER, PROCEDURE/ RECOVERY   | Hill-Rom - Bed & Stretcher Group                                    | Procedural Stretcher P8000  |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ARGHITECTURAL OF THE CALL OF T |
| 4552-020<br>4561-014             | 4552-020_Tourniquet System, General: Tourniquet System, General 4561014_Ultrasonic Cleaner, Floor: 24" x 25" x 35"  | TOURNIQUET SYSTEM, GENERAL ULTRASONIC FLOOR CLEANER  | Monitor, Physiological, Bedside<br>NANOSONIC TROPHON EPR<br>PRODUCT | N000010   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | CERT. NO.  |
| 4569-166<br>4657-012<br>4687-020 | 4569166_Ultrasound, Imaging, Multipurpose: SonoSite SII w Mobile Stand 4657012_Warmer, Patient, Hypothermia: Hypothermia Patient Warmer 118000 Waste Can Bio Hazardous: Waste Can Bio Hazardous 4687-020  | PATIENT WARMER WASTE CAN, BIO HAZARDOUS  | SONOSITE, INC.  | SII   |              |                    | No                      | N/A  |                         |                         |   |                       |   |                  |                                 |                           |          | HIII (89 50033   |
| 4715-098<br>4740-019             | <pre><varies> 4740-019_X-Ray Unit, C-Arm, Mini: C ARM XRAY UNIT</varies></pre>  | WHEELCHAIR, ADULT  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | CHARLOTTE, N   |
| 4741-054<br>4817-074<br>4824-049 | 4741054_X-Ray Unit, C-Arm, Mobile: C ARM XRAY UNIT 4817074_Ice Machine, Dispenser, Nugget, Countertop: HID525A Meridian (Air Cooled) 4824049_Electrosurgical Unit, Bipolar Monopolar: 4824049_Electrosurgical Unit, Bipola                      |  | FOLLETT CORPORATION   | 12Cl425A-L  |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 4942-594<br>5002-001             | Monopolar  4942594_Refrigerator, Domestic with Freezer: BKRF18PL  5002001 Stool. Step. Stackable: 5002001 Stool. Step. Stackable  | REFRIGERATOR W/ TOP FREEZER STEP STOOL   |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ammunn,  |
| 5251-165                         | 5251165_Monitor, Physiologic, Vital Signs, w Stand: Root 9695 (NIBP/TEMP/MASIMO) Radical 7 & Rollstand  | VITAL SIGNS MONITOR W/ STAND   |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ENTINE MOHAEL A  |
| 5257-071<br>5293-041             |   | ULTRASOUND, IMAGING, MULTIPURPOSE, PORTABLE REFIGERATOR W/ TOP FREEZER   |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | 8284   |
| 5316-054<br>5485-011             | 5316054_Cabinet, Warming, Dual, Freestanding: Cabinet, Warming, Dual 5485011_Thermometer, Digital, Wall Mount: SureTemp Plus 690-692 Electronic Thermometer   | DUAL WARMING CABINET THERMOMETER, DIGITAL, WALL MOUNT  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | MARIOTE AND THE CARE   |
| 5509-012<br>5623-027             | 5509012_Microscope, Operating, General: 5509012_Microscope, Operating, General 5623027_Waste Disposal, Surgical Fluid Collection: Waste Management System   | MICROSCOPE, OPERATING, PORTABLE SURGICAL FLUID WASTE DISPOSAL  | STRYKER INDUSTRIES  | NEPTUNE 3   |              |                    |                         | DOCKING STATION SI PLUMBED TO A WATE CONNECTION WITH A OF 50 TO 120 PSI DOCKING STATION CA | ER<br>A RANGE<br>CAN BE |                         |   |                       |   |                  |                                 |                           |          | 5/06/24  |
| 5628-002                         | 5628002_Generator, Steam Heat Exchanger: STERIS 180KW (480V)  | GENERATOR, STEAM HEAT EXCHANGER  | THERMAFLOW INC  |   |              |                    |                         | WALL<br>OR A FLOOR DRAIN.  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 5672-018<br>5704-036             | 5672018_Ultrasound, Imaging, Urology: BladderScan Prime w Mobile Cart  5704036_Clock, Analog, Synchronized, Wireless: Clock, Analog, Wall   | ULTRASOUND, IMAGING, MULTIPURPOSE, PORTABLE CLOCK, ANALOG  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 5795-004<br>5796-002<br>5854-008 | 5795004_Stand, Basin, Single: 5795004_Stand, Basin, Single 5796002_Stand, Basin, Double: 5796002_Stand, Basin, Double 5854008_Cart, Procedure, Malignant Hyperthermia: Cart, Procedure, Malignant   | STAND, BASIN, SINGLE STAND, BASIN, DOUBLE CART, PROCEDURE, MALIGNANT   | Armstrong Medical Industries  | PBL-PC-9 Basic A-Smart  |              |                    | No N                    |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 5859-047                         | Hyperthermia  5859047_Cart, Procedure, Resuscitation: Breakaway 5 Drawer (Red)  | HYPERTHERMIA  CART, PROCEDURE, RESUSCITATION   | Armstrong Medical Industries  | Premire Broselow  PBL-PC-9 Basic A-Smart  Premire Broselow                    |              |                    |                         |  |                         | _                       |   |                       |   |                  |                                 |                           |          |  |
| 5859-054<br>5868-013             | 5859054_Cart, Procedure, Resuscitation: 4 Drawer Standard Red/Red 5868013_Dispenser, Soap, Wall Mount: SD-1 AUTOMATIC SOAP DISPENSER  | CART, PROCEDURE, RESUSCITATION  SOAP DISPENSER   | Armstrong Medical Industries  GOJO Industries                       | PBL-PC-9 Basic A-Smart<br>Premire Broselow<br>Provon FMX-12/250mL             |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 5869-019                         | 5869019_Dispenser, Hand Sanitizer, Wall Mount: Dispenser, Hand Sanitizer, Wall Mount  | DISPENSER, HAND SANITIZER  | GOJO Industries   | (5160-06)  Purell NXT Maximum Capacity (2220-08)                              | у            |                    |                         |  |                         | $\dashv$                |   |                       |   |                  |                                 |                           |          |  |
| 5883-009<br>5910-003             | 5883009_Column, Service, Ceiling, Fixed: 5883009_Column, Service, Ceiling, Fixed 5910003_Table, Instrument, 20-24 Inch: Utility Table, No Drawers   | ANESTHESIA BOOM TABLE, INSTRUMENT, 20-24"  | Pedigo Products, Inc.   | SG-80-SS<br>SG-80-SS  |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ISSUE FOR:   |
| 5914-007<br>5917-048             | 5914007_Table, Instrument, 55-60 Inch: Utility Table, No Drawers 5917048_Table, Instrument, Assembly: ErgoStat CG54 Prep and Pack (Electric Standard)   | TABLE, INSTRUMENT, 55-60"  TABLE, ASSEMBLY PREP AND PACK   | Pedigo Products, Inc. STERIS Corporation                            |   |              | Yes                |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | CONSTRUCTION DOCU  |
| 5934-014<br>5934-072<br>5944-113 | 5934014_Table, Overbed, General: Overbed Table 635 5934072_Table, Overbed, General: Overbed Table 635 5944113_Table, Surgical, Major: Surgical Table  | Tuning Fortk Base with Single Thermofoil Top Tuning Fortk Base with Single Thermofoil Top TABLE, SURGICAL, MAJOR |   | Art of Care Overbed Table 635 Art of Care Overbed Table 635                   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | Revision   |
| 5975-008<br>5990-005<br>6015-142 | 5975008_Sink, Clean-up Workstation (3-Sink): Commercial Sink Flexible 5990005_Table, Utility, General Purpose: Utility Table, No Drawers 6015142_Cart, Supply, Chrome, 48 inch: 6015142_Cart, Supply, Chrome, 48 inch                           | 3 BASIN SINK TABLE, UTILITY, GEN PURPOSE   | Pedigo Products, Inc.   | SG-80-SS  |              |                    |                         | N/Δ  |                         |                         |   |                       |   |                  |                                 |                           | E        |  |
| 6018-099<br>6018-108             | 6018099_Cart, Supply, Bin Basket, Single Sided: Single Sided 6 Level Cart 6018108_Cart, Supply, Bin Basket: Double Sided 7 Level Cart   | CART, SUPPLY   |   |   |              |                    |                         | IN/C   |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6084-087<br>6088-037             | 6084087_Dispenser, Paper Towel, Surface Mount: PTD-3 PAPER TOWEL DISPENSER  6088037_Locker_Plastic_Z-Double-Tier_ASI:   | PAPER TOWEL DISPENSER  | Georgia Pacific (59498A)  ASI Storage Solutions Inc.                | enMotion Impulse 8" Automate<br>(Black) As Specified in 10 51 13              | ed           |                    |                         |  |                         | _                       |   |                       |   |                  |                                 |                           |          |  |
| 6176-032<br>6254-006             | 6088037_Locker_Plastic_Z-Double-Tier_ASI 6176032_Chair, Clinical, Blood Draw, Bariatric: Blood Draw Chair-Bariatric 6254006_Pass-thru, Window: Reliance Rack Return Module  | PASS-THRU WINDOW   | STERIS Corporation  | Amsco   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6259-041<br>6259-043             | 6259041_Cart, Case, Vertical (40 in or taller): 6259041_Cart, Case, Vertical (40 in or taller) 6259043_Cart, Case, Vertical (40 in or taller): 6259043_Cart, Case, Vertical (40 in or   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6260-010<br>6286-032             | taller) 6260010_Stand, Mayo, Foot-Operated: Stand, Mayo 6286032 Monitor, Physiologic, Bedside, Critical Care - Carescape B650: Patient  | STAND, MAYO, FOOT-OPERATED MONITOR   | PHILIPS MEDICAL SYSTEMS   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6338-134                         | Monitor-Wall 6338134_Cart Truck, Soiled Utility: 21VK49 Tilt Truck (27 cu ft/850 lb)  | SOILED LINEN CART TRUCK  | RUBBERMAID COMM. PRODUC   | TS  |              |                    |                         | N/A  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6418-070<br>6418-160             | 6418070_Bracket, Television, Wall, Flat Panel: Paramount Articulating (for 22" - 43" Displays) 6418160_Bracket, Television, Wall, Flat Panel: Paramount Articulating (for 39" - 90"   | TELEVISION BRACKET TELEVISION BRACKET  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6418-211                         | Displays) 6418211_Bracket, Television, Wall, Flat Panel, 39 75 Displays: Paramount Articulating (for 22" - 43" Displays)  | TELEVISION BRACKET   |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
| 6479-124<br>6544-006             | 6479124_Sterilizer, Steam, Recessed: Medium Steam Sterilizer - Single Sided - Not Hosted  Headwall-Vertical - Matching Clemmons: Headwall-Vertical - Matching Clemmons  | MEDIUM STEAM STERILIZER  MODULAR HEADWALL  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ISSUE: 09/15/23 DF   |
| 6584-090<br>6610-007             | 6584090_Television, 30-32 in, Flat Panel: 32 in LT572M Series Pro Centric Hospital 6610007_Waste Disposal, Surgical Fluid Disposal: Zimmer Biomet Intellicart Evac Station  | TV, WALL MOUNT SURGICAL FLUID WASTE DISPOSAL   | STRYKER INDUSTRIES  | NEPTUNE 3   |              |                    |                         | DOCKING STATION SI<br>PLUMBED TO A WATE  |                         |                         |   |                       |   |                  |                                 |                           |          | ISSUE: 09/15/23 DF<br>5/6/2024 11:23:40 AM   |
|                                  | Jacobs  |  |   |   |              |                    |                         | CONNECTION WITH A<br>OF 50 TO 120 PSI<br>DOCKING STATION CA                                | A RANGE<br>CAN BE       |                         |   |                       |   |                  |                                 |                           |          | A/E #: 1721843900  |
|                                  |   |  |   |   |              |                    |                         | CONNECTED TO EITH<br>WALL<br>OR A FLOOR DRAIN.   | HER A                   |                         |   |                       |   |                  |                                 |                           |          |  |
| 6797-007<br>6810-016             | 6797007_Cart, Anesthesia, 5 Drawer: Standard Steel Breakaway, Lock 5-Drawer (Beige/Deep Blue) 6810016_X-Ray Unit, Mobile, Digital: 6810016_X-Ray Unit, Mobile, Digital  | CART, ANESTHESIA, 5 DRAWER   | GE MEDICAL SYSTEMS  | AMX 700   |              |                    |                         | N/A  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
|                                  | 117000_Cart, Supply, Drawers: Cart, Supply, Drawers   | MOBILE BEDSIDE TABLE (2) DRAWERS   | SE MEDIONE OTOTEWO  |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | Novant ASC Lo  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | SHEET NAM  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | EQUIPMENT ACCESSORY S  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          |  |
|                                  |   |  |   |   |              |                    |                         |  |                         |                         |   |                       |   |                  |                                 |                           |          | ——————————————————————————————————————   |

| A   |  | В  | C   |   | D  |  |
|---|--|--|---|---|--|--|
|   |  |  |   | SH-1 TP-1 WD-1 WDS-AE4D   | 6897-093 7233-006 7288-011 7946-015 9101-014  9102-003  9122-026  5446040  C-182656  C-186757  C-215179  C-215969  CH-1  GB-18  GB-36  GB-42  IS-1  MH-1  MR-1  NW-1   |  |
| 1   |  |  |   | 117000_Sharps, Wall-Mount: Sharps, Wall Mount 117000_Dispenser, Toilet Paper: Dispenser-Toilet Paper  Dispenser-Wipes-Bracket.0001: Bottom Dispenser  117000_MEDS DISPOSAL: MEDS DISPOSAL, CACTUS SINK - WDS-AE4D7  | Displays)  | EQUIPMENT SCHEDULE - page 2/2  ID Family and Type 6824008_Cart, Anesthesia, Controlled Access: Anesthesia Cart |
|   |  |  |   | SHARPS CONTAINER  DISPENSER, TOILET PAPER, SURFACE MOUNT  DISPENSER, WIPES  CACTUS MEDS DISPOSAL  | (5 REFRIGERATOR, PHARMACEUTICAL, UNDERCOUNTER SAFE, DEPOSITORY SUPPLY CART  Available in bright polished stainless steel ot satin-finish stainless steel. GB-18 GB-36 GB-42  RR TA SANITARY NAPKIN   | Type Comments CART, ANESTHESIA   |
| 2   |  |  |   | Stryker Instruments   | BOBRICK BOBRICK BOBRICK BOBRICK BOBRICK BOBRICK  | 2<br>Manufacturer  |
|   |  |  |   | B-2740  Cactus Smart Sink w/ AC adapter   | B-76727 6806 6806 6806 6806 B-239 B-165 2436 B-270   | Model  |
|   |  |  |   |   |  | Purchased By Installed By Power  |
| 3   |  |  |   |   | N/A  | Emergency Power Data   |
|   |  |  |   |   |  | Plumbing   |
|   |  |  |   |   |  | Comments   |
| 4   |  |  |   |   |  | 4  |
|   |  |  |   |   |  |  |
|   |  |  |   |   |  |  |
| 5   |  |  |   |   |  | 5  |
| A   |  | B  | C   |   | D  |  |
| Novant ASC Leland  SHEET NAME  EQUIPMENT SCHEDULE CONTINUED  SHEET NUMBER  A613 | ISSUE: 09/15/23 DRAWN BY: Author 5/6/2024 11:23:43 AM  A/E #: 1721843900 | ISSUE FOR:  CONSTRUCTION DOCUMENTS  REVISIONS:  Revision Number Revision Description Revision Date | 8284 ASSET AREA STATE OF THE MARKET AND THE MARKET | This drawing and the design shown are the property of Little Diversified Architectural Consulting. The reproduction, copying or other use of this drawing without their written consent is prohibited and any infringement will be subject to legal action.  © Little 2023—  CERT. NO. 50033  CHARLOTTE, N.C. | SENDON SERVICE STREET OF THE SERVICE STREET STREE |  |

| LOOP & DACE   |  |  | 1721843900 NH ASC  | MATERIAL FINISH LEGEND                                |   |   |   | INTERIOR DESIGN GENERAL NOTES  A ALL AREAS MUST BE FIELD VERIFIED AS REQUIRED. DO NOT SCALE THE DRAWINGS.  B ALL INTERIOR FINISHES SHALL MEET REQUIREMENTS NOTED IN THE 2018 NC BUILDING CODE TABLE                             |  |
|---------------|--|--|--|---|---|---|---|---|--|
|               | DESCRIPTION  | MANUFACTURER                           |  | COLOR / FINISH  | SIZE                                    |   | CONTACT INFO REVS   | 803.11, AND SECTIONS 803 THROUGH 808. WALLS, FLOORS AND PARTITIONS IN TOILET AND BATHROOMS SHALL COMPLY WITH SECTION 1210.  C CONTRACTOR SHALL BE SOLELY RESPONSIBLE FOR THE ACCURACY OF HIS MEASUREMENTS AND                   |  |
|               | WALK OFF MAT LUXURY VINYL TILE                                       | MANNINGTON<br>COMMERCIAL<br>MANNINGTON | FRIXTION INERTIA  ACTIVE LINES BEND  | KINETIC 11360<br>FLASH ALB101                         | 24"x24"<br>5MM THICK<br>6"x36"          |   | CHIP STACK (704) 506-4907<br>CHIP.STACK@MANNINGTON.COM<br>CHIP STACK (704) 506-4907           | TOTAL YARDAGE REQUIREMENTS TO BE FURNISHED. NO REQUESTS FOR MATERIALS OR INSTALLATION EXTRAS WILL BE CONSIDERED DUE TO MEASUREMENT OR TAKEOFF ERRORS BY CONTRACTOR.   | N HE   |
|               | LUXURY VINYL TILE  | COMMERCIAL MANNINGTON                  |  | FLASH TEAL ALB102                                     | 2.5MM THICK<br>6"x36"                   | STAGGER   | CHIP.STACK@MÁNNINGTON.COM CHIP STACK (704) 506-4907   | D SUBMIT FINISH SUBMITTALS TO ARCHITECT FOR REVIEW & APPROVAL PRIOR TO ORDERING & INSTALLATION. SUBMIT ALL FINISH SAMPLES TOGETHER IN ONE SUBMITTALS PACKAGE.   |  |
|               | LUXURY VINYL TILE  | COMMERCIAL MANNINGTON                  |  | COASTAL PINE SS5W3029                                 | 2.5MM THICK<br>6"x36"                   | STAGGER   | CHIP.STACK@MÁNNINGTON.COM CHIP STACK (704) 506-4907   | E REFER TO MANUFACTURER'S INSTRUCTIONS FOR RECOMMENDED SURFACE PREPARATION & RECOMMENDED INSTALLATION METHODS OF ALL SCHEDULED MATERIALS.  F CONTRACTOR TO PROVIDE MANUFACTURER REQUIRED SUBSTRATE UNDER ALL FINISHED SURFACES. |  |
| SSV-1         | WELDED SHEET VINYL   | COMMERCIAL  MANNINGTON COMMERCIAL      | BIOSPEC MD HOMOGOENOUS SHEET   | OYSTER WHITE 15201                                    | 2.5MM THICK 2 MM THICK 6'-6" ROLLS      | EPOXY ADHESIVE REQUIRED IN ALL PRE/POST ROOMS; PACU ROOMS; OR & PROCEDURE ROOMS; LOCKER ROOMS AND ANY WET LOCATIONS                             | CHIP.STACK@MANNINGTON.COM  CHIP STACK (704) 506-4907 CHIP.STACK@MANNINGTON.COM                | G CONTRACTOR TO ENSURE THAT ALL SURFACES TO RECEIVE FINISHES ARE CLEAN, TRUE AND ANY  |  |
| SSV-2         | WELDED SHEET VINYL   | MANNINGTON                             | BIOSPEC MD HOMOGOENOUS SHEET   | NIAGARA BLUE 15407                                    | 2 MM THICK                              | EPOXY ADHESIVE REQUIRED IN ALL PRE/POST ROOMS; PACU ROOMS; OR &   |   | UNEVEN CONDITION HAVE BEEN CORRECTED. START OF WORK INDICATES APPLICATOR'S ACCEPTANCE OF SUBSTRATE.  H ALL WORK BY OTHERS SHALL BE ADEQUATELY PROTECTED AGAINST DAMAGE FROM A FINISH  | DIVERSIFIED ARCHITECTURA   |
|               |  | COMMERCIAL                             |  |   | 6'-6" ROLLS                             | PROCEDURE ROOMS; LOCKER ROOMS AND ANY WET LOCATIONS   | CHIP.STACK@MANNINGTON.COM   | MATERIAL INSTALLATION.  I REFER TO INTERIOR FLOOR AND WALL FINISH PLANS AND ELEVATIONS FOR ADDITIONAL   | DIVERSIFIED ARCHITECTURA   |
| SSV-3         | WELDED SHEET VINYL   | MANNINGTON<br>COMMERCIAL               | BIOSPEC MD HOMOGOENOUS SHEET   | MOJAVE 15525  | 2 MM THICK<br>6'-6" ROLLS               | EPOXY ADHESIVE REQUIRED IN ALL PRE/POST ROOMS; PACU ROOMS; OR & PROCEDURE ROOMS; LOCKER ROOMS AND ANY WET LOCATIONS                             | CHIP STACK (704) 506-4907<br>CHIP.STACK@MANNINGTON.COM  | INFORMATION.  J ALL DIMENSIONS ON INTERIOR DESIGN DRAWINGS ONLY ARE FROM THE FACE OF NEW GYP. BOARD WALLS TO CENTER OF DIMENSIONED OBJECT OR EDGE OF FINISH TRANSITION. UNLESS NOTED  | 615 South College Stree  |
| SSV-4         | WELDED SHEET VINYL   | MANNINGTON<br>COMMERCIAL               | BIOSPEC MD HOMOGOENOUS SHEET   | BREEZY 15522  | 2 MM THICK<br>6'-6" ROLLS               | EPOXY ADHESIVE REQUIRED IN ALL PRE/POST ROOMS; PACU ROOMS; OR & PROCEDURE ROOMS; LOCKER ROOMS AND ANY WET LOCATIONS                             | CHIP STACK (704) 506-4907<br>CHIP.STACK@MANNINGTON.COM  | OTHERWISE.  K PROVIDE CRACK SUPPRESSION AT ALL CONCRETE CONTROL JOINTS, EXPANSION JOINTS AND AT   | Charlotte, NC 2<br>T: 704.525.6  |
|               | WELDED SHEET VINYL   | MANNINGTON                             | BIOSPEC MD HOMOGOENOUS SHEET   | CHERRY TOMATO 15508                                   | 2 MM THICK                              | EPOXY ADHESIVE REQUIRED IN ALL PRE/POST ROOMS; PACU ROOMS; OR &   |   | LOCATIONS RECOMMENDED BY T.C.N.A.  L COLD AND CONTROL JOINTS SHOULD BE CRACK ISOLATED THREE TIMES THE WIDTH OF THE TILE. PROVIDE SOFT JOINTS ON EITHER SIDE. TRUE EXPANSION JOINTS SHOULD BE HONORED THROUGH                    | www.littleonl  |
|               | RED FLOOR @ RESTRICTED AREA & EQUIPMENT PORCELAIN TILE               | COMMERCIAL                             | REMINISCENT COLOR BODY PORCELAIN   | AGED BEIGE RM21                                       | 6'-6" ROLLS<br>12"x 24"                 | PROCEDURE ROOMS; LOCKER ROOMS AND ANY WET LOCATIONS  MUST USE "SINGLE SOURCE SUPPLY" FOR GROUT AND SETTING                                      | CHIP.STACK@MÁNNINGTON.COM  JONATHAN STUDIOSO (704) 516-6310                                   | THE TILE INSTALLATION AS REFERENCED BY THE T.C.N.A. EJ171 MOVEMENT JOINT GUIDELINES FOR CERAMIC, GLASS AND STONE. USE SCHLUTER DILEX AKSN (ALUMINUM).   | This drawing and the design sho<br>of Little Diversified Architecture  |
|               | @ SINGLE TOILET LOCATIONS  |  |  |   | 5/16" THICK                             | MATERIALS. STACKED BRICK INSTALLATION.  | JONATHAN.STUDIOSO@DALTILE.COM   | M ALL TILE FLOORING SELECTIONS, PATTERNS, GROUT JOINTS, BASE AND BULLNOSE TO BE COORDINATED WITH, SELECTED & APPROVED BY LITTLE.  | reproduction, copying or other without their written consent is joint infringement will be subject   |
|               | PORCELAIN TILE  @ CHANGING/SHOWER ROOM  RUBBER BASE                  | DALTILE<br>JOHNSONITE                  | REMINISCENT GLAZED CERAMIC  MILLWORK BASE: MW-283-F6 REVEAL  | AGED BEIGE RM21 TOAST #283                            | 2" x 2" MOSAIC<br>1/4" THICK<br>6" HIGH | MUST USE "SINGLE SOURCE SUPPLY" FOR GROUT AND SETTING MATERIALS.  6" BASE REQUIRED IN RESTROOMS   | JONATHAN STUDIOSO (704) 516-6310<br>JONATHAN.STUDIOSO@DALTILE.COM<br>ANA DIMEO (704) 441-4101 | N EPOXY GROUT TO BE USED IN ALL TILE FLOOR LOCATIONS. O CONTINUE FLOORING MATERIAL AS SCHEDULED UNDER CASEWORK. P SUBMIT CARPET, TILE AND SHEET VINYL SEAMING DIAGRAMS TO LITTLE FOR REVIEW AND APPROVAL                        | © Little 202   |
|               | RUBBER BASE<br>@ WAITING & PRE/POST/PACU PATIENT<br>AREAS            | JOHNSONITE                             | MILLWORK BASE: MW-283-F6 REVEAL  | TOAST #283  | o" HIGH                                 | 6 BASE REQUIRED IN RESTROOMS  | ANA DIMEO (704) 441-4101<br>ANA.DIMEO@TARKETT.COM   | PRIOR TO ORDERING & INSTALLATION.  Q WHERE FLOORING TYPES CHANGE OR WHERE FLOORING MATERIAL STYLES CHANGE USE ADA   | ARCHITECTURAL CHITECTURA   |
|               | RUBBER BASE<br>@ ADMIN AREAS   | JOHNSONITE                             | TRADITIONAL  | TOAST #283  | 4" HIGH<br>CONTINUOUS ROLL              |   | ANA DIMEO (704) 441-4101<br>ANA.DIMEO@TARKETT.COM   | COMPLIANT TRANSITION STRIPS UNLESS NOTED OTHERWISE.  R FEATHER FLOORING AS REQUIRED ENSURING A LEVEL ADA COMPLIANT TRANSITION BETWEEN MATERIALS OF VARYING THICKNESS. TRANSITION BETWEEN MATERIALS OF VARYING THICKNESS.        | EL DE RECIVITECTUR,  |
|               | RUBBER BASE<br>@ LOCKER ROOM   | JOHNSONITE                             | TRADITIONAL  | TOAST #283  | 6" HIGH<br>CONTINUOUS ROLL              |   | ANA DIMEO (704) 441-4101<br>ANA.DIMEO@TARKETT.COM   | TRANSITION FINISHES AT CENTER OF DOOR IF POSSIBLE. COORDINATE LOCATIONS WITH ARCHITECT.  S ALL INTERIOR DOOR FRAMES ARE TO BE PAINTED SEMI GLOSS FINISH (PS 2) EXCEPT WHERE NOTED.  | 10 31 CERT. NO 50033   |
|               | FLASH COVE BASE<br>@ ALL OPERATING ROOMS &<br>PROCEDURE ROOMS        | MANNINGTON<br>COMMERCIAL               | BIOSPEC MD HOMOGOENOUS SHEET   | OYSTER WHITE 15201                                    | 6" HIGH                                 |   | CHIP STACK (704) 506-4907<br>CHIP.STACK@MANNINGTON.COM  | T PE, PF, PS, EP SAME PAINT COLOR JUST DIFFERENT FINISH   | CHARLOTTE.   |
| ORB           | PORCELAIN TILE BASE @ SINGLE TOILET LOCATIONS                        | DALTILE                                | REMINISCENT COLORBODY COVE BASE P-36C9T  | AGED BEIGE RM21                                       | 6"x12"                                  | MUST USE "SINGLE SOURCE SUPPLY" FOR GROUT AND SETTING MATERIALS.  | JONATHAN STUDIOSO (704) 516-6310<br>JONATHAN.STUDIOSO@DALTILE.COM                             | U ALL WALLS TO BE PAINTED AN EGGSHELL FINISH, UNLESS NOTED OTHERWISE.  V ALL TRIM TO BE PAINTED A SEMI-GLOSS FINISH, UNLESS NOTED OTHERWISE.  | CHARLOTTE  |
| ALLS          |  |  |  |   |   |   |   | W EPOXY PAINT TO BE USED IN RESTROOMS AND WET AREAS AS NOTED ON ROOM FINISH SCHEDULE.  X ALL CEILINGS TO BE PAINTED A FLAT FINISH, UNLESS NOTED OTHERWISE.  |  |
|               | DESCRIPTION BRANDING WALL COLOR                                      | MANUFACTURER SHERWIN WILLIAMS          | LOW VOC / SCRUBBABLE   | COLOR / FINISH  AUBERGINE PANTONE C-269               | IMAGE                                   | REMARKS / INSTALLATION METHOD  EGGSHELL   | CONTACT INFO REVS  STEVE GOODE (980) 207-9410   | Y ALL ACCESS PANELS (WALL AND CEILING) TO BE PAINTED TO MATCH ADJACENT FINISH.  Z ALL SURFACES OR ELEMENTS THAT ARE SPECIFIED TO RECEIVE PAINT ARE TO HAVE (1) PRIME COAT &   | C minimum  |
| , , ,         |  |  |  | CUSTOM SHERWIN WILLIAMS<br>FORMULA                    |   |   | STEVEN.R.GOODE@SHERWIN.COM  | (2) FINISH COATS, UNLESS NOTED OTHERWISE.  BB SEE REFLECTED CEILING PLANS FOR CEILING HEIGHTS, TYPES AND MORE INFORMATION.  | ENGLISHED ARC  |
| , , ,         | GENERAL WALL COLOR FIELD COLOR THROUGHOUT DOOR / WINDOW FRAME & TRIM | SHERWIN WILLIAMS SHERWIN WILLIAMS      | LOW VOC / SCRUBBABLE  LOW VOC / SCRUBBABLE   | SW 9166 DRIFT OF MIST SW 9166 DRIFT OF MIST           |   | EGGSHELL (EPOXY IN WET LOCATIONS)  SEMI GLOSS   | STEVE GOODE (980) 207-9410<br>STEVEN.R.GOODE@SHERWIN.COM<br>STEVE GOODE (980) 207-9410        | CC BASE IN TOILETS TO BE 6" HIGH, TYPICAL.  DD FINISH COLORS HAVE NOT BEEN APPROVED BY OWNER. OBTAIN SIGN OFF APPROVAL PRIOR TO ORDERING ANY FINISH MATERIALS.  | 8284   |
|               | CEILING COLOR  |  | LOW VOC / SCRUBBABLE  LOW VOC / SCRUBBABLE   | SW 7006 EXTRA WHITE                                   |   |   | STEVE GOODE (980) 207-9410<br>STEVEN.R.GOODE@SHERWIN.COM<br>STEVE GOODE (980) 207-9410        |   | MA COTTE   |
|               | ACCENT (LIGHT BLUE)  | SHERWIN WILLIAMS                       | LOW VOC / SCRUBBABLE   | SW 7613 AQUA -SPHERE                                  |   | EGGSHELL (EPOXY IN WET LOCATIONS)   | STEVEN.R.GOODE@SHERWIN.COM STEVE GOODE (980) 207-9410   |   | 5/06/24  |
| E,PF,PS,EP 5  | ACCENT (DK BLUE)   | SHERWIN WILLIAMS                       | LOW VOC / SCRUBBABLE   | SW 7612 MOUNTAIN STREAM                               |   | EGGSHELL (EPOXY IN WET LOCATIONS)   | STEVEN.R.GOODE@SHERWIN.COM  STEVE GOODE (980) 207-9410 STEVEN.R.GOODE@SHERWIN.COM             |   |  |
| E,PF,PS,EP 6  | ACCENT (GRAY)  | SHERWIN WILLIAMS                       | LOW VOC / SCRUBBABLE   | SW 7044 AMAZING GRAY                                  |   | EGGSHELL (EPOXY IN WET LOCATIONS)   | STEVE GOODE (980) 207-9410<br>STEVEN.R.GOODE @SHERWIN.COM                                     |   |  |
| E,PF,PS,EP 7  | ACCENT (GOLD)  | SHERWIN WILLIAMS                       | LOW VOC / SCRUBBABLE   | SW 7685 WHITE RAISIN                                  |   | EGGSHELL (EPOXY IN WET LOCATIONS)   | STEVE GOODE (980) 207-9410<br>STEVEN.R.GOODE@SHERWIN.COM                                      |   |  |
| EILING        |  |  |  |   |   |   |   |   |  |
| CT-1          | DESCRIPTION ACCOUSTICAL CEILING                                      | MANUFACTURER ARMSTRONG                 | TYPE: ULTIMA HEALTH ZONE HIGH NRC 15"16" BEVELED TEGULAR, ITEM NO. 1447 FOR INTERFACE WITH PRELUDE   | COLOR / FINISH WHITE                                  | <b>SIZE</b> 24" X 24" X 3/4"            |   | CONTACT INFO REVS ALINA POPLIN (980) 419-3795   | ID ABBREVIATIONS  |  |
|               | PUBLIC   |  | XL 15"/16" SUSPENSION SYSTEM, NRC=0.80 / CAC=35, FLAMMABILITY RATING: CLASS A  |   |   |   | APOPLIN@ARMSTRONGCEILINGS.COM   | ACT ACOUSTICAL CEILING TILE  BG BED BUMPER GUARDS   |  |
|               | ACOUSTICAL CEILING<br>RESTRICTED AREA                                | ARMSTRONG                              | TYPE: ULTIMA HEALTH ZONE HIGH NRC 15"/16" SQUARE, ITEM NO. 1445 FOR INTERFACE WITH PRELUDE XL 15"/16" SUSPENSION SYSTEM, NRC=0.80 / CAC=35, FLAMMABILITY RATING; CLASS A |   | 24" X 24" X 3/4"                        |   | ALINA POPLIN (980) 419-3795<br>APOPLIN@ARMSTRONGCEILINGS.COM                                  | CC CUBICLE CURTAINS  CG CORNER GUARD  |  |
| -             | ACOUSTICAL CEILING<br>BOH (BACK OF HOUSE / STAFF)                    | ARMSTRONG                              | TYPE: ULTIMA HIGH NRC 15"/16" SQUARE LAY IN, ITEM NO. 1940 FOR INTERFACE WITH PRELUDE 15"/16" SUSPENSION SYSTEM, NRC=0.80 / CAC=35, FLAMMABILITY RATING: CLASS A         | WHITE   | 24" X 24" X 3/4"                        |   | ALINA POPLIN (980) 419-3795<br>APOPLIN@ARMSTRONGCEILINGS.COM                                  | EP EPOXY PAINT EGGSHELL FINISH  |  |
| ILLWORK<br>AG | DESCRIPTION  | MANUFACTURER                           | COLLECTION / ITEM PRODUCT / MODEL NUMBER   | COLOR / FINISH  | SIZE                                    | REMARKS / INSTALLATION METHOD   | CONTACT INFO REVS   | FC FLASH COVE BASE  |  |
|               | PLASTIC LAMINATE<br>@PATIENT / PUBLIC AREAS                          | FORMICA                                | NATURAL GRAIN  | SILVER RIFTWOOD 6413-NG                               |   | VERTICAL SURFACES   | SHERI REID (704) 534-7300<br>SHERI.REIF@FORMICA.COM   | G GROUT GYP GYPSUM BOARD  | ISSUE FOR:   |
|               | PLASTIC LAMINATE  @ BOH STAFF AREAS                                  | WILSONART                              |  | HANDSPUN CHESTNUT 5036-38<br>FINE VELVET FINISH       |   | VERTICAL SURFACES   | JES DUFRESNE (919) 606-1514<br>JDUFRESNE@WEB-DON.COM  | PLAM PLASTIC LAMINATE  LVT LUXURY VINYL TILE  | CONSTRUCTION DOC   |
|               | SOLID SURFACE SOLID SURFACE  | CORIAN WILSONART                       | GC TO PROVIDE NATIONAL REGISTRATION # C-0014-1650  SOLID SURFACE   | ARTISTA CANVAS  TUMBLED STONE 9220CE                  |   | WORKSURFACE TOPS TRANSACTION TOPS   | BARBARA DAVIS (800) 642-2246<br>BDAVIS@HLLMARK.COM<br>JES DUFRESNE (919) 606-1514             | PE PAINT EGGSHELL   | REVISIONS:   |
| ISCELLANEOUS  | OOLID CONTACE  | WILCONAIN                              | GOLID GOLLI AGE  | TOWNSELD OF ONE 32200E                                |   | TO T  | JDUFRESNE@WEB-DON.COM   | PF PAINT FLAT PORB PORCELAIN BASE   | B Number Revision Description  |
|               | DESCRIPTION  | MANUFACTURER                           | COLLECTION / ITEM PRODUCT / MODEL NUMBER   | COLOR / FINISH  | SIZE                                    | REMARKS / INSTALLATION METHOD   | CONTACT INFO REVS   | PORF PORCELAIN FLOOR PS PAINT SEMI GLOSS  |  |
| -1            | GROUT  | MAPEI                                  | KERAPOXY CQ  | 5042 MOCHA  |   |   | TIM IRVIN (336) 682-6725<br>TIRVIN@MAPEI.COM  | RB RUBBER BASE  |  |
|               | WALL PROTECTION FIELD COLOR WHITE                                    | CS ACROVYN                             |  | #934 PEARL  | 0.060"<br>4'-0" SHEETS                  | WHERE BASE IS 6" HIGH, WALL PROTECTION WILL TOP OUT AT 4'-6" +/- A.F.F.   | BRIAN@SPECPRO.ÚS  | SH SHADES SSM SOLID SURFACE MATERIAL  |  |
|               | WALL PROTECTIION ACCENT COLOR BLUE WALL PROTECTION                   | CS ACROVYN  CS ACROVYN                 |  | #848 ASPEN  #929 OYSTER GRAY                          | 0.060"<br>4'-0" SHEETS<br>0.060"        | WHERE BASE IS 6" HIGH, WALL PROTECTION WILL TOP OUT AT 4'-6" +/- A.F.F. WHERE BASE IS 6" HIGH, WALL PROTECTION WILL TOP OUT AT 4'-6" +/- A.F.F. | BRIAN@SPECPRO.ÚS  | TR TRANSITION STRIP WP WALL PROTECTION  |  |
| P-4           | ACCENT COLOR TAN WALL PROTECTION                                     | CS ACROVYN  CS ACROVYN                 |  | #1526 BALTIC BLUE                                     | 4'-0" SHEETS<br>0.060"                  |   | BRIAN@SPECPRO.ÚS  BRIAN FOSTER (704) 620-1386   | WSSV WELDED SEAM SHEET VINYL  |  |
|               | ACCENT COLOR BLUE BED BUMPER GUARDS                                  | CS ACROVYN                             |  | #848 ASPEN  | 4'-0" SHEETS (2) EACH ROOM              | (2) EACH ROOM. GC TO COORDINATE WITH OWNER LOCATION AND   | BRIAN@SPECPRO.ÚS BRIAN FOSTER (704) 620-1386  | WOM WALK OFF MAT  |  |
|               | 90 DEGREE CORNER GUARDS WALL<br>PROTECTION                           | CS ACROVYN                             | SM-20N   | CG-1 = #934 PEARL<br>CG-1B = #1526 BALTIC BLUE        | 4" X 1'-6"<br>3" LEG<br>FULL HEIGHT     | MOUNTING HEIGHT PRIOR TO INSTALLATION.  REGRIND PETG RETAINER   | BRIAN@SPECPRO.US  BRIAN FOSTER (704) 620-1386 BRIAN@SPECPRO.US                                |   |  |
| G-1T<br>G-1C  | 90 DEGREE CORNER GUARDS WALL   | CS ACROVYN                             |  | CG-1T = #929 OYSTER GRAY  CLEAR                       | 3" LEG                                  | REGRIND PETG RETAINER   | BRIAN FOSTER (704) 620-1386   |   |  |
| G-2           | PROTECTION  END WALL CORNER GUARDS WALL                              | CS ACROVYN                             | SSM-25AN WITH SHEET BACKER CUT TO SIZE   | CG-2 = #934 PEARL                                     | 8'-0' HIGH<br>2" LEG                    | ALUMINUM RETAINER   | BRIAN@SPECPRO.ÚS BRIAN FOSTER (704) 620-1386  |   |  |
| G-2T          | PROTECTION  120 DECREE CORNER CHARDS WALL                            | CC ACRONAL                             | SM 20MN CLISTOM ANGLE  | CG-2B = #1526 BALTIC BLUE<br>CG-2T = #929 OYSTER GRAY | FULL HEIGHT                             | DECDIND DETC DETAINED   | BRIAN EOSTER (704) 620 1286   |   |  |
|               | 120 DEGREE CORNER GUARDS WALL PROTECTION  150 DEGREE CORNER GUARDS   | CS ACROVYN  CS ACROVYN                 | VERIFY ANGLE PRIOR TO ORDERING   | #934 PEARL<br>#934 PEARL                              | 3" LEG<br>FULL HEIGHT<br>3" LEG         | REGRIND PETG RETAINER  REGRIND PETG RETAINER  | BRIAN FOSTER (704) 620-1386<br>BRIAN@SPECPRO.US<br>BRIAN FOSTER (704) 620-1386                |   | ISSUE: 09/15/23 [  |
| G-5           | WALL PROTECTION  END WALL CORNER GUARDS WALL                         | CS ACROVYN                             | VERIFY ANGLE PRIOR TO ORDERING   | #934 PEARL  | FULL HEIGHT 2" LEG                      | ALUMINUM RETAINER. CUT TO MATCH WALL SHEET INSTALL HEIGHT.  | BRIAN@SPECPRO.ÚS BRIAN FOSTER (704) 620-1386  |   | 5/6/2024 11:23:46 AM   |
| 9-6           | PROTECTION  90 DEGREE CORNER GUARDS WALL PROTECTION                  | CS ACROVYN                             |  | #934 PEARL  | 3" LEG                                  |   | BRIAN@SPECPRO US  BRIAN@SPECPRO US  |   | A/E #: 1721843900  |
|               | INTERIOR DOOR FINISH   | MARSHFIELD                             | WHITE BIRCH / VENEER CUT: PLAIN SLICED   | TBD   |   |   | BRIAN@SPECPRO.US  ED BULLARD (608) 345-8087  DESIGNMANAGER@MASONITE.COM                       |   |  |
|               | CUBICAL CURTAINS   | INPRO                                  | SHEILD BY PANEZ  | SURF CREST  | 72"W RAILROADED                         |   | ALEXIS CAPPS (704) 456-5568<br>ACAPPS@INPROCORP.COM   |   |  |
| HADES         | SHADES   | SWF OR EQUAL                           | CROSSHATCH R100  | 1% OPENNESS<br>COLOR: TBD                             | VARIES SEE PLANS                        | GC PURCHASED AND INSTALLED  | WHITLIE NOCK (704) 439-6238<br>WHITLIE.NOCK@SPRINGSWINDOWFASHIONS.COM                         |   |  |
|               |  |  |  |   |   |   | <u> </u>  |   |  |
|               |  |  |  |   |   |   |   |   | Novant ASC I   |
|               |  |  |  |   |   |   |   |   |  |
|               |  |  |  |   |   |   |   |   | FINISH MATERIA   |
|               |  |  |  |   |   |   |   |   |  |
|               |  |  |  |   |   |   |   |   |  |
|               |  |  |  |   |   |   |   |   | SHEET NUMI   |
|               |  |  |  |   |   |   |   |   | The second secon |

